
08 - Electrical / 8L - Lamps and Lighting / Lamps/Lighting - Exterior / UNIT, Headlamp / Removal and Installation

HEADLAMP UNIT


REMOVAL AND INSTALLATION

REMOVAL

- 1. Disconnect and isolate the negative battery cable(s) (Refer to 08 Electrical/Battery System/Standard Procedure).
- 2. Remove the grille (Refer to 23 Body/Exterior/GRILLE/Removal and Installation).
- 3. Remove the fasteners (1).

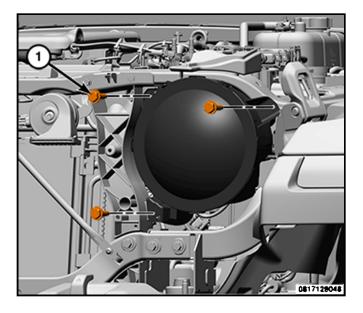


4. Remove the headlamp unit (1) and disconnect the wire harness connectors (2).

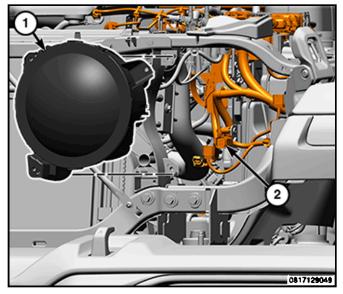

INSTALLATION

- 1. Position the headlamp unit for installation.
- 2. Connect the wire harness connectors (2) and install the headlamp unit (1).

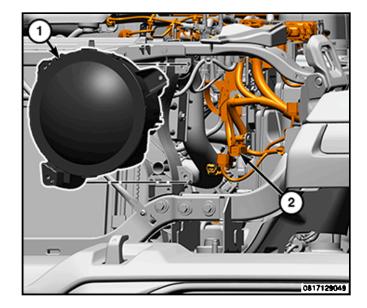

- Install and securely tighten the fasteners (1).
 Install the grille <u>(Refer to 23 Body/Exterior/GRILLE/Removal and Installation)</u>.
- 5. Connect the negative battery cable(s) (Refer to 08 -Electrical/Battery System/Standard Procedure).

