

MODEL #110 SUPER LARGE CALENDAR ALARM CLOCK

2018 USER'S MANUAL

1. SETTING TIME AND CALENDAR

- PRESS **SET**: YEAR starts flashing. Use number buttons to set year. (so for year 2018 press 2018) Press **SET** again and the MONTH setting is flashing. Use number buttons to set the MONTH. (i.e. June is 06) Press **SET** again and the DAY is flashing. Use number buttons to set the DAY. Press **SET** again and the TIME setting is flashing. Use number buttons to set the HOUR and press **SET** again to set the MINUTES
- PRESS **EXIT** at any time to store changes made
- You can also use **up** or **down** arrows to increase or decrease numbers.

SETTING THE 12 HOUR/24 HOUR FORMAT

Press the "**12/24**" button on the remote in the normal time display .When the 24 hour system is set the AM/PM buttons will not light.

TO STORE TIME EXACTLY WITH SECONDS

Use a reference clock with hours minutes seconds for accuracy such as a cell phone. For example if you are setting the time at 3.59 pm then press "**CLOCK**" on remote--hours will be flashing- set hour at 3 press set and MINUTES will be flashing. Set the minutes at 58 and do not exit or press set immediately-leave it flashing. Using your cell phone wait until the cell phone shows 58 seconds and then press the UP arrow on remote and then EXIT button immediately and the clock will be synchronized to the cell phone at 3.59

2. ALARMS

There are 16 alarms. Each alarm can be accessed by pressing F1, F2, F3 etc.

Press **F1** and the HOUR is flashing, SET AM or PM by pushing the "**12/24**" button. Use number buttons to set the HOUR press **SET** again and MINUTES are flashing. Use number buttons to set MINUTES and press **SET** again then press **UP** arrow to turn alarm on or press **DOWN** arrow to turn alarm off. When any alarm is set to "ON" the alarm icon will appear in right hand corner of the display. When the alarm is OFF :— — is showing. To CANCEL any individual alarm press the appropriate **F button** then press **SET** twice and when you see ON then press the down arrow to turn the alarm off.

TO STOP ANY ALARM WHILE SOUNDING PRESS OK AND THE BEEPING WILL STOP

TO CANCEL ALL ALARMS.

Press **F1** and then press **RESET** button and all alarms will be CANCELLED and turned OFF

SETTING HOURLY ALARM:

The icon at top right lights when this alarm is on. This alarm sounds in addition to regular alarms and will not sound between 9pm and 7am

In normal display mode, PRESS **EXIT** to turn on/off hourly alarm. When the function is on, the clock will sound the alarm every hour at .00mins. Such as 1:00,2:00,3:00,4:00...11:00,12:00. The hourly alarm icon, the TOP button on the right, lights when this function is on.

3. MANUAL SETTINGS

The setting functions are the same as the remote control above.

In normal display press **DOWN** button to access alarms and 01 is showing press **SET** to change settings using **UP** or **DOWN** buttons. After setting alarm to ON or OFF press **SET** again and 02 alarm shows and repeat the setting for all alarms.

In normal display press **UP** key to change 12/24 hour setting

In normal display press **EXIT** to turn the hourly alarm ON