

MODEL #107

GIANT 8" NUMERAL WALL CLOCK

2018 USER'S MANUAL

BUTTON A: SET / MOVE

(1) ENTER THE MODE OF TIME SETTING.

(2) AFTER SETTING ONE NUMBER, PRESS THE BUTTON TO ACTIVATE THE NEXT NUMBER

BUTTON B: INCREASES THE NUMBER VALUE WHEN FLASHING

INCREASES THE FLASHING NUMBER UNTIL THE REQUIRED NUMBER IS REACHED

BUTTON B: IN NORMAL DISPLAY PRESS THIS BUTTON TO CHANGE 12/24 HR FORMAT

BUTTON C: SAVE: COMPLETE SETTING AND RETURN TO THE NORMAL DISPLAY

FUNCTION EXAMPLE: 10:52AM

STEP 1: Press the button "A", "hour" flashes,
Then press the button "B", adjust the value "10AM".

STEP 2: Press the button "A", "minute" flashes,
Then press the button "B", adjust the value "52".

STEP 3: Press the button "C", the clock works.

REMARKS: THE BUTTON OF "A" "B" "C" ON REMOTE CONTROLLER ARE THE SAME AS THE ABOVE.