

MODEL # XL-124W

2021 USER'S MANUAL

1. FUNCTIONS

- Time (GPS / Satellite)
- Temperature (Celcius / Farenheit)
- Date

2. INSTRUCTIONS

- **12/24** switches the time format from 12hrs to 24hrs.
- **F/C** switches the temperature display from degrees Fahrenheit to degrees Celcius.
- **Fix** Displays time, date and temperature in a rotating sequence.
- **B** When the rotating sequence is activated, the B button allows to manually display time, date or temperature. When the rotating sequence is off, pressing B will change the rotating data from day/time/temperature to year/month.
- **EXIT** In setting mode, press this button to exit and save the setting
- **SET** Press this button to enter the editing mode, first the year flashes, use the keypad to change digit values. Use the same procedure to set the date, time and time zone. When editing is completed, press the exit button to exit and save.
- **DST** In time mode, press this button to activate daylight savings
- 0-9 Keypad

3. NOTES

- The clock's time will auto sync via GPS when power on. During the initial setup synchronizing can take up to 5mn.
- When the clock is powered up, If the remote does not immediately connect to the clock, press the **SET** and **R** buttons at the same time for 15s.

4. REMOTE

