

Rhythm




Key Functions

- **Inside Motor** – 7 vibration modes
- **Outside Motor** – 7 vibration modes
- **Music Mode** – 2 sensitivity levels
- **Waterproof**
- **USB Rechargeable**
- **Average use time 3 hours from a single 3 hour charge.**

Control Panel



Instructions

To switch On – Press and Hold  for 4 seconds.

To start the Inside Motor – Press **Inside**.
Each subsequent press changes the vibration mode.

To start the Outer Motor – Press **Outside**.
Each subsequent press changes the vibration mode.

To start Music Mode – Press **Music**.
The massager will now vibrate to the beat of the noise in the background or your every groan.

A second press of the music button will increase the sensitivity level of the Microphone.

To switch Off – Press and Hold  for 4 seconds.