


# Beretta Exclusive C 35 & 42 with radiators only

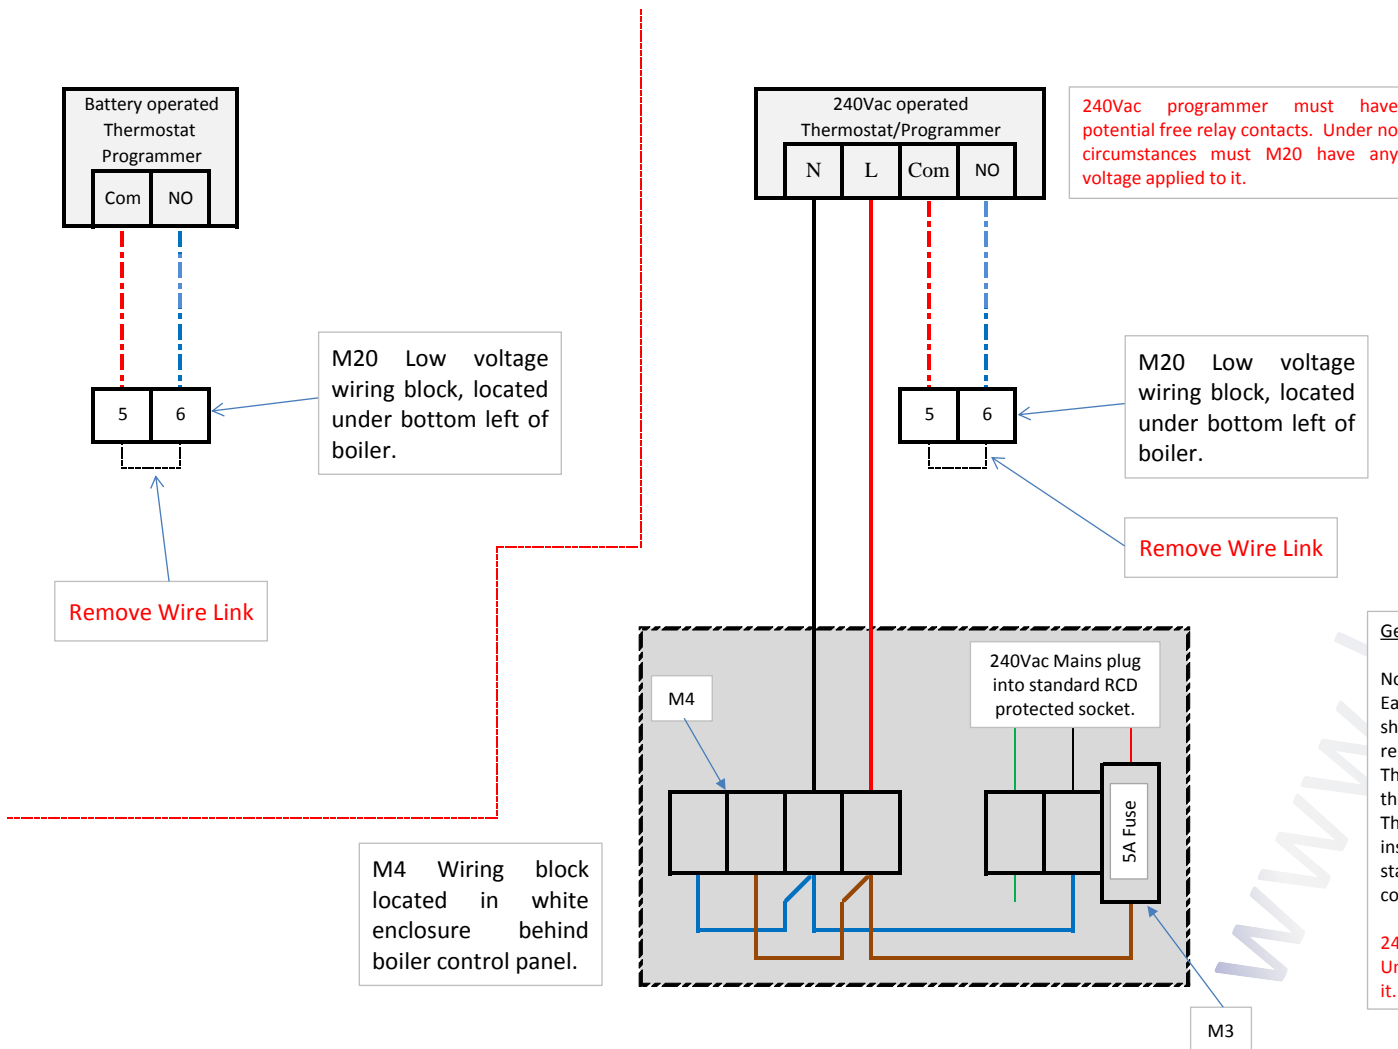

240Vac programmer must have potential free relay contacts. Under no circumstances must M20 have any voltage applied to it.

M20 Low voltage wiring block, located under bottom left of boiler.

Remove Wire Link

M20 Low voltage wiring block, located under bottom left of boiler.

Remove Wire Link

M4 Wiring block located in white enclosure behind boiler control panel.

**Generic Diagrams**

Notes:-  
 Earth wires are not shown for clarity. Terminal wire colours shown improve clarity of the schematic, these do not necessarily relate to the wire colour actually used.  
 The installer is to verify that all wiring meets current code for the location.  
 This diagram is for guidance only and suitability for a specific installation must be checked by the installing contractor prior to starting work since connections vary depending upon the components used.

240Vac programmer must have potential free relay contacts. Under no circumstances must M20 have any voltage applied to it.

www.eatig.co.nz