


## Vokera Vision S with UFH and HW

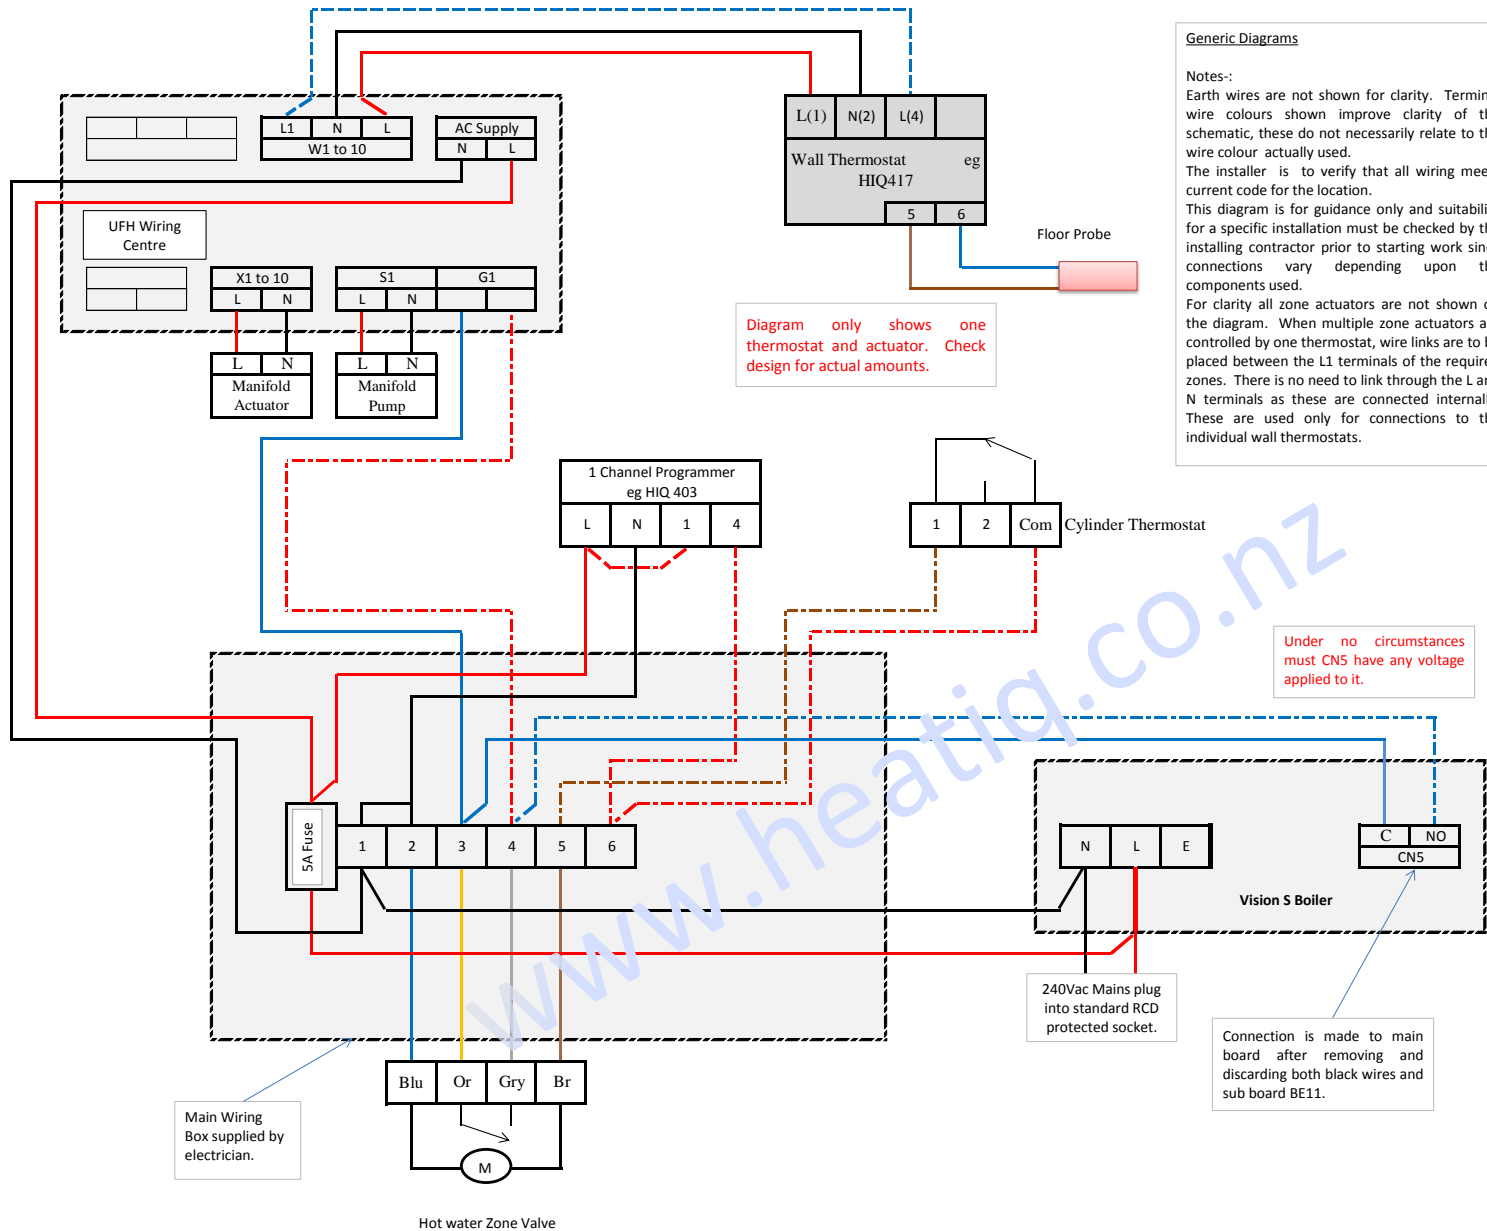

**Generic Diagrams**

Notes:-  
 Earth wires are not shown for clarity. Terminal wire colours shown improve clarity of the schematic, these do not necessarily relate to the wire colour actually used.  
 The installer is to verify that all wiring meets current code for the location.  
 This diagram is for guidance only and suitability for a specific installation must be checked by the installing contractor prior to starting work since connections vary depending upon the components used.  
 For clarity all zone actuators are not shown on the diagram. When multiple zone actuators are controlled by one thermostat, wire links are to be placed between the L1 terminals of the required zones. There is no need to link through the L and N terminals as these are connected internally. These are used only for connections to the individual wall thermostats.

Diagram only shows one thermostat and actuator. Check design for actual amounts.

Under no circumstances must CNS have any voltage applied to it.

240Vac Mains plug into standard RCD protected socket.

Connection is made to main board after removing and discarding both black wires and sub board BE11.