



E8.2RF Room Thermostat Controller

The display shown on the right is an indication of all the symbols available on this touch screen controller and below is an explanation of each for reference.

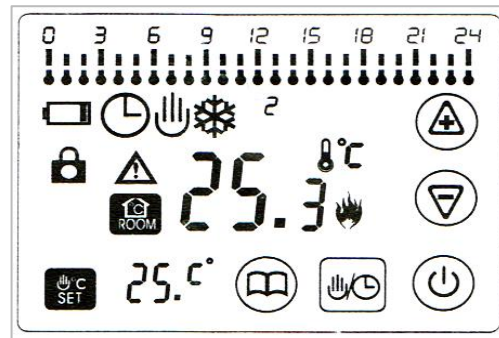

- | | | | |
|--|--------------|--|-------------|
| | On/Off | | Low Battery |
| | Increase | | Prog Mode |
| | Decrease | | Manual Mode |
| | Mode / Clock | | Anti Frost |
| | Menu | | Key Lock |
| | Heating On | | Error |

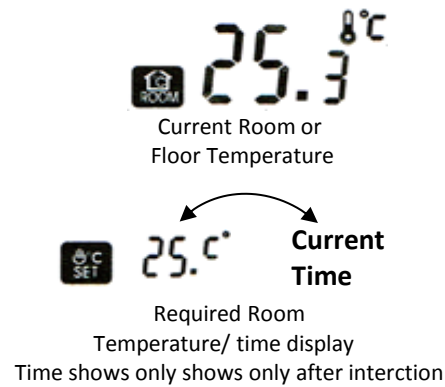

24hr events, Setback and Comfort settings.
ie 0 to 24 is one whole day and night.

Showing setback between midnight and 6am.

Showing full comfort setting between 6 and 12am.

Basic operation

Switch the unit on/off by pressing the key once.

Manual mode is accessed by switching the unit on, if the symbol is not showing then press once. You can raise and lower the required temperature of the room by using these buttons.





Schedule mode is accessed by switching the unit on, if the symbol is not showing then press once. You are now in programme mode and the system will operate automatically to the selected schedule.


Adjusting the clock and date is done by pressing and holding down the button for six seconds until the clock starts flashing. Using the you can now adjust the minutes, press the again to go onto the hours, then adjust as required. Press again to select the day of the week and adjust. When you have entered the day of the week, the next press of will save your settings and exit.






Setting a schedule with Setback and Comfort

Comfort = Your preferred temperature when occupied.
Setback = A setting no lower than 4 degrees below Comfort setting.
(The setback setting is the optimum range for efficiency)

There are six factory programmes that you can choose or you can set your own programme on P7.

1. Press and hold the  button for around six seconds until P with a number appears. These are the factory preset programmes that can be selected. You can scroll through these, choose your factory programme or select P7.
2. Now press  to set the Comfort temperature (PHi) you require by using the buttons.
3. Now press  to set the Setback temperature (PLo) you require by using the buttons.
4. Now press  to return to selected programme.

If you are setting P7 (your own schedule) then continue to stage 5. If not then press  once to save and exit.




5. Press and hold the  button for six seconds until two digits show in the display.
6. Now select the day you wish to schedule by pressing the  button. Note every day can be different.
7. It is now possible to add or remove time periods in the comfort range by pressing the   buttons.
8. Press the  button to save your settings and return to the main menu.

Frost setting and keypad lock

Frost setting

These controllers provide a frost setting that brings on the heating if the room temperature goes below 5 degree's. Refer to advanced setup guide to change these parameters if required.

Keypad lock

This controller has a keypad lock to avoid accidental changing by children etc.. To activate press and hold   buttons until a  appears. Press and hold again to de-activate.