


Internal detail AS 10/15V Inverter HPs

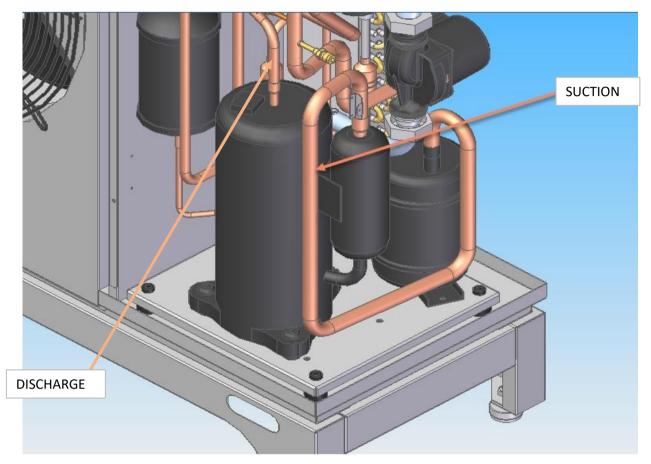

Is the 4 way valve sticking: Diagnosis

Operating normally the suction line will normally be around 5-8 degrees, when ambient air is around 9-15 degrees.

If it is getting hot the four way valve shuttle could be stuck in the wrong position. allowing gas back to the compressor rather than via the condensor and evaporator coil