

STROBEPRO[®]

XT ^{TTL}
N and **XR** ^{TTL}
N

User Manual

Ver. 1.0

Table of contents

Works With	3
Quick Start	3
Connect to X60N	4
Connect to X60M	5
Connect to X600ii	6
Connect using XRN	7
Connect via PC Sync	8
Trigger and Control	9
Setting Custom Function (C.Fn) ...	10
Shutter Release Function	11
Technical Data	12

For your safety

To prevent damage to your product or injury to you or to others, read the following safety precautions in their entirety before using this device. Failure to observe the precautions listed in this section could result in damage to the product.

- ▲ Do not disassemble or modify
- ▲ Keep dry
- ▲ Do not handle with wet hands or immerse in or expose to water or rain
- ▲ Do not use in the presence of flammable gas
- ▲ Keep out of reach of children
- ▲ Turn off the transceiver immediately in the event of malfunction
- ▲ Do not expose to high temperature
- ▲ Do not leave the device in a closed vehicle in the sun or in other areas subject to high temperature
- ▲ Observe precautions when handling batteries

X60 ^{TTL} ^NX600ii ^{HSS} ^M

Works with

X60 ^MA Nikon compatible
speedliteA strobe equipped with
PC Sync plug

1 Install 2 AA
batteries
(Eneloop
Recommended)



3 Turn on the
auto focus
assist beam
if needed

Quick Start

2 Turn on
the device

4 Select channel
number



Press the CH
button once

Select a number
using the Select
Dial then press
CH button to
confirm.









1 Turn on your X600ii speedlite



2 Press the wireless selection button once

You should be able to see the wireless symbol

Connect to
X600ii ^{HSS} M

3

To select the channel number

Hold the Group/Channel button for 2 seconds.



Using the select dial set the channel number to the same number on the Radio Controller c, then press Group/Channel button to confirm.

4

To select the group



Press the Group/Channel button once to change to group A, B, C, D or E.



Place your speedlite on top of the STROBEPRO XRN

1



3

Select the group by pressing the group button



Nikon iTTL compatible speedlite required for full power control



Select the channel number by pressing the channel button CH until you set the channel number to the same number on the XTN

2

Connect your strobe to STROBEPRO XRN using the PC Sync cable



1

**Connect using
PC Sync cable**

3


Select the group by pressing the group button Gr



Select the channel number by pressing the channel button CH. Continue to press CH until the channel number matches the XTN Controller channel number



2

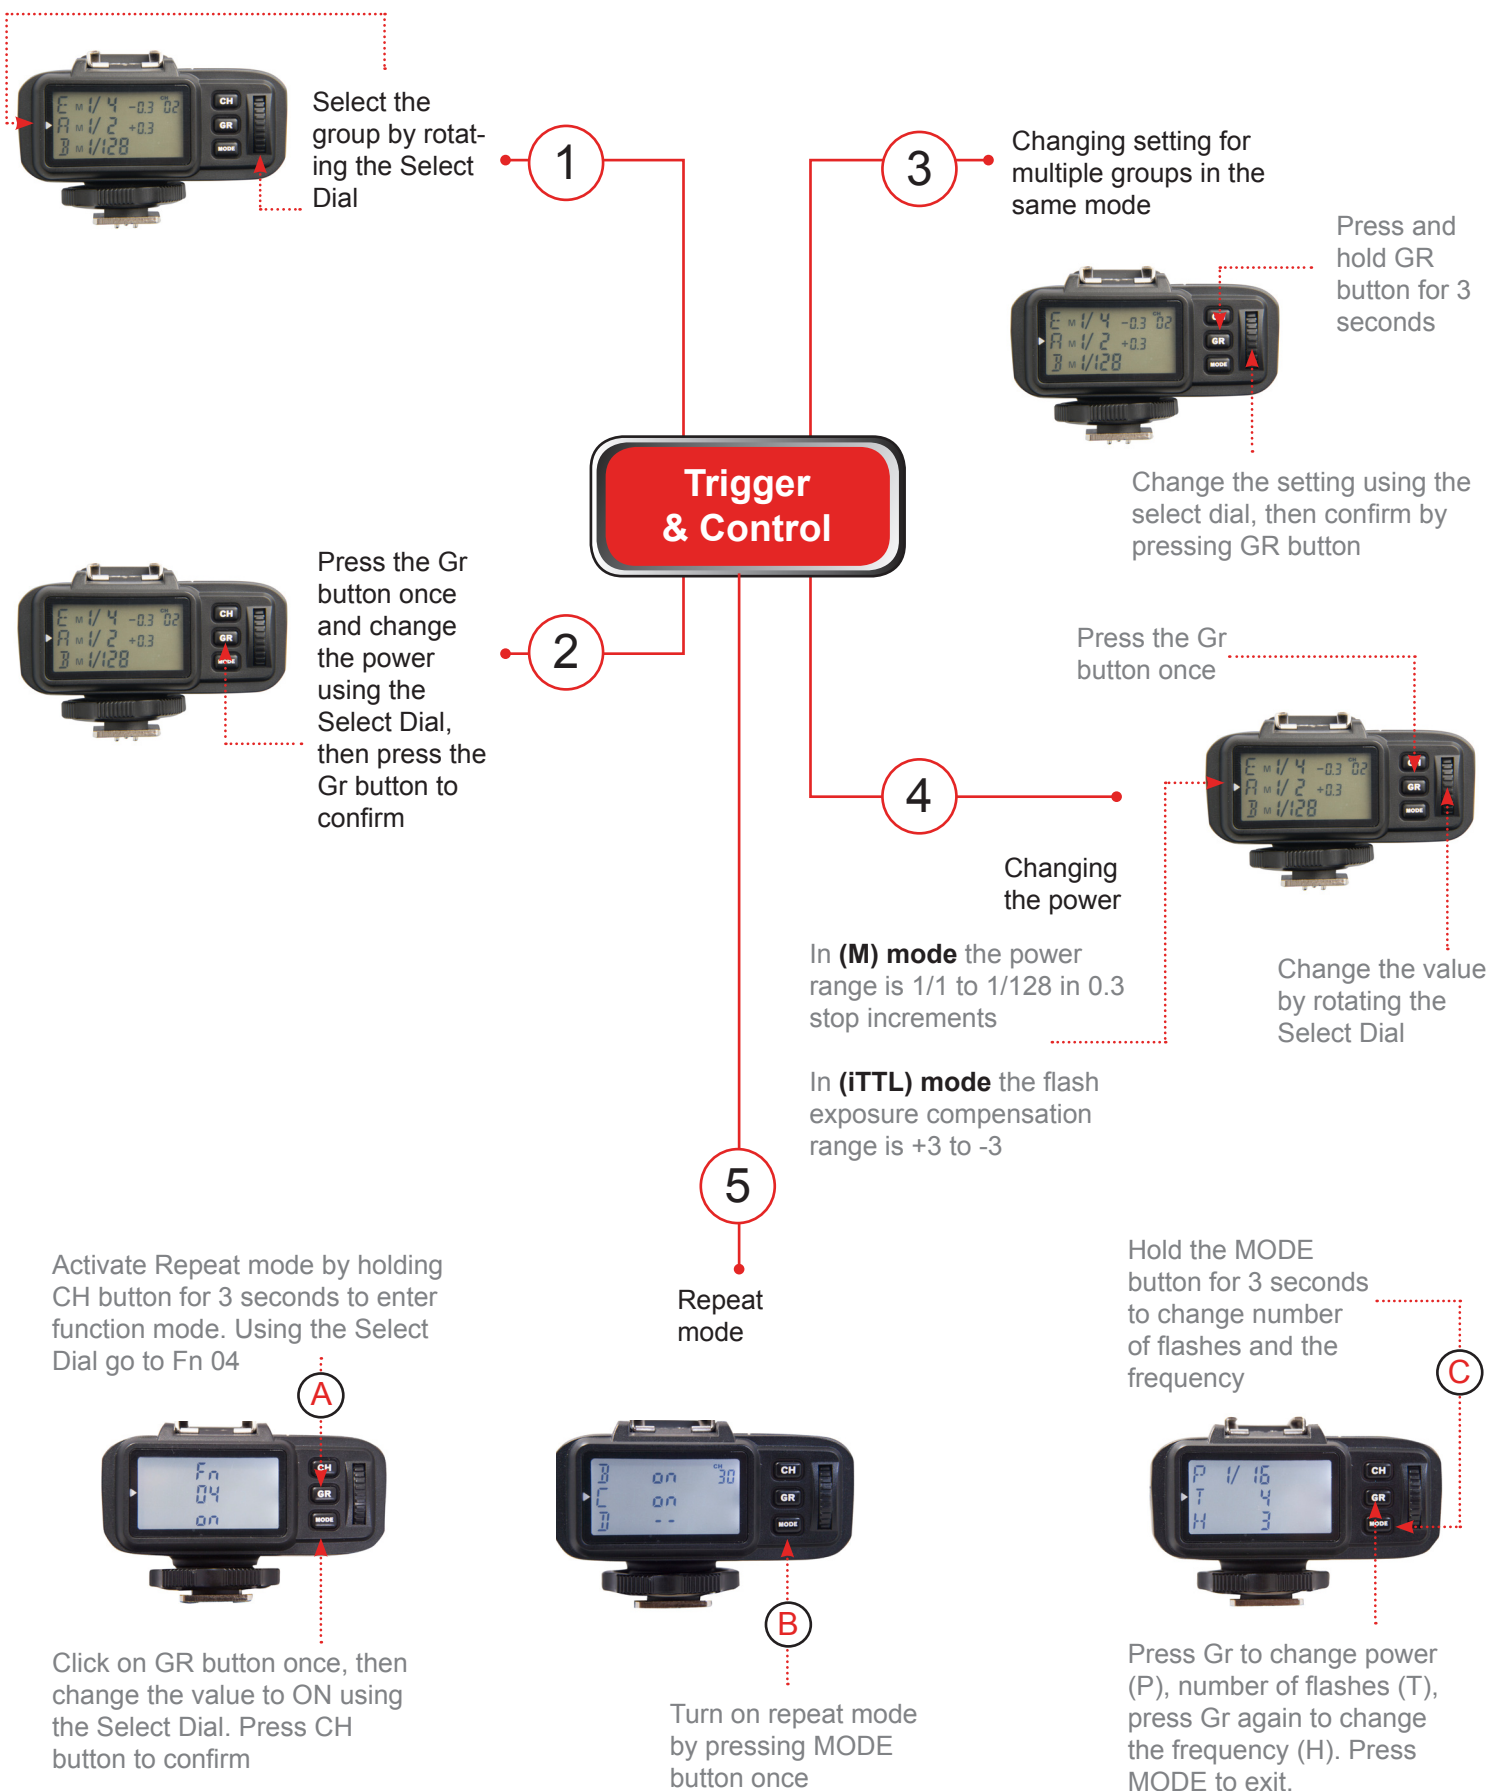



1

Connect the provided N1 or N3 Shutter Release cable to the XRN and camera port

Wireless Shutter
Release with

XR^{TTL}N

2

Match channels on XTN and XRN. Press the TEST button half-way to focus. Press fully to take the photo. The red status indicator will go off.



Setting Custom Functions (C.Fn)

Press the CH button for 3 seconds

1



2

Select the desired function number using the Select Dial

3

Press the Gr button once and change the function value using the Select Dial. Press Gr to confirm.

4

Press CH button to exit the function menu

C.Fn No.	Function	Setting Sign	Settings and Description
00	Synchronization delay setting	0	Off
		1-100	Master flash synchronization delay N*100 us (synchronization delay icon ☺ is displayed)
01	Single contact mode	0	Off
		1	On (the single contact mode set icon ☑ is displayed)
02	Zoom setting	0	Do not change the zoom value
		AU	Auto zoom with camera lens
		20, 24, 28, 35, 50, 70, 80, 105, 135, 135+	Zoom (20/24/28/35/50/70/80/105/135/135+)
03	PC sync socket connects with camera/flash	0	PC sync socket connects with camera
		1	Pc sync socket connects with flash
04	Second curtain sync	0	Second curtain sync off
		1	<p>Second curtain sync on</p> <p>Second curtain sync cannot be set through the camera's external flash functions setting.</p> <p>When using second curtain sync, the effective shutter speed range is from 1/30s to 30s. When shutter speed is set as buLb or is quicker than 1/30s, the settings are invalid.</p> <p>After being turned on, second curtain sync is effective even though HSS has been set and the shutter speed range is from 30s to 1/30s.</p> <p>After second curtain sync is turned on, synchronization delay settings are invalid.</p>
05	For future features		

Technical Data

Model	STROBEPRO XTN
Compatibile cameras	Nikon iTTL, and cameras with PC sync connection
Remote system	2.4 Ghz wireless transmission
Modulation mode	MSK
Power supply	2 x AA
Exposure control	iTTL II and Manual
TTL control	
High-speed sync	Yes
Flash exposure compensation	Yes, ± 3 stops in 1/3 stop increments
Flash exposure lock	Yes
Focus assist beam	Yes
Multi flash	Yes
Second curtain sync	Yes
Modeling flash	Yes, fired with camera's depth of field preview button
Wireless flash	
Wireless function	Master, Slave, Off
Controllable slave groups	A, B and C
Channels	32
Other features	
Synchronization delay	Yes (0-10ms, use 100us as the unit)
Wireless shutter release	Receiver can control camera shooting through 2.5 mm sync port
ZOOM setting	Auto or Manual
Output interface	Use a PC cord to input and output
Firmware upgrade	Use the Micro USB port to upgrade
Memory function	Settings will be stored 2 seconds after last opetaion and reload after a restart
Dimension/Weight	72mm x 75mm x 52mm / 100 g