

RGBCW 4 Zone LED Strip Remote







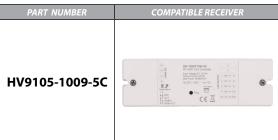

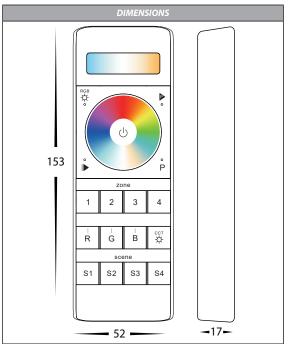



FUNCTIONS DIAGRAM Touch the slider to switch on the dual color LED lighting, and choose the color temperature. Press and hold down to increase/ Click to recall the program by 4 different decrease light intensity of RGB channels running modes: jump, flash, fade, strobe Click to turn on/off all zones <u>`</u>ტ Touch color to get any color Program setting button: click the button, LED lighting connected with receiver will flashes once, then touch the color wheel to choose 2-5 kinds of colors/max 5 colors), then click P button again, LED lighting connected on receiver will flash Play/Pause button, click to play /pause10 built-in modes. Press and hold P down to speed up/down the running program once again, which means program finished. Press button > to run the program. 4 zones: click to select corresponding zone, press and hold down to turn ON/OFF corresponding zone 4 1 2 3 R, G, B channels , click to turn ON/OFF-corresponding channel, press and hold down to increase/decrease light intensity of the channel сст ₩ -Press and hold down to increase/decrease light intensity of CCT dual color B Ġ Press and hold down to save color/ S2 S3 S4 scene/mode, click to recall the saved Front side

*Ordered after 01-01-2022

For More Information Contact Havit Lighting

143 Beauchamp Road Matraville NSW 2036 Australia

Tel: 02 9381 83000 Fax: 02 9666 888 Email: sales@havit.com. Web: www.havit.com.a



