Zigbee RGBW LED Remote Controller





Product Ordering

IMAGE	PART NUMBER	SAMPLE INSTALLATION DIAGRAM
	HV9102-ZB-RGBWREM	TouchLink to a Zigbee Lighting Device Step 1: Set the zigbee lighting device to statt TouchLink commissioning, please refer to its manual to learn how. Step 3: Short press any button to choose a group to touchlink Step 4: Press and hold down until LED indicator turns on. (a) (a) (b) (b) (b) (b) (b) (b) (c) (c) (c) (c) (c) (c) (c) (c) (c) (c

** See Warranty Terms and Conditions for more information

For more information contact Havit Lighting

ADDRESS: 143 Beauchamp Road Matraville NSW 2036 Australia
 Tel:
 02 9381 8300

 Fax:
 02 9666 8881

 Email:
 sales@havit.com.au

 web:
 www.havit.com.au