

OPERATING PROCEDURE

- **Always** Check daily before use that the power supply cable, plug and sockets are in good condition; check for visible signs of damage (do not use if damaged)
- **Always** Follow the correct procedure when filling the water reservoirs and waste tank
- **Always** consider the use of disposable gloves and aprons as they are recommended with the use of this machine
- **Never** allow any part of the machine to be immersed in water
- **Never** allow inexperienced, untrained or unauthorised people access to the machine

Operating Procedures on the Robby 3000



Push down on pressure safety cap then turn the cap



Fill the tank with water using the funnel : **max. 2 ltr.**

Preferably hot water.

Make sure the tank does not overflow sure the tank does not overflow.



Push down on the tank cap and turn it clockwise to screw it shut firmly.



Switch on the main switch. The boiler ready lamp (green lamp) will light up when ready for use.



Connect the steam hose



Now the machine is ready for use:
Activate the steam switch.



Open the steam output regulator knob and regulate it to the required amount of steam.

Refilling the boiler of the machine



When the low water level light (orange light) lights up: the water tank Needs refilling.



Switch off the heating element by pressing the left button.



De-pressure the boiler: Hold down the trigger on the pistol grip until steam no longer comes out. Once this is complete turn off the steam (righthand) button.



Once the tank is de-pressurised then using **EXTREME CAUTION;** Push down on pressure safety



Wait 2 or 3 minutes and fill the tank up slowly using the funnel.

MAX BOILER CAPACITY 2L



Push down on the tank cap and turn it clockwise to



Switch on the main switch. The boiler ready lamp (green lamp) will light up

Once it's reached the correct temperature and is ready to use again.