

ROBBY® Steam & Vac OPERATING PROCEDURE

- **ALWAYS** check before use that the power supply cable, plug and sockets are in good condition; check for visible signs of damage.
- **ALWAYS** follow the correct procedure when filling the boiler with fresh water only
- **ALWAYS** consider the use of disposable gloves and aprons as they are recommended with the use of this machine
- **NEVER** use the machine if it is damaged.
- **NEVER** allow inexperienced, untrained or unauthorised people access to the machine
- **NEVER** allow any part of the machine to be immersed in water




Lift the handle up and away using the clip at the back



Remove the transparent cover and waste bucket



Fill the waste bucket with water between minimum & maximum marks

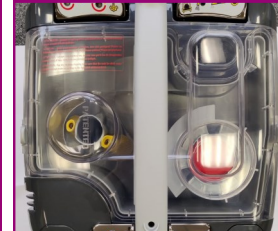

Replace bucket cover and ensure the handle is in locked position




Remove reservoir filler cap



Fill boiler with 1.5 litres, maximum, of cold tap water using a funnel.



Replace reservoir filler plug.

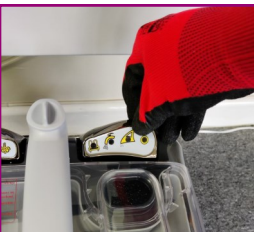

Plug the power cable into a suitable electric socket. Press the steam paddle switch once, the light will start to flash.



Wait approximately 4 minutes until the blue light is steady



Open the front panel and connect the steam hose.



Control the steam volume output using the pistol grip.

Holding the button down will cycle through power.



Lights will indicate power level.



Pressing the left paddle turns the vacuum on & off.