

**Titan**

**Pro- Executive**

**FULL BODY AIR MASSAGE CHAIR**

OPERATION INSTRUCTIONS

 **SAVE THESE INSTRUCTIONS**



Attention: products are standard for real objects



## FULL BODY AIR-MASSAGE CHAIR

Thanks for purchasing this product. Please read this manual instruction carefully in order to know how to use this product correctly before operation. Please pay more attention to some important safety warning and keep this manual book properly for future use.

Note: Our Company reserves the right to revise the design and description of this product without any further notice. Please refer to the actual color of this product.

### CONTENTS

|                                 |    |
|---------------------------------|----|
| Safety and maintenance          | 02 |
| Name and function of components | 04 |
| Function                        | 05 |
| Method of usage                 | 06 |
| Product specification           | 31 |





## Important Safety Warning

- Don't allow children to touch moveable part of this product.
- Please use well-grounding power supply suited to this product.
- Please pull out the plug after use or before cleaning to avoid injury or damage to the product.
- Please operate this product according to this manual instruction.
- Don't use accessories which are not recommended.
- Don't use this product outdoors.
- Please read this manual instruction carefully before operation.
- Any other usage that is not listed in this manual instruction is forbidden.
- 20 minutes of usage each time is recommended.
- Please don't use it if the leather is broken or damaged.
- Please don't use it if the cover or leather is damaged.
- Please don't use it if the radiator hole is covered or blocked.
- Please don't drop anything into this product.
- Please don't fall asleep while using this product.
- Please don't use it if drunk or feel unwell.
- Please don't use it within one hour after having meal.
- Please don't make the massage function too strong for avoiding injury.

## Environment for usage

- Please don't use it under high temperature and moist environment such as bathroom.
- Please don't use it immediately while the environmental temperature changes sharply.
- Please don't use it under heavy-dusty or caustic environment.
- Please don't use it where there is not enough space or not good ventilation.

## People who are not suitable to use this product

- People who are suffering from osteoporosis are not suitable to use this product.
- People who are suffering from heart disease or carrying electronic medical equipment such as heart pacemaker are not suitable to use this product.
- People who are suffering from fever are not suitable to use this product.
- Pregnant women or women that are in menses period are not suitable to use this product.
- People who got injured or skin disease are not suitable to use this product.
- Children under 14-year old or people mentally unbalanced without being supervised are not allowed to use this machine.
- People who are told by doctor to have rest or people who feel unwell are not suitable to use this product.
- People whose bodies are wet are forbidden to use this product.
- The appliance has a heated surface. Persons insensitive to heat must be careful when using the appliance.

## Safety

- Check the voltage if it is suitable to the specification of this product.
- Don't use wet hand to pull the plug.
- Don't make water go inside this product to avoid electric shock or cause damage to this product.
- Don't damage the wires or change the circuit of this product.
- Don't use wet cloth to clean the electric parts such as switch and plug.
- Be away from this product under power cut state to avoid injury if the power comes back suddenly.
- Stop using this product while it works abnormal, and please consult local agent immediately.
- Stop using this product if you feel unwell, and please consult health care doctor.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

## Maintenance

 
- This product should be maintained by certain appointed agents, users are prohibited to disassemble or maintain by themselves.
- Please don't forget to cut the power after usage.
- Don't use this product if the socket is loose.
- If this product will be left unused for long, please curl up the wires and reserve this product in dry and dustless environment.
- Don't reserve this product under high temperature or near fire and avoid longtime direct sunshine.
- If the detachable cord / supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Please clean this product by dry cloth. Don't use thinner, benzene or alcohol.
- The mechanical components of this product are specially designed and made, it is not necessary to be specially maintained.
- Don't use edged res to thrust this product.
- Don't roll or pull this product above uneven ground, it should be lifted before moving.
- Please use it intermittently; don't make this product work continuously for long.

## Solution of ordinary malfunctions

- It is nature movement voice if the motor sounds while in usage.
- If the controller can't work normally, please check the plug and socket if they are connected strongly and make sure the switch is turned on.
- If the rated working time is over, the product will automatically activate the power-off button; If this product works continuously for long, the temperature protector will make the product automatically power-off, it should be used again after half an hour's rest.



## Name and function of components

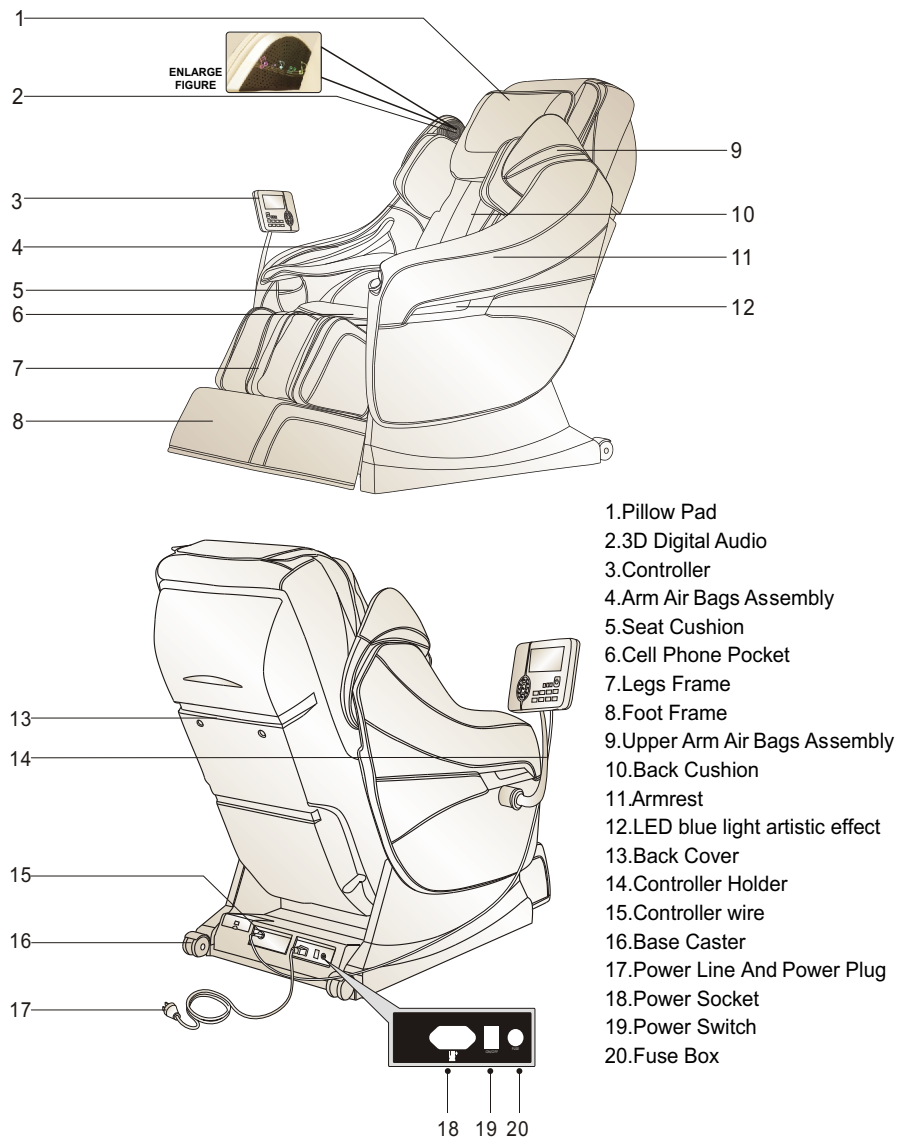


## Functions


- This product is designed with a set of smart 3D mechanical hands, which can move up and down, stretching back and forth, four-wheel driven with muted design
- The shoulder part is designed with automatic detection and micro adjustment function; body curve and massage points automatic detection, it can automatically adjust the distance of massage hands' moving back and forth according to the detected body curve and massage points, to make the massage more humanistic and scientific.
- Comfort, ease, ache relieve, full air pressure, waist twist, waist stretch and other specific massage functions.
- Set with three kinds memo massage functions
- Manually select the upper body massage; three massage position options of overall, partial and fixed position; six massage methods of shoulder grasping, kneading, tapping, shiatsu, kneading & flapping and 3 D; five massage speed levels available; under tapping and shiatsu massage status, the width of the massage hand can be adjusted in five levels.
- Arm air massage function (built-in 16 airbags), upper arm air massage function (built-in 4 airbags), with 3 intensity adjustments
- Lower body air pressure massage function: back air pressure massage function (built in 4 airbags), buttock air pressure massage (built in 5 airbags) legs air pressure massage function (built-in 40 airbags), with 3 intensity adjustments.
- Cell phone MP3 player function, upper arm built in 3 D digital audio
- Back heating function, use carbon fiber as infrared heating source
- Knee heating function, use carbon fiber as infrared heating source
- The footrest can be extended to suit various heights
- Footrest lifting, backrest lift and laying and lie-down models adjustment
- Auto-sitting function, massage hands can automatically return to original position after turning off.
- VFD display
- With LED blue light artistic effect on armrest
- wireless Bluetooth music-player system
- Through the wireless bluetooth control the massage chair by Pad which with Andriod system



 **VFD colorful controller operate massage chair**

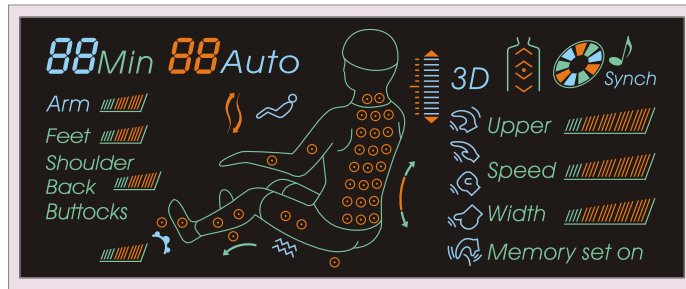

 NOTE: this is for reference only, please take practicality as standard

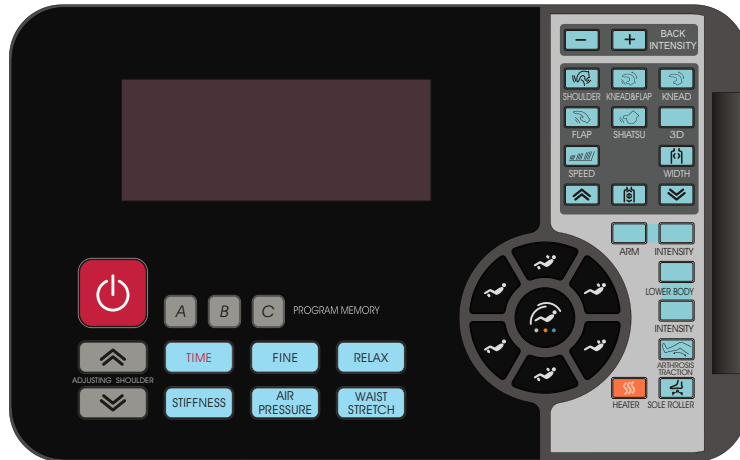

**Switch power supply on**







• Diagram of plug in

 


• Diagram of the switch position of power supply


**Start to massage**

- 1). Press the red power button to start massage, the massage chair lie down automatically.
- 2). Automatically detecting shoulder position and massage points, please wait till detection finished.
- 3). It sounds [di di di...] after detection finished. Now, please adjust the shoulder position by pressing up or down button. It will run automatic massage if there is no adjustment on shoulder position within 10 seconds. It can also enter to massage by pressing any auto massage to skip shoulder position checking or shoulder position adjust step.

| Buttons  | Description  | Display   |
|--|--|---|
| <br>SHOULDER POSITION ADJUSTMENT (UPPER BUTTON) | Move the massage balls upward to a suitable position   |  |
| <br>SHOULDER POSITION ADJUSTMENT (LOWER BUTTON) | Move the massage balls downward to a suitable position |  |

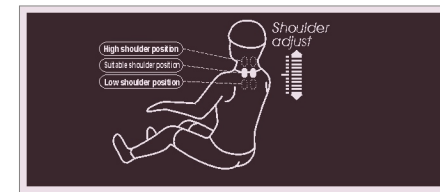

 - 4). Choose massage methods
  - Memory massage
  - When you are massaging, you can use A, B, C memory button at any time, press one of the button, then will back to the stored massage models to massage.





• Timing set

| Buttons | Description  |
|---------|--|
|         | Rated time is 20 minutes. Max working time is 40 minutes. Every time press on timing set button add to 5 more minutes. Working time up to 40 minutes, press on timing set button return to 5 minutes. Follow by cycle. |

• Automatically massage

| Buttons | Description   | Display        |
|---------|---|----------------|
|         | Comfort massage: relax muscles and bones  | <i>F1 Auto</i> |
|         | Ease massage : promote blood circulation  | <i>F2 Auto</i> |
|         | Ache relieve massage: make deep massage to relax the ache position  | <i>F3 Auto</i> |
|         | Whole-body air pressure : waist, buttock, arms, legs air pressure massage work at the same time.  | <i>F4 Auto</i> |
|         | Waist stretch: When the calf airbags work and squeeze calf part, the backrest lays down and calf rest pulls down to stretch the waist part, then return to original position and repeat above actions. Meantime the seat airbags and massage mechanism works. | <i>F5 Auto</i> |

• Manual functions

| Buttons | Description  | Display    |
|---------|--|------------|
|         | Shoulder:Auto set with shoulder grasp massage, speed and strength adjustable           | (H1)       |
|         | Kneading & Taping:Speed and strength adjustable  | (H1)       |
|         | Knead:speed and strength adjustable  | (H1)       |
|         | Flap:includes 2 kinds taping massage methods, speed, width and strength adjustable     | (H1-H2)    |
|         | Shiatsu:includes 2 kinds shiatsu massage methods, speed, width and strength adjustable | (H1-H2)    |
|         | 3D:4 kinds 3D massage methods, speed and strength adjustable                           | 3D (H1-H4) |
|         | Speed:with 5 levels available  | Speed      |
|         | Width:5 levels available (in taping and kneading massage mode)                         | Width      |

| Buttons | Description  | Display                        |
|---------|--|--------------------------------|
|         | Fixed position (fixed point) massage                                   |                                |
|         | Small area (partial) massage back and forth                            |                                |
|         | Upper body (overall) back and forth                                    |                                |
|         | Massage position can be adjusted down in fixed position, partial mode) | Mechanical hands move downward |
|         | Massage position can be adjusted up in fixed position, partial mode)   | Mechanical hands move upward   |

Note: back stretch ( except shoulder grasp, other manual modes are effective)

• Air pressure massage

| Buttons | Description   | Display                  |
|---------|---|--------------------------|
|         | Arm air pressure massage on /off  | Arm                      |
|         | Arm air pressure strength has 3 levels adjustable   | Arm                      |
|         | Lower body air pressure massage mode choose (3 modes:lower body, back and waist, calf)  | Feet<br>Back<br>buttocks |
|         | air pressure massage intensity of lower body, back and waist, calf. 3 intensity available.  |                          |
|         | The function of calf stretch will be enabled automatically under the mode of lower body air pressure massage and calf air pressure massage. |                          |



• Other manual function


| Buttons | Description   | Display |
|---------|---|---------|
|         | Weaken the strength of upper body massage   | Upper   |
|         | Strengthen the strength of upper body massage   | Upper   |
|         | Sole roller switch, with 3 speed levels available   |         |
|         | Back heating and knee heating switch, has warm feeling when it start to work 3 minutes later. |         |

• The angle of back rest and calf rest

| Buttons | Description   | Display        |
|---------|---|----------------|
|         | Auto lay down mode: with 3 auto lay down modes, when press the button, turn into one mode, repeat in this way.                              | (01 ~ 03) Auto |
|         | Calf rest lifting button: press this button, calf rest lifting slowly, stop when release it.  |                |
|         | Calf rest decline button: press this button, calf rest decline slowly, stop when release it.  |                |
|         | Back rest lifting button: press this button, back rest lifting slowly, stop when release it.  |                |
|         | Back rest decline button: press this button, back rest decline slowly, stop when release it.  |                |
|         | Linkage upward: press this button, the back rest lifting slowly, and the calf rest decline slowly at the same time, stop when release it.   |                |
|         | Linkage downward: press this button, the back rest decline slowly, and the calf rest lifting slowly at the same time, stop when release it. |                |

Shut off power and finish massage

 - 1). Press red power button during massage to stop all massage functions immediately, the backrest and footrest will return to original position automatically. After rated working time, all massage functions will be finished but backrest and footrest won't return to original position.
- 2). After rated working time or switch off, the handle controller displayed Memory Set On and glitter, and remind the users whether need to store the massage mode before turn off, you can choose the memo function buttons A, B, C as your requirement, store the massage mode. Press the red button again, the machine turn off, and the massage hands will restore to the original position, or wait for 10 seconds, the machine turn off automatically, and the massage restore to the original position.

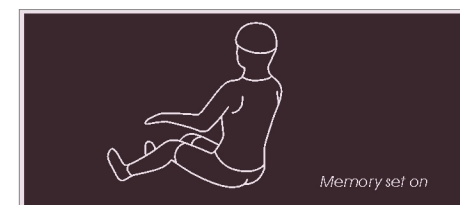

- 3). Switch power off
  - Figure (Cut off the power of the machine)





## Android system tablet computer operates message chair

### “ROBOT MESSAGE” Application program interface



| Number | Description                              | Number | Description                 |
|--------|--|--------|-----------------------------|
| 1      | function keys                            | 7      | status-bar                  |
| 2      | message status information display area  | 8      | service (reserved function) |
| 3      | upper body intensity adjustment          | 9      | operation/pause key         |
| 4      | massage button                           | 10     | function setting function   |
| 5      | long press for 2 seconds to exit program | 11     | information prompt line     |
| 6      | minimize program                         |        |                             |

### Preparation before operation

- ChairApp.apk.
  - Installer download and install Installer ChairApp.apk provided or network download address by agents

- Connect tablet computer to computer with data line, install ChairApp.apk program to tablet computer with tools software (peasecod ,360 mobile assistant ).After install successfully , “ROBOT MESSAGE” program will be shown in tablet computer application program .Any question, please consult tablet computer supplier .



Install successfully ,a (ROBOT MESSAGE)icon appears.

### 2) Bluetooth link

- Turn on power switch
- Open application menu from tablet computer main screen ,choose setting to open setting interface.
- Operate Bluetooth function -> choose Bluetooth setting -> click and check attachment equipment .When finding “Fihonest” icon ,click it to match tablet computer Bluetooth module with message chair Bluetooth module (matching code: “0000” ),when match successfully ,click “Fihonest” icon again to connect tablet computer Bluetooth module with message chair Bluetooth module ,when connect successfully , “ROBOT MESSAGE” application can be used to operate message chair .

### 3)Blue tooth module abnormal problems and solutions

- After the blue tooth paired succeed, if it cannot connect well with the blue tooth module of the message chair, please try to cancel the blue tooth pairing, and turn off the power of the message chair, and restart it, then try again.
- The blue tooth showed connect succeed, but in to “ROBOT MESSAGE” APP, cannot control the message chair as normal, or the information tips showed “ blue tooth connect failed” it shows abnormal in blue tooth module, you should exit the APP and connect the blue tooth module again, or turn off the power of the message chair, and restart it, then try again.

### Power on the machine

- First to make sure the message chair power switch is off, connect the power line with the message chair, then plug it in the prepared good ground connection socket, and turn on the power switch on the message chair into startup states.



Figure: Power switch on the machine




Figure: connect methods





## Message function control operation

### 1. Start to massage

- In pad screen, unfold the APP listing, click “” icon, to start up the massage chair control program.
- First into startup interface after you start up the program, after 5 seconds into message information interface.
- Click “power on/off” on the display interface to start massage function, massage chair lie down automatically



Startup interface



 
In standby mode message information display interface

### 2. Shoulder position adjust



- Automatically detecting shoulder position and massage points, please wait till detection finished.
- It sounds “di-di-di……” after finished the detection and into shoulder position adjust inter-face. Now, you can adjust the shoulder position by pressing up or down button, it has 11 grades to adjust. It will run into automatic massage if there is no adjustment on shoulder position within 10 seconds.

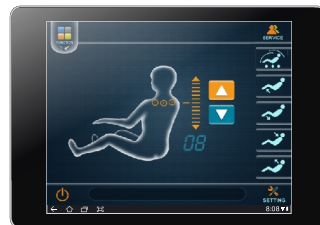

Shoulder position and massage points detection interface



Shoulder position adjust interface

| Shoulder position adjust button   | Function description                      |
|---|---|
|  | Shoulder massage position adjust upward   |
|  | Shoulder massage position adjust downward |



### 3. massage function running and pausing



- In message information interface, when the massage chair in running state, press “running/pausing” button, all the massage function will stop, and into pausing state; in pausing state, press “running /pausing” button, the massage function will continue to running as paused before. All the massage function turn off automatically, if the pausing time over 10 minutes.



running state interface



 
 
 
 
 
suspended state interface

| Pause/start   | Function description   |
|---|--|
|  PAUSE | Press this button the massage function will continue to running as be paused before. |
|  START | Press this button, pause all the massage function                                    |

### 4. Upper body massage intensity



- In running state, you can adjust the massage hands' intensity on the back of upper body by click the intensity adjust icon in the message information interface, with 5 grades optional.



| STRENGTH  |   |   |   |   | Strength: 5 grades adjustable |
|---|---|---|---|---|-------------------------------|
| 1   | 2   | 3   | 4   | 5   |                               |
|  |  |  |  |  |                               |










## 5.Auto massage


- Click“” icon, popup message function selecting menu, choose what you need.
- Click“” icon, into auto function selecting interface, click auto icon choose auto massage mode. In auto massage state, the speed and width are nonadjustable.




Auto massage function selecting interface

| Button  | function description  |
|---|---|
|    | Relax muscles and bones   |
|    | Promote blood circulation   |
|    | With deepin massage to relax the ache position  |
|   | Neck and shoulder waist, buttock, arms, legs air pressure massage work at the same time.  |
|  | Focus on waist, waist twist left and right by the airbags on waist, meantime the seat airbags start to work, the hip-swing mechanism coordinate with the waist airbags to work.   |
|  | When the calf rest airbags work and squeeze calf part, the backrest lies down and calf rest pulls down to stretch the waist part, then return to original position and repeat above actions. Meantime the seat airbags and massage hands work together. |
|  | Back to running state information interface   |

## 6.Manual massage

 
 
- Click“”icon, into manual massage function selecting interface, select manual massage methods, back stretch mode, speed, width function. In flapping, 3D, shiatsu, stop state, the width of massage hands is adjustable. Except the stop state, the speed is adjustable in any other massage methods





 

 
### 1)Manual massage - methods, speed, width

- In the interface of manual function selecting, click the “ technique” icon, into massagetechnique selection, speed, width adjustment interface, click the corresponded technique icon, speed icon, width icon, choose the personalized massage function.

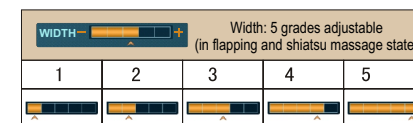


Auto massage function selecting-technique interface



| Buttons   | function description   |
|---|--|
|    | massage hands fixed on shoulders automatically to do grasp massage, speed and intensity adjustable |
|   | speed and strength adjustable  |
|  | Subdivided with 2 flapping modes, speed and intensity adjustable                                   |
|  | speed and intensity adjustable   |
|  | Subdivided with 2 shiatsu modes, speed and intensity adjustable                                    |
|  | Subdivided with 4 3D modes, speed and intensity adjustable   |
|  | Back to running state information interface  |








## 2) manual message-stretch mode

- In manual function selecting interface, click “ stretch mode” icon, into stretch mode interface, click the corresponding stretch mode icon choose your personalized message function.




Manual message function select-stretch mode

**Note**  
In the grasp message state, the stretch mode selecting is useless.

| Stretch Mode  | Function description                             |
|---|--|
|  Whole back  | Massage up and down on whole back                |
|  Upper back  | Massage up and down on upper back                |
|  Lower back  | Massage up and down on lower back                |
|  Partial     | Back partial massage up and down in a small area |
|  Fixed point | Massage on fixed point                           |




## 7. Air pressure massage

- Click “ ” icon, into the air pressure message function selecting interface, click the corresponding air pressure message function icon. The air pressure message function including lower body air pressure message (lower body, waist, buttocks) and arms air pressure message.


## 1) air pressure message-arms



Air pressure message-arms interface

| STRENGTH  |   |   | Intensity: 3 grades adjustable |
|---|---|---|--------------------------------|
| 1   | 2   | 3   |                                |
|  |  |  |                                |




When the arms air pressure in a state of startup, adjust the intensity, with 3 grades optional.

| Air pressure function  | Function description                                    |
|--|---|
|  Arms | Switch on or off the arms air pressure message function |





## 2) air pressure message- lower body, waist, buttocks, legs stretch



Lower body, waist, buttocks, legs, legs interface

| STRENGTH  |   |   | Intensity: 3 grades adjustable |
|---|---|---|--------------------------------|
| 1   | 2   | 3   |                                |
|  |  |  |                                |

In a state of startup of lower body, waist and buttocks, foot part air pressure, you can adjust the air pressure intensity, with 3 grades optional.

| Air pressure function   | Function description   |
|---|--|
|  LOWER BODY      | Switch on or off lower body air pressure message function. Lower body air pressure including waist, buttocks and foot part.  |
|  WAIST, BUTTOCKS | Switch on or off waist, buttocks air pressure message function.  |
|  FOOT PART       | Switch on or off foot part air pressure message function.  |
|  LEGS STRETCH    | Switch on or off legs stretch function. When you switch on lower body air pressure or foot part air pressure message function, the default startup function is legs stretch. |



## 8. Other massage function


### 1) other massage function thermal therapy function

- Click “OTHERS” icon, into the other massage function selecting interface, click “thermal therapy function” icon, will switch on or off the thermal therapy massage function. It is including back and waist, knee-joint far infrared heat function.



thermal therapy function interface

**Notes:**  
You will have warm sensation 3 minutes later when you switch on.

 
| Buttons   | function description                               |
|---|--|
| <br>ROLLER ON SOLE | Switch on or off thermal therapy massage function. |


### 2) other massage function- sole roller

- Click “OTHERS” icon, into the other massage function interface, click “roller on sole” icon, to switch on or off this function. When the sole roller massage function in startup state, click sole roller speed icon, you can adjust the speed of the roller, with 3 grades optional.



sole roller massage interface

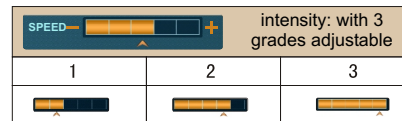

| Buttons   | Function Description                          |
|---|---|
| <br>ROLLER ON SOLE | Switch on/off roller on sole massage function |






### 3) other massage function-memory function

- Click “OTHERS” icon, into other massage function select interface, click corresponding buttons of memory storage or memory calling to store the current massage function or call the massage function you stored before to massage
- Memory storage: click corresponding memory storage buttons to store the current massage function status, it can store 3 massage function status(A、B、C).
- Memory calling: click corresponding memory calling buttons to running the massage function status which stored before.



Other massage function- memory function-memory function interface

## Backrest Frame And Calf Rest Frame Position Adjust

| Buttons                  | Function Description  |
|--------------------------|---|
| calf rest go up and down |  Click this button, calf rest rise up slowly, stop when release it                               |
|                          |  Click this button, calf rest go down slowly, stop when release it                               |
| back rest go up and down |  Click this button, back rest rise up slowly, stop when release it                              |
|                          |  Click this button, back rest go down slowly, stop when release it                             |
| lie down automatically   |  Total with 3 modes for automatically lie down, every time with one mode when press the button |

## Settings

- language selection  
Click “SETTING” icon into setting function interface, then click “language selection” icon, popup language list box, select language type, the system with 3 language (simplified Chinese, traditional Chinese, English).



• volume adjust

Click "SETTINGS" icon into setting function interface, then click "volume adjust" icon, popup volume adjust icon, click "volume +" or "volume -" to adjust the volume of the music.



Setting function- language selecting interface



setting function- volume adjust interface

**End message, power off**

- When the massage function in a state of start-up, click "massage on/off" icon, will turn off all the massage function, the back rest and calf rest restore automatically; or the time is up, all the massage function will off, but the back rest and calf rest will not restore.
- Turn off the power



Figure of power on/off position



Method figure of turn off the power

**Note:** Only when the power is off, then you can take off the power plug from the socket.

**Wireless blue tooth music player operation**

- The music player with blue tooth function (such as mobile phone, mid pad), after connected with the blue tooth module on the massage chair, it can transmit the music to the sound system of the massage chair to play music by blue tooth.
- Please refer to the bluetooth connection way above when you need to connect the soundsource equipment with bluetooth of the massage chair.

**Standard configured function**

- Mobile phone music: with mobile phone pocket on left armrest, the users can connect the massage with blue tooth, enjoy music when massage.
- With two 3D digital sound system equipped on each upper armrest, connect with the mobile phone, and the music come out from the 3D digital sound system. You can enjoy the splendid music and massage while relaxing.
- Blue LED light in both armrest



Cell phone pocket



 
3D digit audio




LED blue light artistic effect

**Am rest installation**

- Find out the plug respond to the arm rest on the bottom of the seat frame, and through out from the square hole which on the fixed steel board.(figure 1)
- When the plug out from the square hole on the steel board, respond to every connecting plug( figure 2)

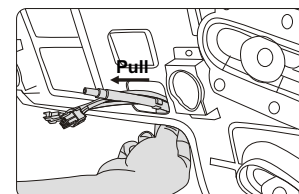


( Figure 1)

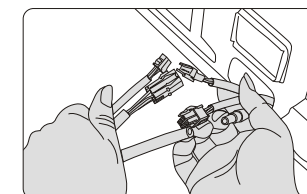 


( Figure 2)

 - Draw out the plug on the bottom of the seat frame and connect with the arm rest joint, air pipe responded to the right place (figure 3)
- After connect the responded connector, insert it gently through the square hole on the bottom of the seat frame, be careful to avoid to fold the air pipe (figure 4)

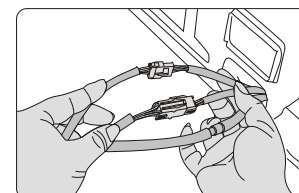


( Figure 3)

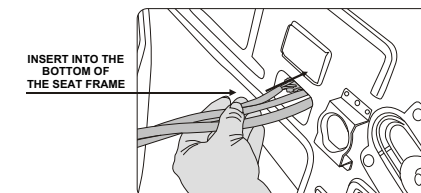 


( Figure 4)



 - As figure, the pin on the arm rest respond to the box on the fix board, the steel board respond to the groove of arm rest.(figure 5)
- Hold the arm rest with your hands, pin respond to box on the front part of the steel board, and pin respond to box on the behind of the armrest,( check the connect wire whether it is insert in to the bottom of the armrest frame, avoid to get stuck), the whole arm rest covered on the fixed steel board. (figure 6)

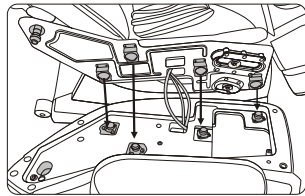


( Figure 5 )

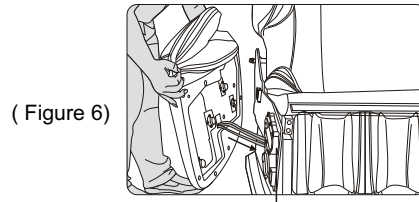 


( Figure 6 )

Note: the connect wire must be insert in the right place, avoid to get stuck

 - Arm rest covered on the fixed steel board, then press the armrest make sure the pin into the box on the fixed steel board, and pull it with your hand to check it is fasten tightly.(figure 7)
- Find out the install hole on the front part of the fixed steel board, screw the screws with hex wrench. (Figure 8)
- Find out the install hole on the behind part of the fixed steel board, screw the screws with hex wrench, finish the installation, the same installation of the two armrest. (figure 9)

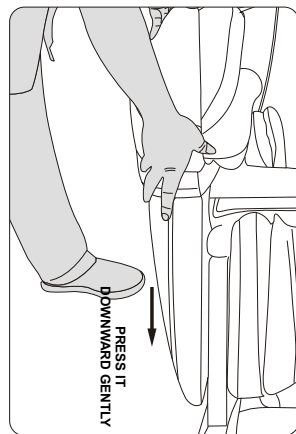


( Figure 7 )

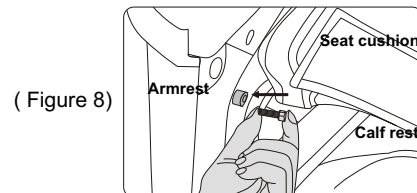 

( Figure 8 )

 
Figure: hex head screw fixed in front part of armrest

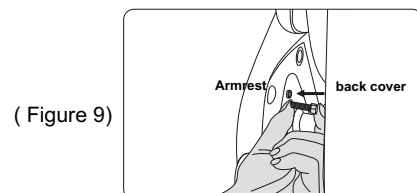


( Figure 9 )

Figure: hex head screw fixed in behind part of armrest


## Handle controller frame installation

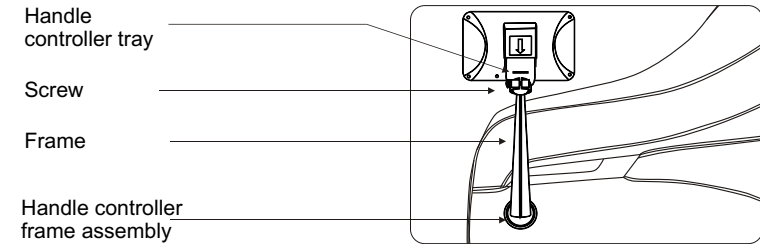 

 - Ready for the handle controller tray, steel pole, take out the fixed screws on the handle controller tray. (Figure 1)
- Insert the ball joint of the steel pole to the concave spherical of the handle controller tray.(figure 2)

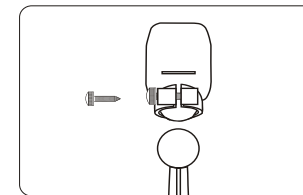


( Figure 1 )

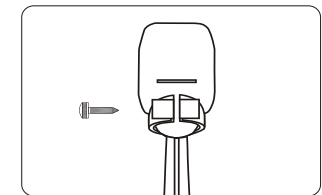 


( Figure 2 )

 - Screw the screws in to the hole which got in step 1 and tighten it, take care the direction, should be screw it from right to left. (Figure 3)
- Prepare the handle controller frame assembly in step 3.(figure 4)

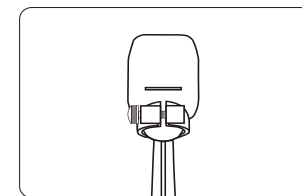


( Figure 3 )

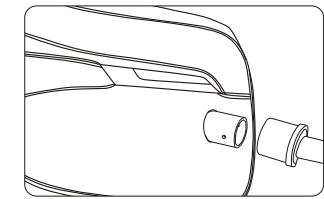 


( Figure 4 )



 - Insert the handle controller frame assembly in to the cylindrical fixed pipe, be carefully that the two groups hole out side and inside should be one to one correspond.(figure5)
- Prepare two screws which tighten on two sides (figure 6)

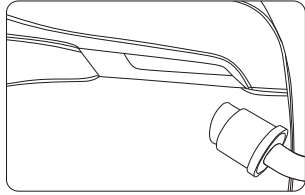


( Figure 5)

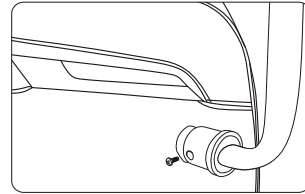 

( Figure 6)

 
- Screw the two screws on two sides make it tighten, finish the installation( figure 7)

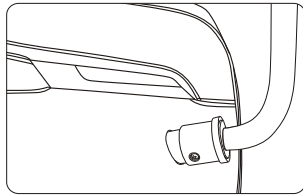



( Figure 7)

### Controller installation and usage

 
- Insert the handle controller in to the frame (figure 1), the frame can turn left and right freely. (Figure 2) and the handle controller can swing freely in horizontal direction.

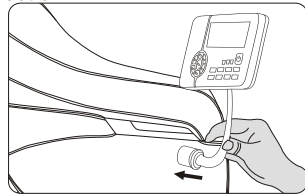

( Figure 1)

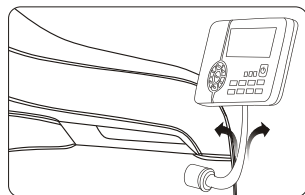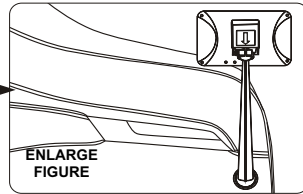  

( Figure 2)

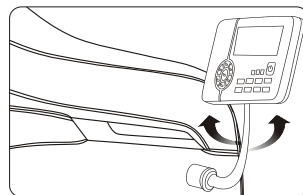 


( Figure 3)




### Note:

 As below are the selective parts, users can choose the different manual controller support and manual controller according to the actual needs.


### selective manual controller support and manual controller installation

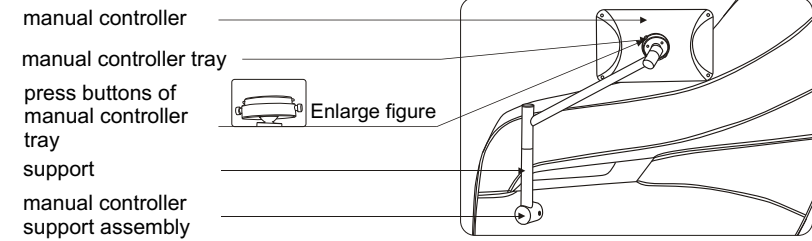


### Preparing before installation

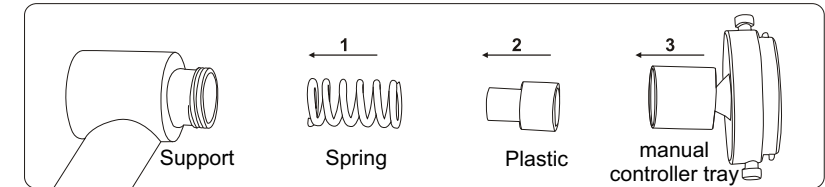 

 - Put the spring in the mounting hole of the upper support (figure 1)
- Insert the plastic (figure 2)

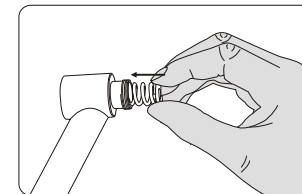


( Figure 1)

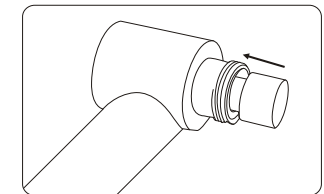 


( Figure 2)



 - Install the manual controller tray on the top of the support and tighten it. (figure 3)
- Tighten the hexagonal on the manual controller tray, fixed on the support. (figure 4)

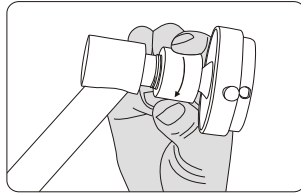


( Figure 3 )

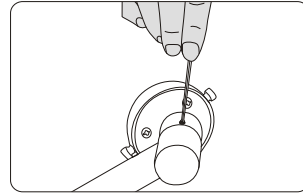 


( Figure 4 )

 - Make the hole on the bottom of the support aim at the reserved pipe on the armrest (figure 5), then insert the support on the fixed pipe. (figure 6)

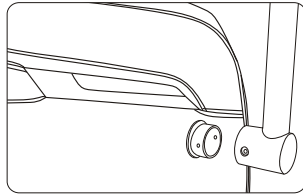


( Figure 5 )

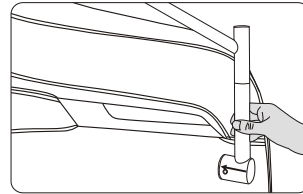 


( Figure 6 )

 - Adjust the direction and the position of the support, make sure the screw hole matched well with the screw hole on the fixed pipe. (figure 7)
- Screw the three screws which on the connector holes and make it tighten, finish the installation.

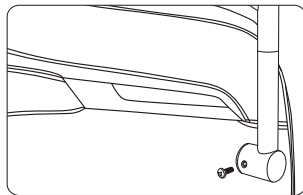


( Figure 7 )

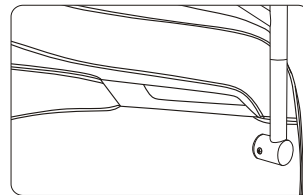 


( Figure 8 )

 - Press the buttons on the sides of manual controller tray, and make sure the cavity on the back cover of the manual controller aimed at the manual controller tray to install it. (figure 10)

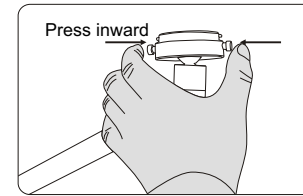


( Figure 9 )

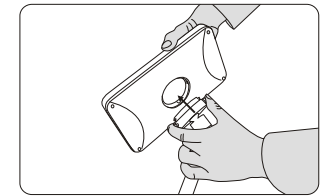 


( Figure 10 )

 - Loosen the buttons after you install it, rotate the manual controller till you hear the crack clicks (figure 12), then you can make sure the manual controller installed well, and finished the installation.

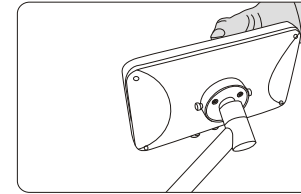


( Figure 11 )

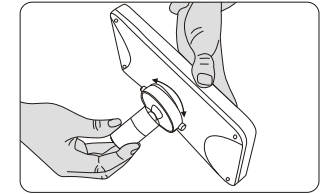 


( Figure 12 )

 - The manual controller support can rotate 360 degrees horizontally after the installation. ( figure 13), and the manual controller tray can rotate left and right, up and down. ( figure 14)

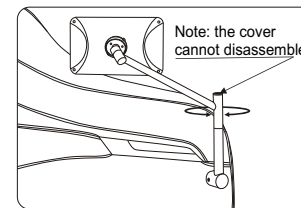

( Figure 13 )

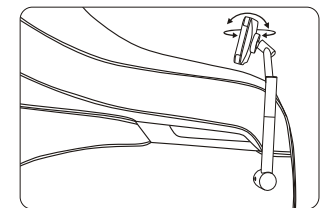 


( Figure 14 )






### The disassemble and using of pillow pad and back cushion

 - You can weaken the kneading strength of the neck and shoulder by pillow pad, you can use it according to your requirement (Advise you use it). Back cushion connect with back by zipper (1), pillow pad connect with the back cushion by fastener (2)

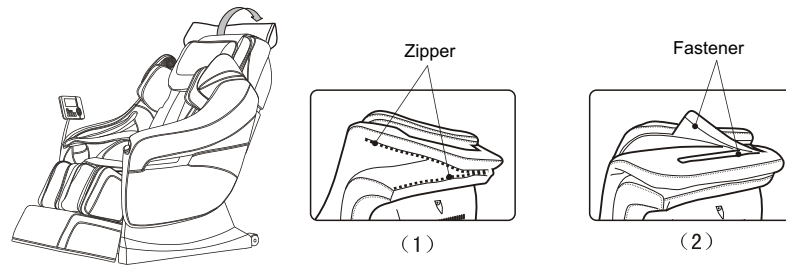

### Floor Protection

 - Put the heavy massage chairs on the wood floor for a longtime may damage the floor, so please place a carpet or other object to avoid this damage.

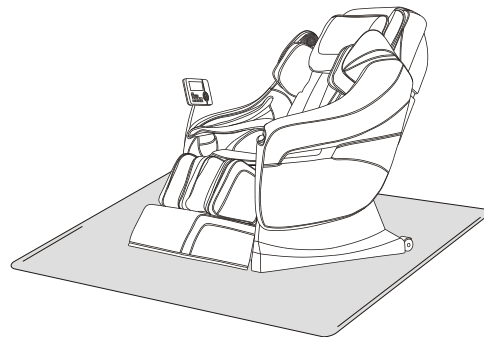


#### Caution

Do not move the chairs with its wheels on wood floor, rough ground or in a narrow space. Two people are required to lift the chair.

### Method Of Movement

 - Make sure that all wires are far above the ground, tilt the backrest backward to a certain degree (with the gravity center resting on the wheels), push the chair forward or backward with your hands and finally resume the chair to the normal position in a slow and gentle manner.

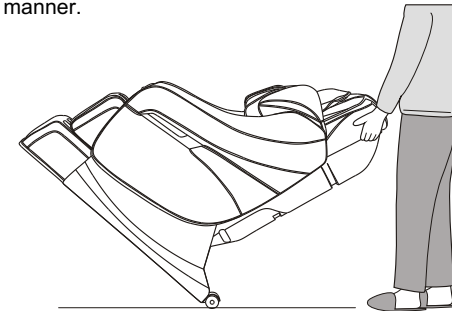

### Product specification

Model: Pro- Executive

Description: Full Body Air-massage Chair

Rated Voltage: 110-120V~ 60Hz   
220-240V~ 50Hz / 60Hz

Rated Power Input: 200W

Rated Working Time: 20Minutes

Safety Design: Class I

Material introduction: PVC, PA, steel parts and electric &ele-ctron parts

| MATERIAL | PU | LEATHER | CLOTH | WOOD |
|----------|----|---------|-------|------|
|          |    |         |       |      |

