



RESETTING YOUR NITRO-BEE



If you ever encounter an error code on your Nitro-Bee, the reset procedure is remarkably easy to fix.

Simply follow these steps below to get your Nitro-Bee back in business! If this procedure doesn't work, give us a call and ask for the Tech Department for help.

Want to watch the video on this tech tip? Simply visit the link below or scan the QR code.



<https://youtu.be/VfcZM9hTLyg>

RESET PROCEDURE

1. Make sure your Nitro-Bee is powered OFF.
2. Turn the Nitro-Bee on by holding both the ON/OFF and ENTER button until you see either PIF or P1-3 then press the ENTER button.
3. P2-0 will appear on the screen (commonly with 454.000 indicated as the receiving frequency). You can change the desired frequency if needed by using the CHANNEL/VOLUME buttons.
4. Press the ENTER button P3-0 will appear on the screen.
5. Press ENTER and P1-3 will appear.
6. Hit ENTER again and P2-0 will appear.
7. Hit ENTER and P3-0 will appear.
8. Hit ENTER one last time and then turn the unit off then on again to check to make sure the reset executed properly. If it has, then your screen should reset with your default channel and frequency on the Nitro-Bee.