

User Guide

Power On/Off

- To power on the radio, twist the power knob clockwise. A short tone followed by your current channel will confirm radio power is on.
- Twist the power knob counter clockwise to power off the radio.

Changing Channels

- Twist the channel knob clockwise to change channel up.
- Twist the channel knob counterclockwise to change channel down.

Changing Zones

- Long press the ZONE button until it beeps.

Zone 1: Analog Channels 1-16 (Channel 16 is Listen Only)
Zone 2: Digital Channels 17-32

Transmitting (TX)

- Press and hold the **PTT** button on the left side of your device.
- Release the **PTT** button when finished transmitting.


Channel Lock

- Long press the **M** button to lock the channel you're currently using to avoid accidentally switching your monitored channel.

Battery Indicator

- Short press the **M** button to get an audio queue indicating your remaining battery power.

3 Beeps: battery full **2 Beeps:** battery is halfway full **1 Beep:** battery is low

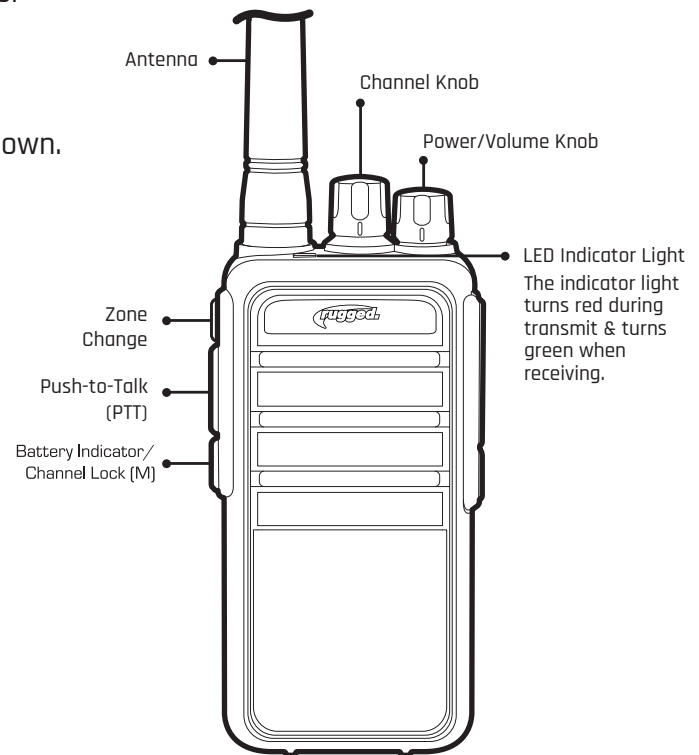

Custom Settings

- Custom functionality such as locking the PTT button is available by programming your radio using paid software from RT Systems.

ANALOG

CHANNEL LIST

Ch. #	Name	Ch. #	Name
1	WXMAN	9	CHKRS2
2	BFGRLY	10	BFGPIT
3	RUGGED1	11	MAG7
4	NETWRK	12	RUGGED3
5	CHKRS1	13	CORE
6	RUGGED2	14	LOCOMO
7	YOKO	15	RUGGED4
8	BITDRLY	16	L PCIRL

DIGITAL

CHANNEL LIST

Ch. #	Name	Ch. #	Name
17	VHFD17	25	VHFD25
18	VHFD18	26	VHFD26
19	VHFD19	27	VHFD27
20	VHFD20	28	VHFD28
21	VHFD21	29	VHFD29
22	VHFD22	30	VHFD30
23	VHFD23	31	VHFD31
24	VHFD24	32	VHFD32