RDH-16 DIGITAL RADIO (UHF VERSION)

User Guide



Power On/Off

- To power on the radio, twist the power knob clockwise. A short tone followed by your current channel will confirm radio power is on.
- Twist the power knob counter clockwise to power off the radio.

Changing Channels

- Twist the channel knob clockwise to change channel up.
- Twist the channel knob counterclockwise to change channel down.

Changing Zones

Long press the ZONE button until it beeps.

Zone 1: Analog Channels 1-16 Zone 2: Digital Channels 17-32

Transmitting (TX)

- · Press and hold the PTT button on the left side of your device.
- · Release the **PTT** button when finished transmitting.

Monitor a Channel (Analog Only)

 Short press the M button located on the left side of the radio to temporarily enable or disable the preset squelch function of the device and monitor for weak signals on the selected channel.

Battery Indicator

· Press and hold the M button.

3 Beeps: Battery is full

2 Beeps: Battery is halfway charged

1 Beep: Battery is low

Antenna Channel Knob Power/Volume Knob LED Indicator Light The indicator light turns red during transmit & turns green when receiving.

ANALOG CHANNEL LIST

Name
UHF-1
UHF-2
UHF-3
UHF-4
UHF-5
UHF-6
UHF-7
UHF-8

01 "	
Ch. #	Name
9	UHF-9
10	UHF-10
11	UHF-11
12	UHF-12
13	UHF-13
14	UHF-14
15	UHF-15
16	UHF-16
•	<u> </u>

DIGITAL

CHANNEL LIST

5
5
7
3
)
)
1
2

Ch. #	Name
25	UHF-23
26	UHF-24
27	UHF-25
28	UHF-26
29	UHF-27
30	UHF-28
31	UHF-29
32	UHF-30