 


# COFFEE MAKER INSTRUCTION MANUAL

GECMD008-U

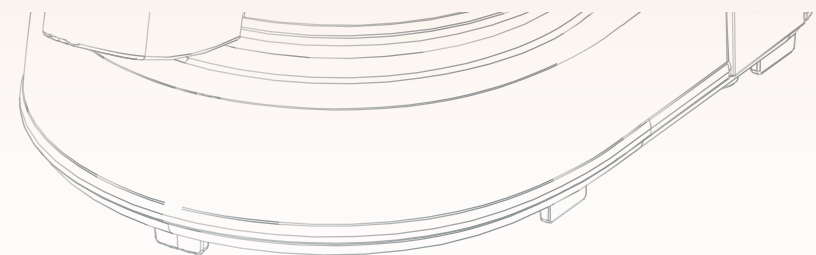

# CONTENTS

1. WELCOME.....	1
2. DESCRIPTION OF THE APPLIANCE.....	2
3. IMPORTANT SAFETY INSTRUCTIONS.....	3
4. CORD & PLUG INSTRUCTION.....	5
4.1 SPECIAL NOTES ON PLUG.....	5
4.2 SHORT CORD INSTRUCTION.....	5
5. OPERATION OF YOUR MILK FROTHER.....	6
5.1 USING YOUR COFFEE MAKER.....	6
5.2 HOW TO MAKE COFFEE.....	6
6. CLEANING AND MAINTENANCE.....	10
6.1 DAILY TIPS FOR CLEANING AND MAINTENANCE.....	10
6.2 REMOVING MINERAL DEPOSITS.....	11
7. REMOVING MINERAL DEPOSITS.....	11
8. CLEANING AND MAINTENANCE.....	12
9. ENVIRONMENT FRIENDLY DISPOSAL.....	13

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE THIS COVER. NO USER-SERVICEABLE PARTS INSIDE. REPAIR SHOULD BE DONE BY AUTHORIZED SERVICE PERSONNEL ONLY.

 
## 1. WELCOME

Thanks for purchasing our Gevi products. Gevi has focused on creating perfect home appliances for our customers. In the past few years, it took us time to do lots of research and many prototypes to achieve our goal. We would like to give you a different user experience. If you want FAQs and more information, please feel free to contact us.

## 2. DESCRIPTION OF THE APPLIANCE

MODEL: GECMD008-U

Electrical parameters: 120V~ 60Hz 600W

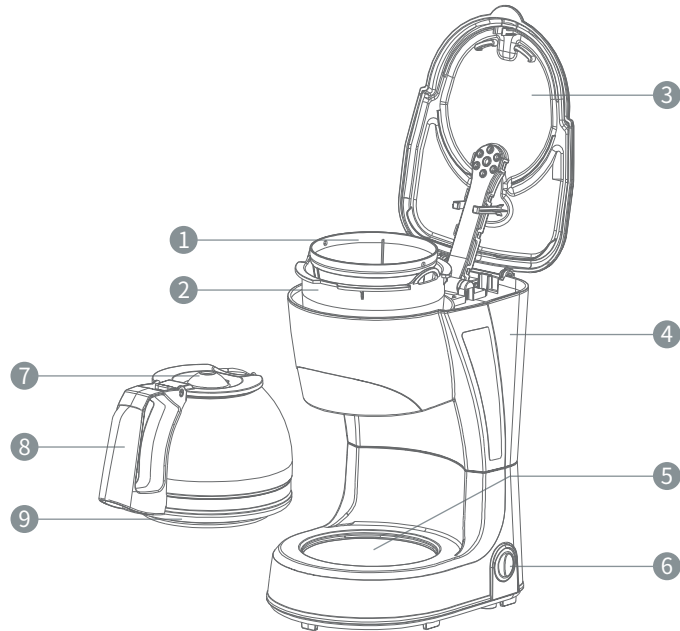

Re.	Description	Re.	Description	Re.	Description
1	Filter	4	Water tank	7	Carafe lid
2	Funnel	5	Keeping warm plate	8	Carafe handle
3	Top cover	6	Power switch	9	Glass carafe

## 3. IMPORTANT SAFEGUARDS

Read these instructions carefully and keep it for future use. If this appliance is passed to a third party, then these instructions must be included.

Before using the electrical appliance, some basic precautions should always be followed including the following:

- 1. Read all instructions.
- 2. Do not touch hot surfaces. Use handles or knobs.
- 3. To protect against fire, electric shock and injury to persons do not immerse cord, plugs, base or appliance in water or other liquid.
- 4. Close supervision is necessary when any appliance is used by or near children.
- 5. Unplug from outlet when either the appliance or display clock is not in use, and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- 6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- 7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
- 8. Do not use outdoors (this item may be omitted if the product is specifically designed for outdoor use).
- 9. Do not let cord hang over edge of table or counter, or touch hot surfaces.

- 10. Do not place on or near a hot gas or electric burner, or in a heated oven.
- 11. To disconnect, turn any control to off position, then remove plug from wall outlet.
- 12. Do not use appliance for other than intended use.
- 13. Special instructions covering lid placement and removal. Wording may vary.
- 14. Do not clean container with cleansers, steel wool pads, or other abrasive material.
- 15. Scalding may occur if the lid is removed during the brewing cycles.
- 16. A. The container is designed for use with this appliance. It must never be used on a range top. (Unless specific instructions for use on a range top are provided and include the precautions to be observed.)  
B. Do not set a hot container on a wet or cold surface.  
C. Do not use a cracked container or a container having a loose or weakened handle.  
D. Do not clean container with cleansers, steel wool pads, or other abrasive material.  
E. Scalding may occur if the lid is removed during the brewing cycles.
- 17. The instructions for all appliances shall include:
  - a statement that the heating element surface is subject to residual heat after use.

**SAVE THESE INSTRUCTIONS**  
THIS PRODUCT IS FOR HOUSEHOLD USE ONLY .

## 4. CORD & PLUG INSTRUCTION

### 4.1 SPECIAL NOTES ON PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet in only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

### 4.2 SHORT CORD INSTRUCTION

 
- a) A short power-supply cord (or detachable power-supply cord) is provided to reduce the risk of entanglement or tripping over a long cord.
- b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- c) If a longer detachable power-supply cord or extension cord is used:
  - 1) The marked electrical rating of the cord set or extension cord should be at least as large as the electrical rating of the appliance;
  - 2) The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

## 5. OPERATION OF YOUR COFFEE MACHINE


### 5.1 BEFORE FIRST USE OR A LONG TIME NOT USE

For a better taste and good for your health, we suggest you to rinse the machine and release the water out.

(1) Check that all accessories are complete and the coffee maker is not damaged.

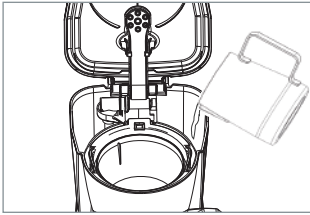

 (2) Fill the water tank ④ with clean, room temperature water, close the top cover. (NOT exceed the “MAX” line).

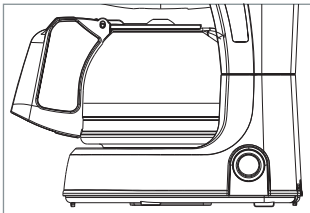


(3) Start the machine and let brew all the water in the water tank ④. (No need to add coffee powder).


### 5.2 HOW TO MAKE COFFEE



 
(1) Place the coffee maker on a flat surface.

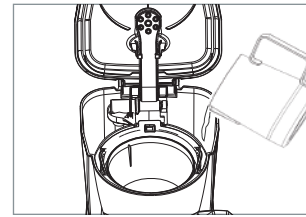

 (2) Open the top cover ③ and fill the water tank ④ with clean room temperature water. The quantity of water need corresponding to the final quantity of coffee you want. The water level should not exceed MAX level as indicated on the water level indicator.

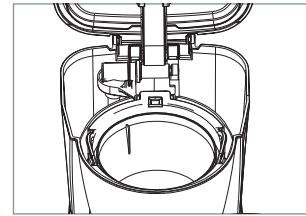


 (3) Place the funnel ② into funnel holder and make sure the funnel ② is assembled in place, and then place the filter into the funnel.

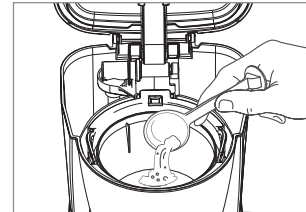


(4) Add proper coffee powder into filter ①, and make sure the quantity of coffee powder matches the quantity of water you add. Finally, close the top cover ③.

 
TIPS: 10g powder ( around 2 flat spoons ) for 1-cup coffee recommended, but you may adjust according to personal taste. Please note that 40g coffee powder is the maximum.

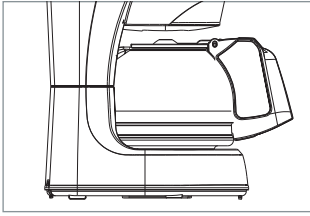

 (5) Insert glass carafe ⑨ with carafe lid ⑦ in place onto warming plate horizontally, ensure center line of carafe aligns with that of funnel ②.

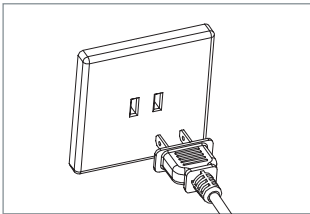

 (6) Plug the unit into an outlet.

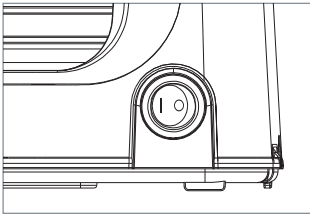

(7) Press power switch ⑥, the indicator in it will be illuminated and the coffee maker will begin working.

△Note: The coffee maker is designed with a pause-and-serve feature, if you wish, at any time during brewing cycle, you can temporarily remove glass carafe ⑨ to pour and serve a cup of hot coffee. The brewing cycle will not be interrupted and no coffee will drip from the coffee maker, simply put again glass carafe ⑨ onto warming plate to restart the brewing cycle, but do not remove glass carafe ⑨ for longer than 30s.

(8) The brewing cycle will automatically stop after finishing all the water in the water tank.

(9) Remove out glass carafe ⑨ to serve when finish brewing (about one minute later after the coffee stops dripping out).

△Note: The coffee you get will less than the water you have added, as some water is absorbed by coffee powder.

△CAUTION: When pour coffee, the momentary inclined angle of glass carafe ⑨ shall not be more than 45 degree from the vertical position, you shall pour the coffee slowly until the glass carafe ⑨ is empty, otherwise the coffee in the glass carafe ⑨ will rush to the bottom of carafe lid ⑦, and the coffee will flow out from two edges of lid !

(10) After brewing, the coffee maker will automatically switch to the warming mode, which will continue to keep your coffee warm until you turn off the coffee maker. It is suggested that warming time shall be not more than 1 hour. For an optimum coffee taste, serve it just after brewing.

(11) Always turn the coffee maker off and unplug the appliance when not in use.

△Note: Be careful when pouring the coffee, the temperature of the freshly made coffee is very high, which may hurt you.

## 6. CLEANING AND MAINTENANCE

### 6.1 DAILY TIPS FOR CLEANING AND MAINTENANCE

⚠CAUTION: Be sure to unplug this appliance before cleaning. To protect against electrical shock, do not immerse cord, plug or unit in water or liquid. After each use, always make sure plug is first removed from wall outlet.

(1) Clean all detachable parts after each use with clean water. Use a clean damp cloth to scrub the body and bottom of the product. It is not recommended to use water to rinse the body and bottom of the product. Pay attention to keep the bottom and base of the product clean and avoid stagnant water.

⚠Note: Do not attempt to clean the inside of water tank ④, as this will leave a residue of lint and may clog your coffee maker, simply rinse with cold water periodically.

(2) Water droplets may buildup in the area above the funnel and drip onto the product base during brewing. To control the dripping, wipe off the area with a clean, dry cloth after each use of the product.

(3) Keep all clean parts on the machine for next use.

(4) Any other repairs should be performed by an authorized service representative.

### 6.2 REMOVING MINERAL DEPOSITS

To keep your coffee maker operating efficiently, you should clean away the mineral deposits left by the water regularly according to the water quality in your area and the frequency use the appliance, the detail is as follows:

- (1) Fill the water tank ④ with water and citric acid to the MAX level (The rate of citric acid and water is 1:100).
- (2) Place the glass carafe ⑨ on the keeping warm plate, pay attention to let center line of carafe aligns with that of brew basket.
- (3) Make sure the filter ① is free of coffee powder.
- (4) Press power switch ⑥, the indicator will be illuminated. The coffee maker will begin working.
- (5) Brew about two cups of water.
- (6) Press the power switch ⑥ again to stop the coffee maker immediately, left the citric acid deposit in it at least 15 minutes.
- (7) Repeat the steps of 4-6 at least 3 times, then brew until no citric acid is left in the tank.
- (8) Refill the water tank ④ with clean water to the MAX level and brew until no water is left in the tank.

## 7. TIPS FOR PERFECT BARISTA

- (1) Always use clean, room temperature water in the coffee maker.
- (2) For an optimum coffee taste, buy whole coffee beans and finely grind them just before brewing.
- (3) You must keep the unused coffee powder in a cool, dry place.

(4) Do not reuse coffee powder since this will greatly reduce the coffee's flavor. Reheating coffee is not recommended as coffee is at its peak flavor immediately after brewing.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
The coffee maker cannot work.	The power outlet is not plugged well.	Plug the power cord into a wall outlet correctly, if the appliance still does not work, please contact with the authorized service facility for repairing.
Coffee overflow	1. Overfill coffee powder	10g powder around 2 flat spoons for 1-cup coffee recommended. Do not exceed 40g.
	2. Use filter paper and filter ❶ at the same time.	Use either filter paper or filter ❶ (the two cannot be used at the same time)
	3. Misplacement of glass carafe ❷	Fully insert to contact the bottom of the valve. Do not open the carafe lid ❸.
	4. Glass carafe ❷ is taken away for more than 30s during the brewing process.	The glass carafe ❷ should not be taken away for more than 30 seconds during the brewing process
No water from the coffee machine	Need to clean and descaling.	To descale and more details refer to "REMOVING MINERAL DEPOSITS".

**Do not take apart the appliance by yourself if the cause of failure is not found, it's better to contact certified serving center.**

## 9. ENVIRONMENT FRIENDLY DISPOSAL

### Correct Disposal of this product

You can help protect the environment! Please remember to respect the local regulations: hand in the non-working electrical equipment to an appropriate waste disposal center.