

Gevi



COFFEE MAKER INSTRUCTION MANUAL

GECME022-U



CONTENTS

1. WELCOME.....	2
2. DESCRIPTION OF THE APPLIANCE.....	2
3. IMPORTANT SAFEGUARDS.....	3
4. CORD & PLUG INSTRUCTION.....	5
4.1 SPECIAL NOTES ON PLUG.....	5
4.2 SHORT CORD INSTRUCTION.....	5
5. ABOUT THE COLOR OF INDICATOR LIGHTS.....	6
6. MAIN OPERATION FUNCTION INSTRUCTION.....	6
6.1 BEFORE FIRST USE OR A LONG TIME NOT USE.....	6
6.2 HOW TO MAKE ESPRESSO.....	10
6.2.1 CUSTOMIZE THE AMOUNT OF ESPRESSO.....	10
6.2.1.1 THE STEP OF OPERATION.....	10
6.2.1.2 THE STEP OF RESTORE THE DEFAULT SETTING.....	13
6.2.2 MAKE ONE CUP/TWO CUPS OF ESPRESSO.....	14
6.2.3 TROUBLESHOOTING DURING THE BREWING.....	16
6.2.4 HOW TO CLEAN THE SEAL RING.....	17
6.2.5 FROTH MILK AFTER BREWING ESPRESSO.....	18
6.3 HOW TO MAKE MILK FOAM.....	18
6.3.1 THE STEP OF OPERATION.....	18
6.3.2 HOW TO CLEAN THE STEAM NOZZLE.....	20
6.3.3 BREW ESPRESSO AFTER MILK FROTHING.....	21
7. CLEANING AND MAINTENANCE.....	21
7.1 DAILY TIPS FOR CLEANING AND MAINTENANCE.....	21
7.2 CLEANING MINERAL DEPOSITS.....	22
8. TIPS FOR PERFECT BARISTA.....	24
9. TROUBLE SHOOTING.....	25


1. WELCOME

Thanks for purchasing our Gevi products. Gevi has focused on creating perfect home appliances for our customers. In the past few years, it took us time to do lots of research and many prototypes to achieve our goal. We would like to give you a different user experience. If you want FAQs and more information, please feel free to contact us.

2. DESCRIPTION OF THE APPLIANCE

MODEL: GECME022-U

Electrical parameters: 120V~ 60Hz 1350W

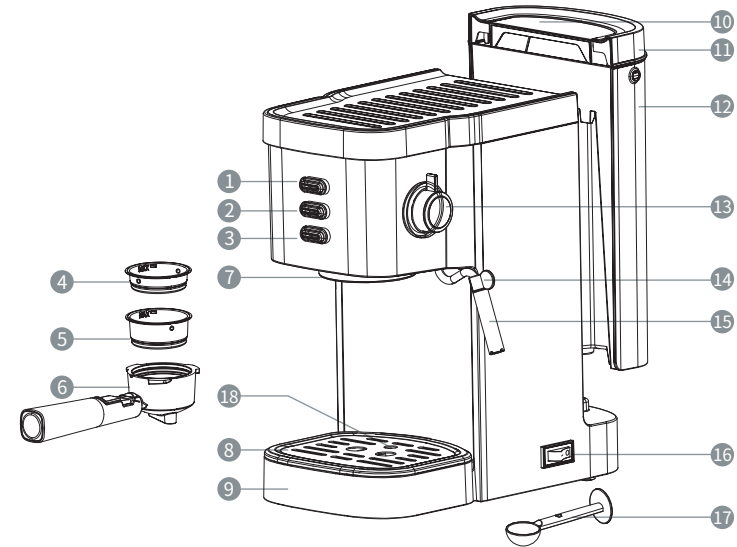

Re.	Description	Re.	Description	Re.	Description
1	Manual dose button	7	Filter holder	13	Espresso/Steam knob
2	Single cup button	8	Removable cup shelf	14	Steam valve
3	Double cup button	9	Drip tray	15	Steam wand
4	Single-cup filter	10	Tank cover	16	ON/OFF Switch
5	Double-cup filter	11	Tank handle	17	Spoon & Tamper
6	Portafilter	12	Water tank	18	Pressure relief hole

3. IMPORTANT SAFEGUARDS

Read these instructions carefully and keep it for future use. If this appliance is passed to a third party, then these instructions must be included.

Before using the electrical appliance, some basic precautions should always be followed including the following:

- 1. Read all instructions.
- 2. Before using, check the output voltage of the wall outlet should be correspond to the rated voltage marked on the appliance' s rating plate.
- 3. To protect against fire, electric shock and injury, please do not immerse cord and plug into water or other liquid.
- 4. Unplug from wall outlet before cleaning and when it is not in use. Allow the appliance to cool down completely before taking off, attaching components or cleaning.
- 5. Do not operate the appliance with damaged power cord or plug after the equipment malfunctions, falls or operates the equipment in any way causing damage. Return it to the nearest authorized service for inspection, repair and electrical or mechanical adjustment.
- 6. Using accessories not recommended by the manufacturer may result in fire, electric shock or injury.
- 7. Place the appliance on flat surface or table, do not hang power cord over the edge of table or counter.
- 8. Ensure the power cord not touch any hot surface of the appliance.
- 9. Do not place the coffee maker on hot surface or beside fire in order to avoid damage.

- 10. To disconnect, turn off all control buttons, then unplug from wall outlet. When unplug the appliance, always hold the plug and do not pull the cord directly.
- 11. Do not use the device for other purposes than its intended uses and place it in a dry area.
- 12. Close supervision is necessary when your appliance is being used by or near children.
- 13. Be careful not to get burned by the steam.
- 14. Do not touch the hot surface of the steam wand 15 and filter holder 7 when boiling directly. Use handle or knobs.
- 15. Connect plug to wall outlet before using and turn all buttons off before the plug being removed from wall outlet.
- 16. Relieve pressure through steam wand 15 before removing port-filter 6 .
- 17. This appliance is not intended for being used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 18. Children should be supervised to ensure that they do not play with the appliance.
- 19. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - bed and breakfast type environments.
- 20. Do not use outdoors.

—21. Do not place on or near a hot gas or electric burner, or in a heated oven.

SAVE THESE INSTRUCTIONS

THIS PRODUCT IS FOR HOUSEHOLD USE ONLY .

4. CORD & PLUG INSTRUCTION

4.1 SPECIAL NOTES ON PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet in only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

4.2 SHORT CORD INSTRUCTION

- a) A short power-supply cord (or detachable power-supply cord) is provided to reduce the risk of entanglement or tripping over a long cord.
- b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- c) If a longer detachable power-supply cord or extension cord is used:
 - 1) The marked electrical rating of the cord set or extension cord should be at least as large as the electrical rating of the appliance;
 - 2) The power cord should be arranged so that it will not dangle on the countertop or desktop, so as not to be pulled by children or trip over accidentally;


5. ABOUT THE COLOR OF INDICATOR LIGHTS

- 1. Blue light represent the preheating and making espresso status.
- 2. White light represent the frothing milk status.


6. MAIN OPERATION FUNCTION INSTRUCTION

6.1 BEFORE FIRST USE OR A LONG TIME NOT USE

For a better taste and good for your health, we suggest you to rinse the machine and release the water out.

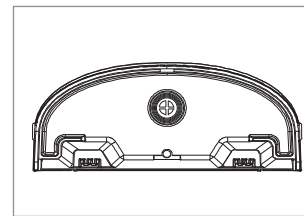


(1) Remove the tape on the water tank **12** valve.

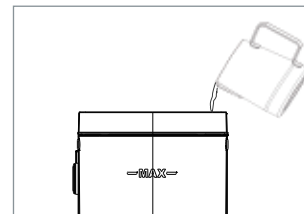


(2) Fill the water tank **12** with clean, room temperature water. NOT exceed the “MAX” line.

△Note: The appliance is supplied with a detachable water tank **12** for easy filling and cleaning, you can fill the water tank **12** firstly, and then put it in the appliance.

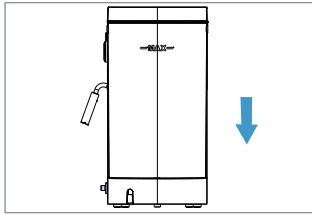


(3) Close the tank cover 10, and put the water tank 12 on the back of coffee maker.


△Note: Set up the water tank vertically and align the buckles to the hole on the back of the machine, and press it down to be parallel to the top of the machine.

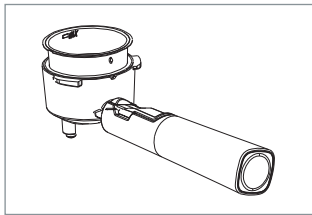

(4) Fix double-cup filter 5 into portafilter 6 (no coffee powder in portafilter 6).

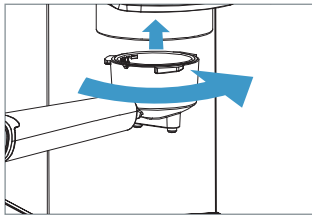


(5) Insert the portafilter 6 into the appliance in the flat position and turning anti-clockwise from the “O” position to “lock” position.

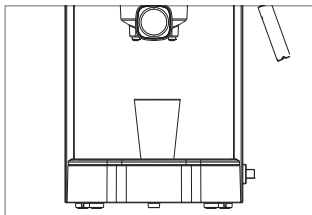


(6) Place a cup on removable cup shelf 8.


△Note: The appliance is not equipped with any jug, please use your jug or coffee cup.

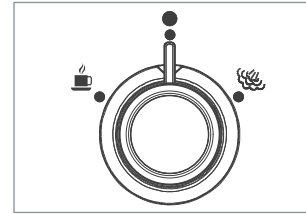


(7) Make sure the espresso/steam knob 13 is in off-position.

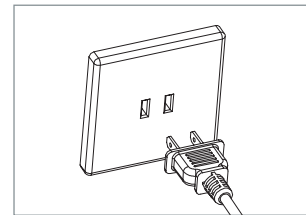


(8) Plug in.

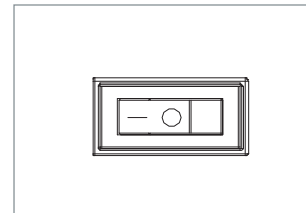


(9) Press ON/OFF Switch 16 to the “—” position. 3 buttons start to blink blue light slowly. The appliance will start heating.

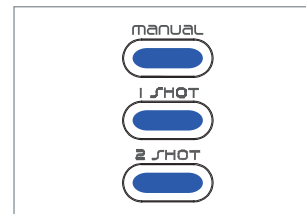


(10) When 3 button's light keep blue fixed and the appliance pass to ready condition.

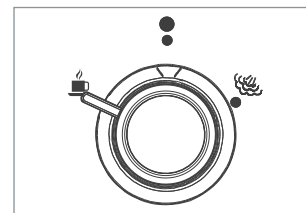


(11) Turn the Espresso/Steam knob 13 to the espresso function icon.

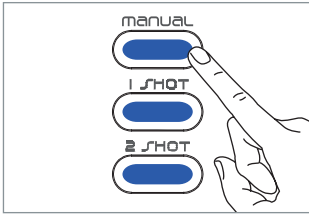


(12) Press the Manual dose button ①, then the Manual dose button ① light will blink blue light slowly, other two buttons don't light up.

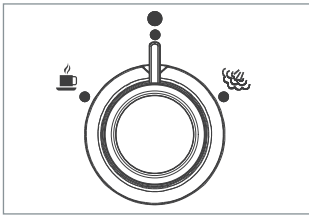

(13) After a while, water will flow out. When it flow out 150mL-200mL water, the machine will stop automatically. All 3 button's light keep blue fixed when the brewing is finished. Rotate the Espresso/Steam knob ⑬ back to off-position. Pour away the water on the cup.

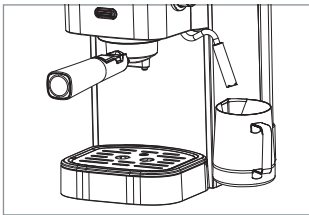

(14) Move the cup under the steam wand ⑮.

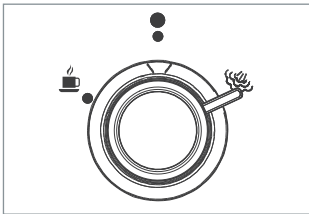

(15) Rotate the steam control knob ⑬ to the steam function icon for 10 seconds, there will be water coming out from the steam wand ⑮. Be careful of the hot steam. Then rotate the Espresso/Steam knob ⑬ back to off-position. Pour away the water of the cup.

△Note: There may be noise when pumping the water on the first time or when you don't use the appliance for a long time, it is normal, the appliance is releasing the air inside. After about 20s, the noise will disappear.

It's also recommended to release some water before brewing coffee at the first time or when you don't use the appliance for a long time.


6.2 HOW TO MAKE ESPRESSO

To make a good Espresso, we recommend you to preheat all the parts, like portafilter ⑥, single-cup filter ④, double-cup filter ⑤ and your cup, so you can better enjoy the taste flavour of your coffee.


6.2.1 CUSTOMIZE THE AMOUNT OF ESPRESSO

You can customize the amount of single cup/short dose according to your own needs from 25mL to 60mL, while double cup/long dose is 60mL to 130mL.

6.2.1.1 THE STEP OF OPERATION

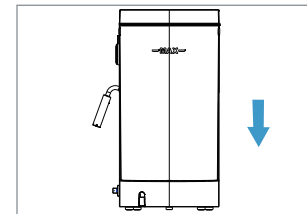


(1) Fill the water tank ⑯ with clean, room temperature water in the coffee maker. NOT exceed the "MAX" line. (If you had operated the machine just now, skip this step.)

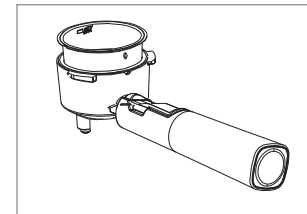




(2) Fix corresponding single-cup filter ④/ double-cup filter ⑤ into portafilter ⑥, make sure the dot on the filter aligns with groove in the portafilter ⑥, and add corresponding coffee powder to

single-cup filter ④/ double-cup filter ⑤ with the spoon & tamper ⑰.

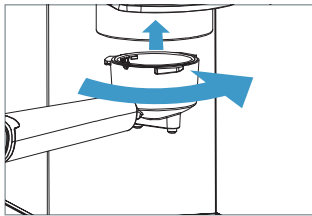△Note: A spoon of flat coffee powder is approximately equal to 7g. Collect the coffee powder with the spoon and shake it gently to make the surface flat, the amount of coffee powder is around 7g. One spoon coffee powder (7g) can make one cup of top-grade coffee, while two spoons (14g) is two cups of top-grade coffee. Tamp the coffee powder gently below the the MAX line of portafilter. Don't tamped the coffee powder too firmly.




(3) Insert the portafilter ⑥ into the appliance in the flat position and turning anti-clockwise from the “” position to “” lock position.

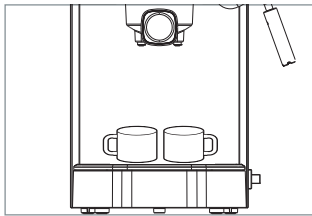


(4) Place corresponding espresso cup on cup shelf ⑧.


△Note: The appliance is not equipped with any jug, please use your jug or coffee cup.

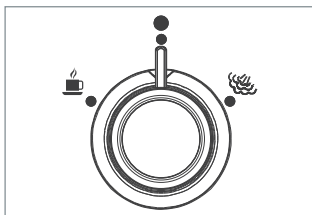


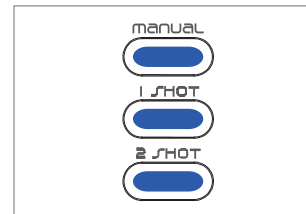
(5) Make sure the espresso/steam knob ⑬ is on off-position.

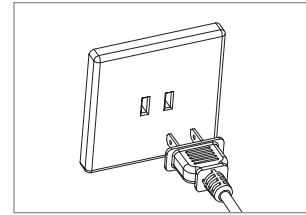


(6) Plug in.

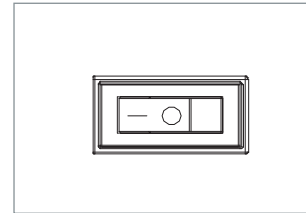


(7) Press ON/OFF Switch ⑯ to the “” position. 3 buttons start to blink blue light slowly. The appliance will start heating.



(8) When 3 button's light keep blue fixed and the appliance pass to ready condition.

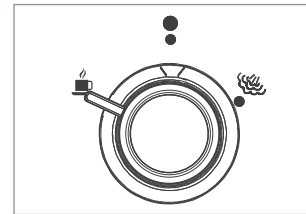


(9) Turn the Espresso/Steam knob ⑬ to the espresso function icon.

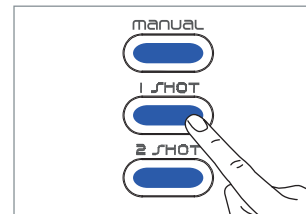

(10.1) Customize the amount of single cup/short dose.


Long press the Single cup button ② for 2 seconds to enter into the mode of setting the dispensing amount. Press single

cup button ② to start. After get the desired amount of coffee, press single cup button ② again to stop.

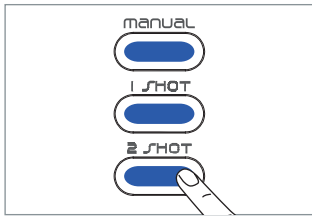


(10.2) Customize the amount of double cup/long dose.

Long press the double cup button ③ for 2 seconds to enter into the mode of setting the dispensing amount. Press double cup button ③ to start. After get the desired amount of coffee, press double cup button ③ again to stop.

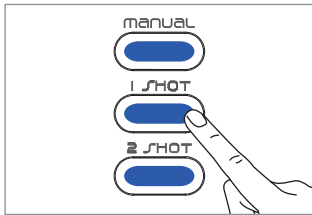

(11) Save the new setting.

Press the corresponding cup button within 15 seconds, the corresponding cup button will blink white light for 3 times. Then the machine will automatically back to ready mode, 3 button's light keep blue fixed, the new settings will be saved.

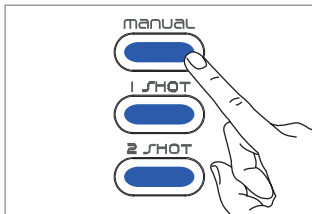

(12) Back to the ready without save.


Press the Manual dose button ① within 15 seconds. The Manual dose button ① will blink white light for 3 times, and the machine will be back to ready mode without saving the new settings.

6.2.1.2 THE STEP OF RESTORE THE DEFAULT SETTING

Function	Operation	Light
Restore the single cup default setting	1. Turn the Espresso/Steam knob ⑬ to the espresso function icon. 2. Hold and long press together single cup button ② and Manual dose button ① from the ready mode.	


Function	Operation	Light
Restore the double cup default setting	1. Turn the Espresso/Steam knob ⑬ to the espresso function icon. 2. Hold and long press together double cup button ③ and Manual dose button ① from the ready mode.	
Restore the single cup and double cup default setting simultaneously	1. Turn the Espresso/Steam knob ⑬ to the espresso function icon 2. Long press Manual dose button ① from the ready mode.	
After the button flash white light once, all the buttons will keep blue light fixed, the machine will back to ready mode. The machine is restored to the default value.		

6.2.2 MAKE ONE CUP/TWO CUPS OF ESPRESSO

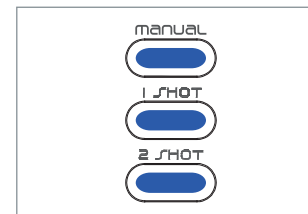


(1) Start from the appliance's ready condition. Fix corresponding filter into portafilter ⑥, make sure the dot on the filter aligns with groove in the portafilter ⑥, and add corresponding coffee powder

to filter with the spoon & tamper ⑰. Insert the portafilter ⑥ into the appliance and place a cup on removable cup shelf.

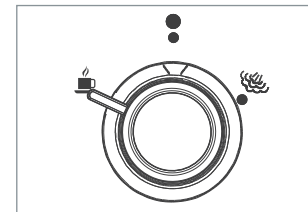


(2) Turn the Espresso/Steam knob ⑬ to the espresso function icon.

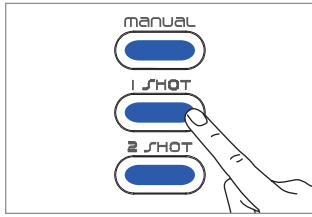


(3) Make one cup of espresso: Press single cup button ②, the single cup button ② will blink blue light slowly. After a while, coffee will flow out. The appliance will automatically stop working when the

coffee-brewing is finished. Then turn the espresso/steam knob ⑬ back to off-position.

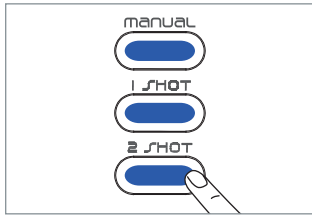

(4) Make two cups of espresso: Press double cup button ③, the double cup button ③ will blink blue light slowly. After a while, coffee will flow out. The appliance will automatically stop working when the


coffee-brewing is finished. Then turn the espresso/steam knob ⑬ back to off-position.

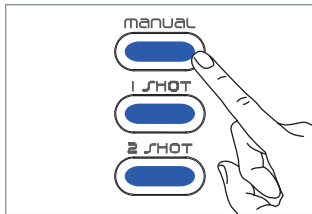

(5) Free amount of espresso: Press Manual dose button ①, the Manual dose button ① will blink blue light slowly. After a while, coffee will flow out. You can press it to stop when you get your preferred amount of

espresso. Then turn the espresso/steam knob ⑬ back to off-position.

△Note: The machine will stop automatically stop when it flow out 150-200mL water/coffee.

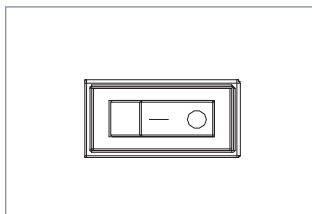

(6) Your coffee is ready now. Press the ON /OFF Switch ⑯ to the “O” to switch off.

△Note: If there is no any operation within 15 minutes, the appliance will get into standby mode automatically.


6.2.3 TROUBLESHOOTING DURING THE BREWING



- (1) When the machine starts to work, there will be some noise comes out from the machine as it is pumping the water with a high pressure.
- (2) While during operation, if there is suddenly a loud noise from the machine, which may due to not enough water in the water tank ⑫ for pumping.
- (3) During brewing, when you find the the coffee leaks out from outer side of portafilter ⑥ or doesn't flow smoothly, it have several reasons as below and you should stop the operation by resetting the button ① and rotate the Espresso/Steam knob ⑬ back to off-position. Remove the portafilter ⑥ and clean the coffee powder and don't use the inside coffee powder again.


Possible Cause	Solution
1. There is some coffee powder on the edge of portafilter ⑥.	Clean coffee powder on the edge of the portafilter ⑥.
2. The portafilter ⑥ is not installed properly.	Re-install the portafilter ⑥ correctly.
3. The coffee powder is too fine.	Do not use coffee powder that is too fine.
4. The coffee powder on the portafilter ⑥ is pressed too tightly.	Press the coffee powder lightly to the max line.
5. The two outlet holes of the portafilter ⑥ is blocked.	Remove the filter and clean the two outlet holes under the portafilter ⑥.
6. The holes of the filter is blocked.	Soak the filter in clean water for about half an hour, then clean it with a brush.

6.2.4 HOW TO CLEAN THE SEAL RING

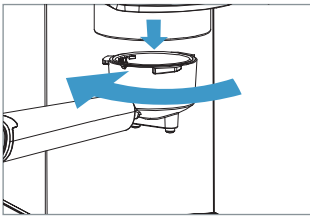
△Note: (Please mind the hot water and operate carefully)
As the seal ring of the water outlet is designed to prevent from leaking, once there is too much coffee powder left, the seal ring will be blocked. If the seal ring is blocked, it will lead to the espresso leakage or splash when brewing espresso. For this reason and for healthier, we suggest you to clean it immediately with hot water from the brewing function. If it is not cleaned in time, it will produce a bad smell.




(1) Uninstall the portafilter ⑥ in parallel from the coffee outlet from the lock direction “” to “”, then put it down. Pour away the coffee powder.

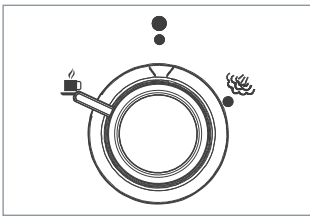


(2) Turn the Espresso/Steam knob ⑬ to the espresso function icon.

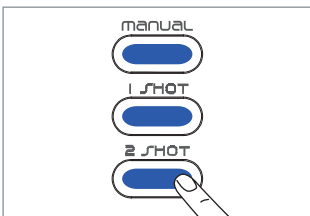

(3) Press any button. (Manual dose button ① or Single cup button ② or Double cup button ③) The corresponding light will be illuminated. The water will come out and flush out the coffee powder inside.

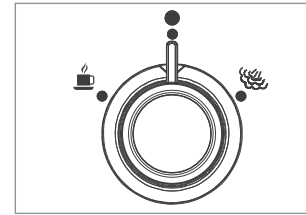

(4) Rotate the Espresso/Steam knob ⑬ back to off-position.

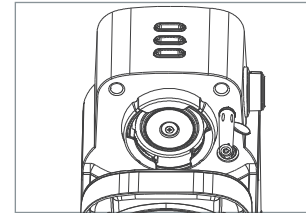

(5) Rinse the seal ring of the water outlet with cloth.


6.2.5 FROTH MILK AFTER BREWING ESPRESSO

After making the espresso through the steps above (6.2 HOW TO MAKE ESPRESSO), you can continue to froth milk, please refer to the following steps (6.3 HOW TO MAKE MILK FOAM).

6.3 HOW TO MAKE MILK FOAM


For a better taste and good for your health, we suggest you to rinse the pitcher and release some water out from the steam wand ⑰.

6.3.1 THE STEP OF OPERATION

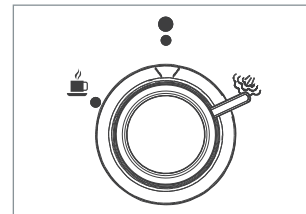


(1) Take the cup under the steam wand ⑰. Rotate the steam control knob ⑬ to the steam function icon for 10 seconds, there will be water coming out from the steam wand ⑰. Be careful of the hot ste-


am. Then rotate the Espresso/Steam knob 13 back to off-position. Pour away the water of the cup.

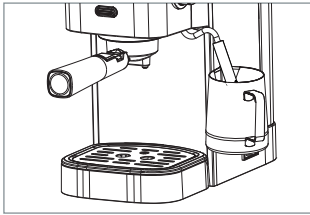


(2) Prepare a pitcher with about 100mL of milk. We recommend to use whole milk about 41-45°F. Take the pitcher with the milk and insert steam wand 15 into the milk.

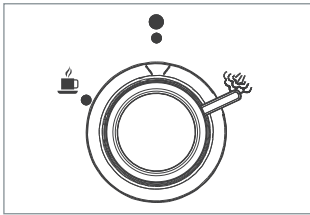


(3) Rotate the espresso/steam knob 13 to steam position from the ready mode, steam will come out from the steam wand 15.

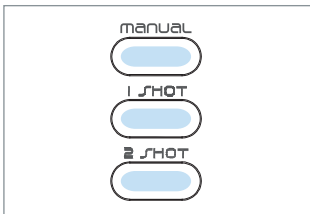


(4) Three button's light keep light fixed, the appliance is in the frothing milk status.

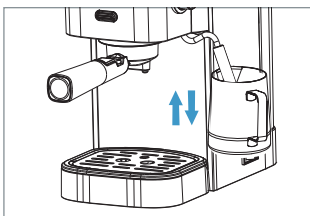

(5) Froth milk by moving vessel round from up to down.

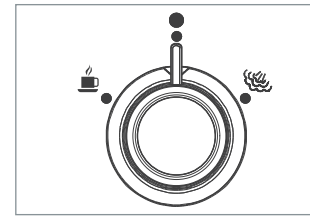

(6) After the milk increase in volume by two times or your required purpose is reached, you can turn the espresso/steam knob 13 to off-position.

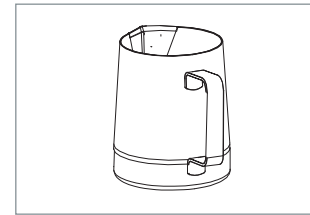

(7) Take away the pitcher. Your milk foam is ready now.




(8) When you rotate the espresso/steam knob 13 back to off-position, the pressure relief hole 18 will make a loud noise. It is because the machine is relieving the pressure, which is normal and not a problem.

problem.

△Note: During the milk frothing, if there is suddenly a noise from the machine or the steam become weak, please check if there is enough water in the water tank 12 and add water in time. When the water left the water tank 12 is going to finish, it will produce a louder noise. After adding water, it will operate as usual.


6.3.2 HOW TO CLEAN THE STEAM NOZZLE

△Note:(Please mind the hot water and operate carefully)

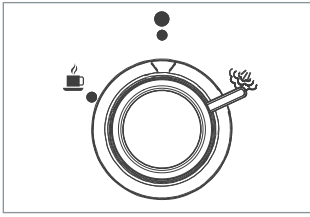

(1) To avoid blocking the steam wand (15), we suggest to clean the steam wand (15) immediately after finish frothing milk. Rotate the espresso/steam knob (13) to steam position. If the steam is

weak, check whether the hole of the steam wand (15) is blocked. If it is not cleaned in time, it will produce a bad smell. You can use a cleaning pin to clean and unblock the steam pipeline.

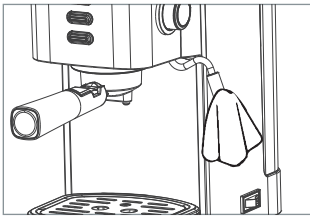

(2) Press and hold the steam wand (15), pull out the steam wand (19). Clean the steam wand (19) with wet sponge.

6.3.3 BREW ESPRESSO AFTER MILK FROTHING

After making the milk foam through the steps above (6.3.1 THE STEP OF OPERATION), the machine will relieve the pressure automatically, then you can continue to make espresso.

7. CLEAN AND MAINTENANCE

7.1 DAILY TIPS FOR CLEANING AND MAINTENANCE


△CAUTION: Be sure to unplug this appliance before cleaning and let the appliance cool down completely. To protect against electrical shock, do not immerse cord, plug or unit in water or liquid.

(1) A clean coffee maker is essential for making great-taste coffee. Clean all the accessories each time and clean the coffee maker's water scale regularly as specified in the "REMOVING MINERAL DEPOSITS" section.
(2) Clean the seal ring of the filter holder (7) each time immediately with hot water using the brewing function after making coffee.


△ Note: Do not use detergent or stainless steel scrubber/brush to clean the portafilter (6), because the surface of the portafilter (6) is coated, and the detergent/brush will accelerate the oxidation of the portafilter (6) surface. Therefore, we recommend cleaning the portafilter (6) with just water and rag.

7.2 CLEANING MINERAL DEPOSITS


To make sure your coffee maker operate efficiently, internal pipe clean and the peak flavor of coffee, it is necessary to clean the coffee maker's water scale periodically.

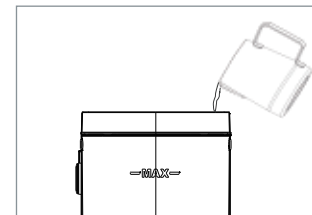


(1) Pour a 50/50 mixture of white vinegar and cold tap water into the water tank (12).

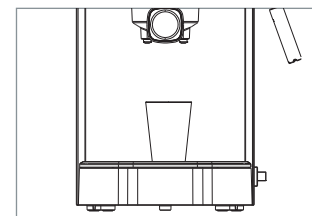


(2) Put the cup on the removable cup shelf (8).

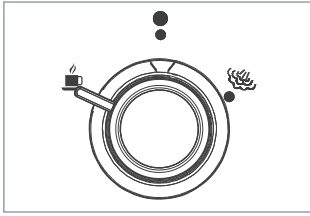


(3) When 3 button's light keep blue fixed, turn the espresso/steam knob 13 to espresso side.

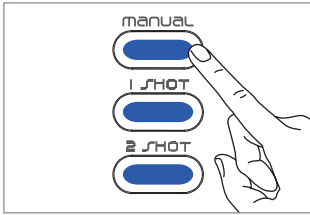


(4) Press the Manual dose button 1. The Manual dose button 1 will blink blue light slowly.

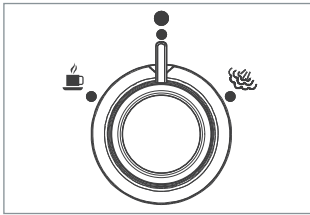


(5) After the appliance flow 200mL mixture of white vinegar and water, press Manual dose button 1 to stop and 3 buttons keep blue light fixed. Turn the espresso/steam knob 13 to the off position.

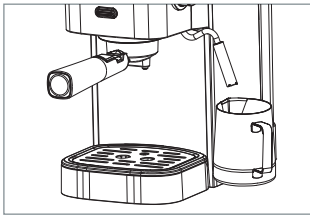

(6) Move the cup under the steam wand 16. Wait for the long blue lights of the 3 buttons.

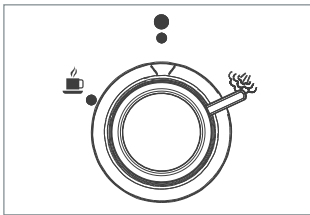

(7) Turn the espresso/steam knob 14 to the steam side to release mixture of white vinegar and water. At that moment, the steam wand 16 will flow out and 3 other buttons blink white light slowly.

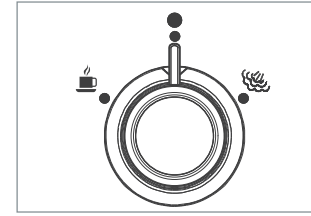

(8) The steam wand 15 will always flow out the mixture of white vinegar and water until you turn the espresso /steam knob 14 to off-position.

(9) Left the mixture of white vinegar and water stay in the appliance for 15 minutes at the first time. At this moment, 3 buttons keep blue light fixed. Repeat the step from 2-7 for three times then the descaling is finished. After finish that, clean the parts (water tank 12, steam wand 15, seal ring of the water outlet) before making coffee. Brew with clean water in the MAX level, repeat steps 2-7 for 1 time around 200mL, then brew until no water is left in water tank 16 before making coffee.

8. TIPS FOR PERFECT BARISTA

- (1) Always use clean, room temperature water in the coffee maker.
- (2) For an optimum coffee taste, buy whole coffee beans and finely grind them just before brewing.
- (3) Grind the bean every time before brew espresso in case you ever used coffee powder. You must keep the unused coffee powder in a cool, dry place.
- (4) Do not reuse coffee powder since this will greatly reduce the coffee's flavor. Reheating coffee is not recommended as coffee is at its peak flavor immediately after brewing.

9. TROUBLE SHOOTING

Problem	Possible Cause	Solution
Water leaks from the bottom of coffee maker.	1. There is much water in the drip tray ⑨.	Please clean the drip tray ⑨.
	2. When the water tank ⑫ is pulled up after use, it is normal that there will be water left on the desk.	As the water outlet at the bottom of the water tank ⑫ is a movable part and it is Not leaking.
	3. The sealing ring of the water inlet hole of the machine base is deformed.	Please contact with the authorized service facility for assistance.
	4.The coffee maker is malfunction.	Please contact with the authorized service facility for assistance.
Acid (vinegar) taste exists in Espresso coffee.	No clean correctly after cleaning mineral deposits.	Clean coffee maker per the content in “ before the first use” for several times.
	The coffee powder is stored in a hot, wet place for a long time. The coffee powder turns bad.	Please use fresh coffee powder, or store unused coffee powder in a cool, dry place. After opening a package of coffee powder, reseal it tightly and store it in a refrigerator to maintain its freshness.
The coffee maker cannot work any more.	The power outlet is not plugged well.	Plug the power cord into a wall outlet correctly, if the appliance still does not work, please contact with the authorized service facility for repair.

Problem	Possible Cause	Solution
Can't make milk froth.	1. Manual dose button ①/single cup button ②/double cup button ③ is a flashing light.	Only after the Manual dose button ①/single cup button ②/double cup button ③ is long on, the steam can be used to froth.
	2.The temperature of the milk is inappropriate.	The milk temperature is about 41-45°F.
	3.Use skim milk.	Use whole milk or semi-skimmed milk.
	4.There is some dirt inside the steam valve ⑭ /steam wand ⑮.	Clean the steam nozzle immediately after use every time with steam valve ⑭/steam wand ⑮.

Do not take apart the appliance by yourself if the cause of failure is not found, it's better to contact certified serving center.