


TOASTER INSTRUCTION MANUAL

GETAE402-U

—

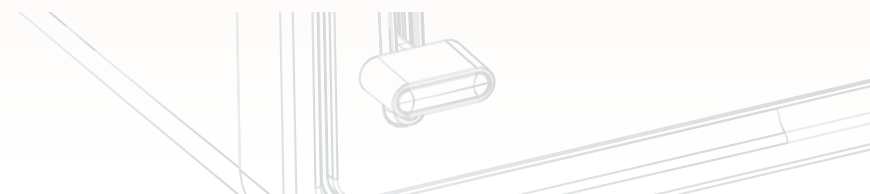

Dear Gevi customer

Thanks for purchasing our Gevi products.

Gevi has focused on creating perfect home appliances for our customers. In the past few years, it took us time to do lots of research and many prototypes to achieve our goal. We would like to give you a different user experience.

If you want FAQs and more information, please feel free to contact us.

IMPORTANT SAFEGUARDS

When using electrical appliance, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the toaster.
3. Do not touch hot surface. Use handles or knobs only.
4. To protect against electrical shock, do not immerse cord, plug, or any part of the toaster in water or other liquid.
5. Close supervision is necessary when it is used by or near children. Allow the equipment to cool down before putting on or taking off parts, and before cleaning the appliance.
6. Unplug unit from outlet when not in use and before cleaning.
7. Do not operate any appliance with a damaged cord or plug or after the equipment is malfunctioning or damaged in any way. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
8. Do not let the cord hang over the edge of table or counter, or touch hot surface.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.

10. Do not operate the appliance for purposes other than its intended use.
11. Do not use outdoors.
12. Be extremely careful when moving the appliance containing hot oil or other hot liquids.
13. Then unplug from wall outlet.
14. Do not insert oversized food, metal foil packages or utensils into the toaster as they may cause fire or electric shock.
15. Bread may burn, therefore toasters must not be used near or below curtains and other combustible materials and must be careful of it.
16. Using accessories not recommended by the manufacturer may cause injuries.
17. Don't attempt to dislodge food when toaster is plugged in.
18. Be sure to take out the bread carefully after toasting to avoid injury.
19. A fire may occur if the toaster is in operation covered or come into contact with flammable materials, including curtains, walls, etc.
20. **WARNING**-To prevent electrical shock, unplug before cleaning.
21. Do not operate when unattended.
22. When heating toaster pastries, always use the lightest toast color setting.

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

NOTES ON THE CORD PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended into a polarized socket in only one way. If the plug is not fully inserted into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

NOTES ON THE CORD


- a) A short power cord (or a separate power cord) should be provided to reduce the risk of being caught in trip over or a long cord.
- b) Longer extension cords can be used, and they can be used if you are careful when using them.
- c) If a long detachable power-supply cords or extension cord is used,
 - I. The marked electrical rating of the detachable power-supply cord or extension cord should be at least as large as the electrical rating of the appliance
 - II. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by

by children or tripped over unintentionally.

III.If the appliance is grounded, the extension cord should be a grounded type 3-core wire;

FEATURES AND FUNCTIONS

Electrical parameters: 120V ~ 60Hz 1800W

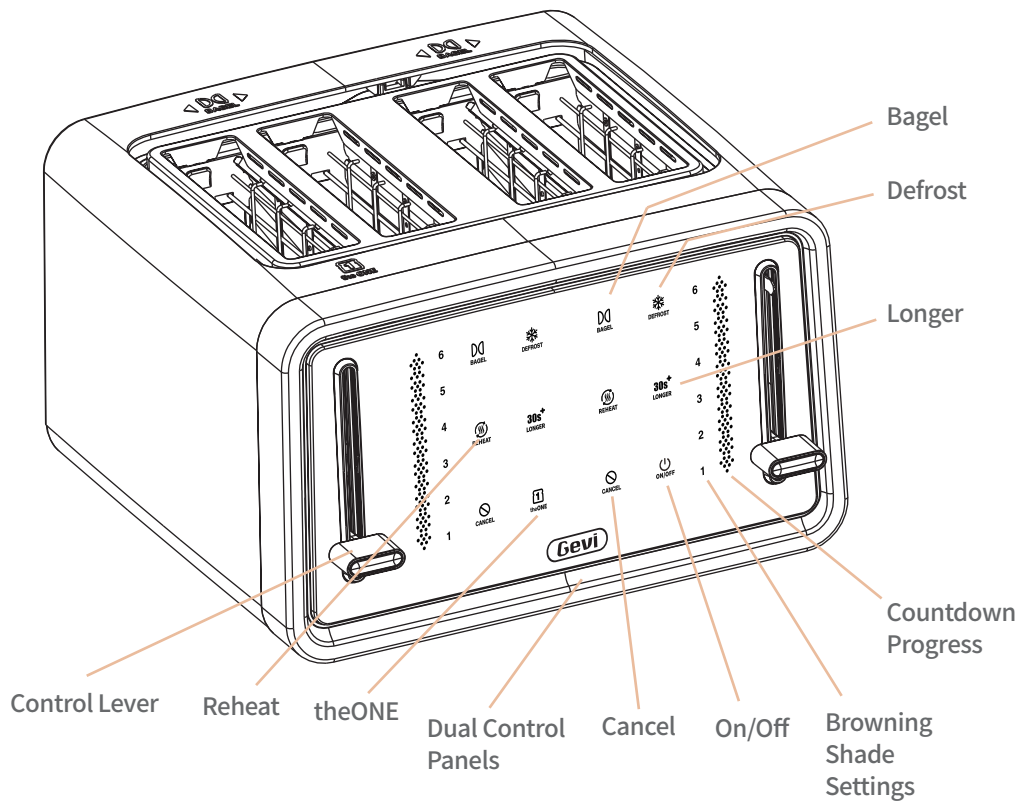

1. Dual Control Panels

Two separate control panels allow you to toast different bread types at the same time perfectly.

2. Control Lever with Observation Function

Press down the lever to begin toasting.

Lift lever at any time and observe the browning shade status without interrupting the toasting cycle.

3. Browning Shade Settings

Touch a number (1–6) to select your desired browning level.

4. Countdown Progress

During operation, the progress mode will count down and let you know the browning rate.

5. Toast (Not Show)

It is designed to toast two sides of the bread.

6. Bagel

It is designed to toast the cut side of the bagel slightly more than the other side.

7. Defrost

It is a longer cycle designed to first defrost and then toast the bread to the desired browning shade.


8. Reheat

It is designed to reheat the bread without toast the browning shade.

9. Longer

It is designed to extend the toasting time by 30 seconds.

10. theONE

It is designed to evenly toast both sides of one slice of bread. “  ” The icon on the top of the toaster will show where to put the bread when only a slice of bread is toasted. Set the shade to a brighter setting than usual.

11. Cancel

It will stop the toasting process and automatically lift the bread.

12. On/Off

Press to turn touchscreen controls on or off.

PRODUCT INTRODUCTION

FOR THE FIRST USE

As there is manufacturing residue or oil remained in the toaster or heat element, it usually emits the odor for the first use. It is normal and will not occur after several times use. Before toasting the first slice of bread it is strongly suggested to operate the appliance following below instructions, except without bread.

OPERATION STEPS

1. The toaster is operated at 120V ~ 60Hz, Rated power 1800W (Each 900W for Left / Right toaster) .
2. Plug in the power cord. All the icons will be shown fully bright in 2 seconds.
3. After 2 seconds, the screen will remain the Power button.
4. Press the Power button, the screen will display the number "6" and its countdown progress, all bright, other icons display half bright, as the default setting is toast function with a 6 shade setting.

NOTE: All the semi-bright icons can be selected, and will be fully bright when selected. If the icons are extinguished means could not be selected.

5. Insert slice(s) of bread.
 6. Set the browning level
Choose desired shade setting number 1–6. Browning degree reference as follows:
- | SETTING | COLOR |
|---------|--------|
| 1-2 | light |
| 3-4 | medium |
| 5-6 | dark |
7. Select desired bread functions: Toast(Not Show), Bagel, Defrost,theONE or Reheat.



NOTE: Toast(Not Show), Bagel, Defrost, theONE are the independent function that could not be used in combination. While the Longer function can be used alone or together with other bread functions.

① Toast Function (Not Show)

It is a default function if you did not choose any bread function icons, which is designed to toast two sides of the bread.


② Bagel Function

It is designed to toast the cut side of the bagel slightly more than the other side.

 icon will be fully bright when selected and semi-bright when not selected. A directional icon “” located on the top of the toaster shows you the correct way to insert your bagel. (The cut side should always face away from the center of the pair of toasting slots.)


③ Defrost Function

It is a longer cycle designed to first defrost and then toast the bread to the desired browning shade.

 icon will be fully bright when selected and semi-bright when not selected.


④ Reheat Function

It is designed to reheat the bread without selecting the brown shade setting.

 icon will be fully bright when selected and semi-bright when not selected. All the brown shade number will be extinguished and the whole countdown progress will be fully bright.



NOTE: The Reheat function can NOT be used with Toast / Bagel / Defrost/Reheat/theONE functions.

⑤ Longer Function

It is designed to extend the toasting time by 30 seconds. This function can be selected before and during toasting cycle. The  icon will change from half-bright to full-bright. At the same time, the countdown progress will add a higher shadow to the extra countdown time (unless the countdown progress is already at the top). After the 30-second cycle is completed, the originally selected browning shade cycle will resume.

NOTE: The Longer function can be used on its own with Toast, Bagel, Defrost and theONE functions.

⑥ theONE Function

It is designed to evenly toast both sides of one slice of bread. “  ” The icon on the top of the toaster shows where to put the bread when toasting one slice only. Set the shade to a brighter setting than usual. The  icon will be fully bright when selected, and half-bright when not selected.

NOTE: While heating elements for both slots will turn on, they are configured for best results with one slice at a time with this function.

7. To Begin Toasting

Press the carriage lever until it locks in the down position and toasting will begin.

Under Toast/Bagel/Defrost/theONE function, the Screen Changes:

- The bread function icons and brown shade number with its countdown progress that has been chosen will be fully bright (e.g. Bagel, 5 shade setting) .
- The other brown shade setting number will semi-bright (e.g. Number 1/2/3/4/6).
- The other bread function icons (e.g. Defrost, Reheat, theONE) will be extinguished.

- Longer, Cancel, On/Off icons will semi-bright for choice.


Under Reheat function, the Screen Changes:

- Other bread function icons and all the shade setting numbers will be extinguished.
- The whole countdown progress will be fully bright.
- Cancel, On/Off icons will half-bright for selection.

NOTE: Use controls and carriage lever on the left to toast items in the two left slots. Use controls and carriage lever on the right to toast items in the two right slots.

8. You can Lift lever at any time and observe the browning shade status without interrupting the toasting cycle.
9. To Stop Cycle
When the toasting cycle is finished, the toast will be raised. If you wish to stop the cycle before it is finished, simply touch the Cancel or On/Off button.
- 10 After use, release the device from the electrical outlet.

SLEEP MODE

After 5 minutes with no operation, control panels will turn off, leaving only the On/Off icon. The control panels becomes invisible when unit is in Sleep mode. To wake up your screen, simply to touch  icon or Press start lever to lower position. (In this case, the electromagnetic does not work to heat up the heating element).

MEMORY FEATURE

After wake up from the sleep mode, the screen will display what icons you had selected last time, which is convenient no need to remember your choice. But after unwinding the power cord and power-up again, the screen will return to the default mode (toast function with 6 shade setting).

CAUTION

1. Remove all protective wrapping prior to toasting.
2. If toaster starts to smoke, Press Cancel to stop toasting immediately.
3. Avoid toasting the food with extremely runny ingredients such as butter.

4. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical outlet first. Be sure not to damage the internal mechanism or heating elements when removing bread.
5. The bread slot is only applicable for toasting regular bread slice.

CLEAN AND MAINTENANCE

1. Disconnect the power supply before cleaning.
2. Wipe the outside with soft dry cloth after toaster cools down, never use metal polish.
3. Pull out the crumb tray at the bottom of the toaster and empty it. If used toaster frequently, clean the accumulated bread crumbs at least once a week. Make sure the crumb tray is completely closed before using the toaster again.
4. When not use or storage, the power cord may be wound under the bottom of toaster.