



BLUE SKY

OUTDOOR LIVING

OWNER'S MANUAL
SQUARE FIRE RINGS

FF3636/PCFF3636

Blue Sky can provide elevated ambience, quality and safety to your outdoor living space. Our products are designed to create a practical space to bring people together. Whether you're using Blue Sky products to roast s'mores in your backyard, enjoy a beach bonfire, assist at your tailgate or accompany you on a camping trip, you can rely on their durability and performance. Thank you for your purchase of this Blue Sky fire ring.

CONNECT WITH US

www.blueskyoutdoorliving.com



@blueskyoutdoorliving

Fill in the following information and retain this manual for future reference:

MODEL(S):

DATE OF PURCHASE:

PLACE OF PURCHASE:

RECEIPT NO:



FF3636/PCFF3636

FF3636 (Steel)

PCFF3636 (Steel with Porcelain Coated Finish)

36" Square Fire Ring

36" Sq x 10" H

91.4 cm Sq x 25.4 cm H

FOR YOUR SAFETY

PLEASE READ AND UNDERSTAND ALL SAFETY RULES BEFORE ASSEMBLING AND USING THIS FIRE RING. FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN A HAZARDOUS FIRE, CAUSING PROPERTY DAMAGE OR PHYSICAL INJURY.

RULES FOR SAFE OPERATION

CAUTION: FOR OUTDOOR USE ONLY. DO NOT USE INDOORS.

- For adult use only – do not allow children to use the fire ring. Keep children and pets away from the fire ring while it is in use.
- Use the fire ring on stone, dirt or sand only.
- Do not use on lawns, wooden decks, concrete or asphalt.
- Do not use under a patio roof, low hanging branches, trellis, or overhangs of any kind including covered porches.
- Do not use in windy conditions.
- Do not leave fire unattended at any time.
- Avoid using softwoods such as pine or cedar, because they are likely to throw sparks. The use of seasoned hardwood is recommended.
- Do not burn trash, leaves, paper, cardboard or plywood in fire ring.
- Do not use flammable liquids such as gasoline, alcohol, diesel fuel, kerosene or charcoal lighter to light or relight fires.
- Care should be taken to make sure all combustible material is far enough away from the fire ring to not ignite.
- Always use in accordance with all applicable local and state fire codes.
- Exercise the same precautions you would with any open fire.

- Do not wear flammable or loose clothing when tending an open fire.
- Avoid touching surfaces, as they will be extremely hot.
- Assure fire is completely extinguished before leaving fire ring.
- Any modifications to this appliance may be dangerous and are not permitted.

HELPFUL HINTS

 
 
 
- Do not attempt to move the fire ring once the fire is started.
- Do not place the fire ring in an area where it could be easily tripped over.
- For best results, stack firewood in a pyramid shape for burning.

PARTS LIST

UNPACK PARTS, MAKING SURE ALL PIECES ARE PRESENT BEFORE ATTEMPTING TO ASSEMBLE.

REF	QTY	DESCRIPTION
A	3	Fire Ring Sides
B	1	Fire Ring Side With Support Tube*
C	16	M6 Bolts

* For use with Swing-Away Grill #SAG24

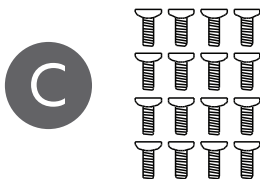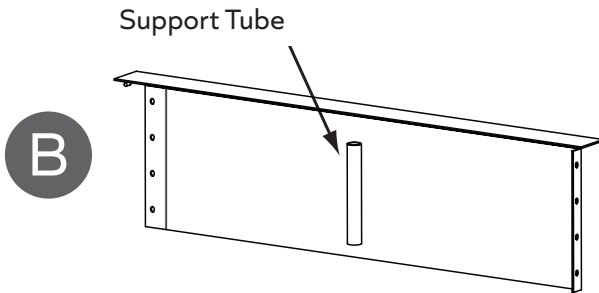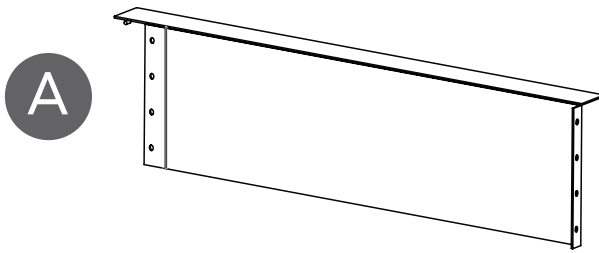

ASSEMBLY

TOOLS REQUIRED

 
10 mm socket or wrench, rake, level

STEP 1

Decide on a location for the fire ring. Make sure the fire ring is a safe distance from all combustible materials. Using a rake, level the area if necessary and remove any dry grass or overhanging tree branches.


STEP 2

Using the sixteen M6 bolts [C] provided, assemble the four pieces of the fire ring [A & B] together to form a square. Make sure the fire ring is level, tight and in the right position.

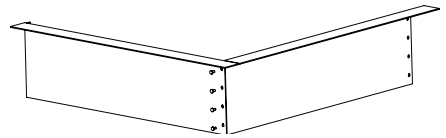

STEP 3

 Stack firewood into fire ring and light the fire.

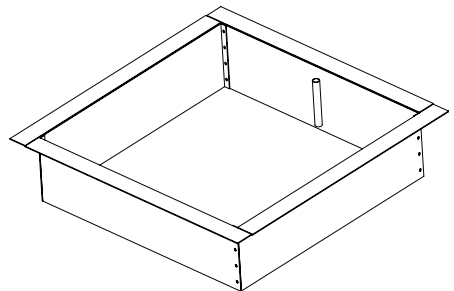



BLUE SKY

OUTDOOR LIVING

Manufactured by:

Quality Craft

Surrey, BC, Canada V3S 5N4

service@blueskyoutdoorliving.com

1-800-459-4409

(Monday to Friday, 8:00 am–4:30 pm, CST)

Made in China

BKOLSFR-02/19