

1. *Prior to inflating your new tent or awning,*

it is imperative to check that each of the valves are correctly tightened to prevent any loss of air, this will also need doing periodically throughout the products life, as valves can work loose over time.

In the peg bag for your product you will have a plastic 'spanner' Valve Tool.



2. Insert Valve Tool into Speed Valve



3. Ensure that you are gripping the rear of the valve (squeeze the tube) to prevent the internal part of the valve from rotating, then tighten valve clockwise until firmly tightened.

**Note—we have removed the air tube for the purpose of clearly showing the valve tightening, there is no need to remove the air tubes from your product to tighten the air valves*

- If you ever encounter a leaking tube with your product, the first step is to try tightening the valve as this will likely cure the leak, if unsuccessful you can submit a warranty claim for a replacement air tube.