

Claymate... Technology that Counts

Wi Card Reset Unit / Club House Programmer

Card Security – Extreme Mode and Default Mode settings. - Background Info.

Wi-Card Software Version 6.x and above features an enhanced Wi-card security mode known as Extreme Mode. Older WI Units operate on Default Mode.

Newer or updated Wi Units can use Extreme Mode or Default Mode.

Your new or refurbished Club House Programmer(CHP) will be in First Time Run and in Extreme Mode when your Master Card is used to activate it for the first time.

If your shooting ground has older Wi Units operating on Software below Version 6, your ground will be operating in Default Mode.

When applying your Master Card (or any WI-card) to the CHP, you will need to select NO when asked "Upgrade to New Card Format?".

To avoid having to repeat the same steps every time, you will need to apply your Master Card to the CHP and then select the "B Administrate" menu and then scroll to Item 16 - Card Security. Use the "Change" button to change the display "Default Mode".

Then remove the Master Card.

The Club House Programmer will then be in Default Mode.

Below is **The Administrate Menu** ... Select **Scroll** to step through the Administrate Menu.

- 1. How many Sales and Ground Cards exist.
- 2. Create or Delete Sales Card(s).
- 3. Create or Delete Ground Card(s) (Groundsman Cards)
- 4. FreePlay Now.... On/Off.
- 5. Lock Timer.... On/Off
- 6. Uplift Ground? Don't, unless you know what you are doing.
- 7. Ground Code is..... your 8 Digit Ground Code.
- 8. View..... Cost Codes.
- 9. Toggle Card Type Change card between Target Based or Cost Based
- 10. USB access off. DO NOT USE
- 11. Reconfigure Programmer. Change the First Time Run Options.
- 12. Serial Number . Displays the CHP Serial No.
- 13. Perform First Time Run. Resets the CHP back to First Time Run.
- 14. Set New Unit ID. You can change the CHP ID No.
- 15. Clear Master Record? **Don't**, unless you know what you are doing.
- 16. Card Security. Extreme or Default. Use the "Change" button to display "Default" then remove the Master Card. The CHP will then be in Default Mode.

Page | 1 www.Promatic.co.uk