



Promatic International Ltd, Hooton Road, Hooton, South Wirral, CH66 7PA  
Tel +44 (0) 151 327 2220 Fax +44 (0) 151 327 7075  
Email [sales@promatic.co.uk](mailto:sales@promatic.co.uk) Website [www.promatic.co.uk](http://www.promatic.co.uk)

## The PROMATIC Hunter 1 Trap ABT Flush Radio

### **Safety First**

Before doing any work on, or near, the Trap, ensure the Trap is switched OFF and UN-COCKED.

### **Installation**

Fit the Receiver to the 7 Pin Socket on the Trap. Mount the receiver 1.5 to 2 Metres above ground and as much as possible in line of sight to the Transmitter.

### **Sporting Mode**

**Fire Button** Pushing the Fire Button fires the Trap.

### **Solo Delay and Following Bird**

Pushing the Solo Delay Button and then the Fire Button will Fire the Trap after a short delay. Pushing the Solo Delay Button, Pushing the Fire Button then pushing the Fire Button again will Fire 1 clay after a delay then a 2<sup>nd</sup> clay after a further delay.

### **Rotation and Elevation Buttons**

Pushing and Releasing the Rotation / Elevation Button(s) will cause the Rotation / Elevation Motor(s) to operate briefly.

Pushing and Holding the Rotation / Elevation Button(s) for 5 seconds will cause the Rotation / Elevation Motor(s) to run continuously until the Rotation / Elevation Button(s) are pushed briefly. The Rotation / Elevation Button(s) only operate in Sporting Mode.

The Rotation and Elevation Switches on the Promatic Trap should be set to the Off position when using the Hunter Flush Radio.

### **Flush Mode**

In Flush Mode the 20 / 40 / 60 / 80 / 100 Bird Flushes are chosen by using the Fire, Rotate and Elevate Buttons as required. The speed of the Flush can be set using the speed buttons. Use the On/OK button to Start and Pause the Flushes.

### **Battery Replacement**

The Transmitter is powered by 4 AA Alkaline batteries. Remove the 2 screws holding the Battery cover in place to replace them. Do NOT over tighten the screws when re-fitting the back.