
PROMATIC GAME TRAILER / 3 TRAP FLUSH RADIO

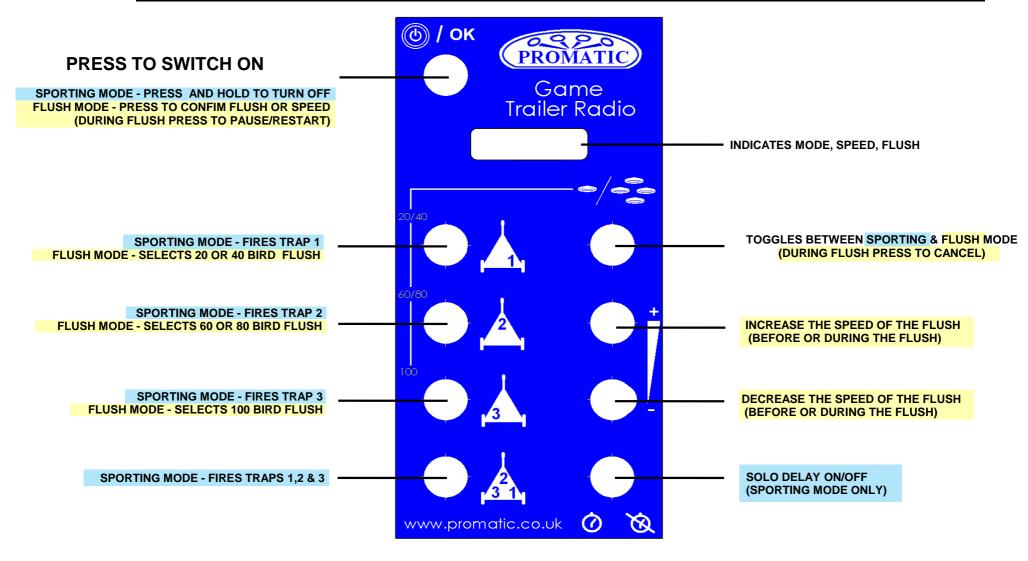

NOTES: THE UNIT POWERS UP IN SPORTING MODE - PRESS 1,2,3 OR 123 FOR INSTANT RELEASES.

TO CHANGE THE BATTERIES - REMOVE TRANSMITTER FROM BOOT, UNSCREW 2 SCREWS ON BATTERY COMPARTMENT LID (SITUATED AT TOP OF UNIT), REPLACE 4 X AA CELLS, REFIT LID & BOOT.