



Promatic International Ltd, Hooton Road, Hooton, South Wirral, CH66 7PA

Main Telephone +44 (0) 151 327 2220

Email sales@promatic.co.uk

Website www.promatic.co.uk

Claymate Multitrap Menu – Controller Version 6.2s.

Not all Controllers will have the same Menu items.

Insert Master Card or Ground(mans) Card, then Press F1 within 5 seconds.

Freeplay (On or Off)

F2 Credit Button (Allowed or Disabled)

Trap Mode (8 Trap, 1 Trailer, 2 Trailer)

Credit Value (Between 01 and 31)

Bonus Value (00, 01, 02, 03, 04)

Credit Timer (On or Off)

I am set to (ABC or 123)

Show Birds (Test fire the Traps)

Traps on/off (Select any Trap On or Off)

Discipline Lock (Off, Flush or Sporting)

Flush Lock (Off, A, B, C, D, E, F)

1/3 Button Handset (Yes or No)

Equal Maps (Yes or No)

Map Hi to (Traps A → H or X for off)

Map Lo to (Traps A → H or X for off)

Map Trap to (Traps A → H or X for off)

Cost Code (Changes using Master Card only)

Keys are Extreme / Default (Changes using Master Card only)

Set Default Setting (Sets Controller back to Default Settings, but also puts Controller back to Extreme Mode)

Handset Options (ParCours Handset only)

Data Com Check (Power Controller Off and On to reset)

Input Voltage

And loop back to Freeplay.

TP Aug 2023