



# APPLICATION NOTE AN2011

## FAN CONTROL FOR HEATING AND AIR CONDITIONING

P.O. Box 2956 · Syracuse · New York · 13220  
Phone: (315) 433-1150 Fax: (315) 433-1521  
Toll Free US & Canada (800) 334-0837  
Email: sales@infitec.com

email: sales@infitec.com  
engineering@infitec.com

### FAN CONTROL FOR HEATING AND AIR CONDITIONING

Input voltage is applied at all times. When the thermostat closes, the compressor starts and the Delay On begins. Upon completion of the Delay On the fan starts. When the thermostat opens, the compressor stops, and the Delay Off begins. Upon the completion of the Delay Off the fan stops.

