STAGE 5 PRO TUNER

INSTALLATION INSTRUCTIONS

PARTS LIST

- 1 Stage 5 Pro Tuner Module
- 1 USB Cable
- 1 Installation Guide
- 1 Velcro
- 1 Alcohol swab
- 1 Posi-tap



*** For Racing use only. Use of the Stage 5 Pro Tuner could void engine manufacturer warranty.

** Use of the Stage 5 Pro Tuner should only be used with the corresponding Trinity performance parts. Using any other performance parts could damage the engine.

2016-2018 Polaris Ace 900

PRO TUN

PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION

800-310-5519 • www.trinityracing.com



Position	Note
Position 1	16-18 model - Stock exhaust - Stock air filter
Position 2	16-18 model - Trinity slip-on- Stock air filter
Position 3	16-18 model - Trinity Stage 5 full exhaust- Stock air filter

SELECTING THE MAP POSITION

The Trinity controller comes loaded with maps preloaded into the unit. Using a #1 Phillips screwdriver, turn the map select dial to toggle between the loaded maps. Refer to the map position table for the maps included.

USING THE RPM RANGE DIALS

The Low, Mid, and High RPM Dials refer to the RPM range, in thirds, of your engine. Each dial allows +/- 10% fuel adjustment on top of what fuel changes are done in the map. With the dial facing straight up, there is no additional fuel change.


ex; If your redline was 9000rpm

- •The low RPM dial will adjust 0-3000 RPM
- •The mid RPM dial will adjust 3001-6000 RPM
- •The high RPM dial will adjust 6001-redline



1

EG. B

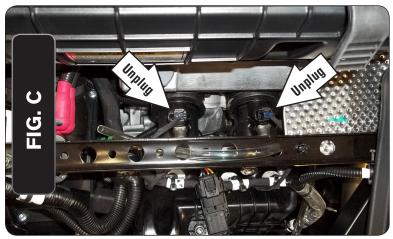

Remove the seat, the engine access panel behind the seat, and the engine access panel at the bottom of the cargo bed (Fig. A).

2 Use the supplied Velcro to secure the Stage 5 Pro Tuner module to the top of the battery.

Clean both surfaces with the supplied alcohol swab prior to applying the Velcro.

- 3 Secure the Stage 5 Pro Tuner ground wire with the small ring lug to the negative (-) terminal of the vehicle's battery (Fig. B).
- 4 Route the Stage 5 Pro Tuner wiring harness rearward towards the engine.

5 Unplug the stock wiring harness from both of the Fuel Injectors (Fig. C).

PART #TR-P127



Iga E

Plug the Stage 5 Pro Tuner wiring harness in-line of both Fuel Injectors and the stock wiring harness (Fig. D).

The pair of Stage 5 Pro Tuner connectors with ORANGE colored wires should go in-line of the LEFT cylinder fuel injector.

The pair of Stage 5 Pro Tuner connectors with YELLOW colored wires should go in-line of the RIGHT cylinder fuel injector.

7 Use the supplied Posi-tap to attach the GREY wire of the Stage 5 Pro Tuner wiring harness to the stock DARK GREEN wire of the Throttle Body Servo connector (Fig. E).

6

