

Warranty certificate (1 year)

Purchase date:

Where diffuser was purchased:

Name and address of purchaser:

Faults / defects:

Contact us at customerservice@shopascents.com

Product Specifications

External Dimensions: 7.9" x 7.9" x 5.4"

Weight: 1.93 lbs.

 
Operating Voltage: 100 - 120V AC / 50 - 60 Hz

Operating Levels: 4 (min./med./max./permanent)

Guarantee: 1 year

Aeroscena® LLC.
Cleveland Clinic GCIC
10000 Cedar Avenue
Cleveland, Ohio 44106

Scent with Intent™

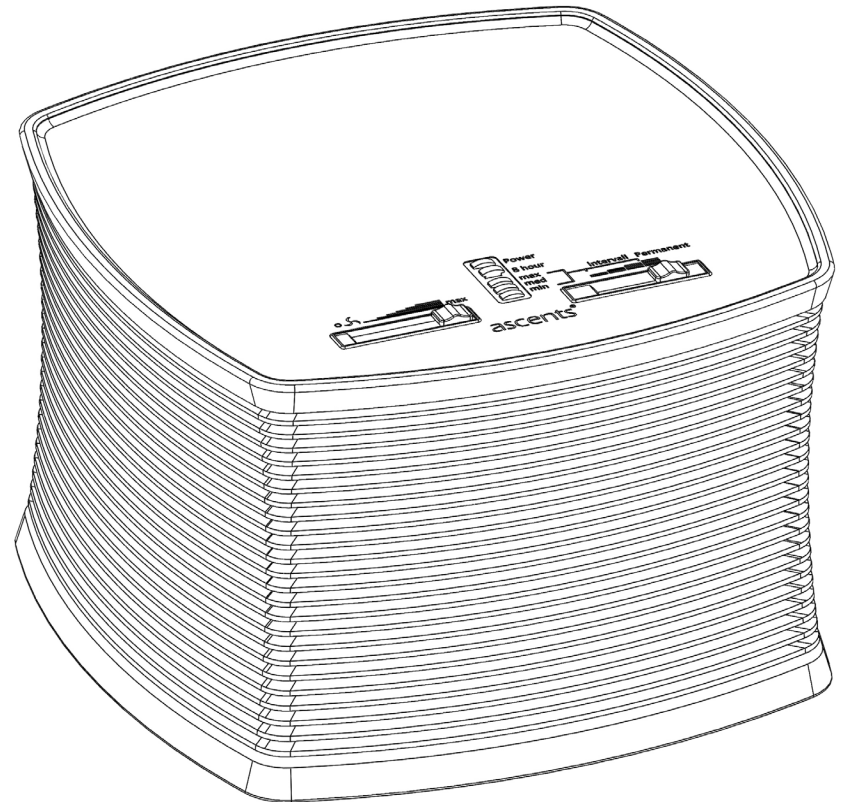

ascents™ Diffuser System

Operating Instructions

Dear Customer,

We want you to enjoy using your **ascents™ Diffuser System** for a long time. Please be sure to read the following notes prior to use.

- Please read the Operating Instructions carefully and keep them for future reference.

Important Safety Notes

- Please Note: The **ascents™ Diffuser System** must not be used or cleaned in the vicinity of bathtubs, washbasins or other vessels containing water.

If it should fall into water, unplug it immediately. Do not use it again. There is danger even when the **ascents™ Diffuser System** is switched off. You should therefore unplug it when not in use!

- Do not touch the **ascents™ Diffuser System** with wet hands.
- Do not cover the **ascents™ Diffuser System** — danger of overheating!
- Do not unplug the **ascents™ Diffuser System** by pulling the cable.
- Do not wind the cable round it.
- Check occasionally for damage to the cable. If the cable is damaged, the appliance should not be used (check before use). In this case, the cable must be replaced. Please contact customerservice@shopascents.com or contact customer service at (800) 671-1890 extension 1, to order a replacement. Technical repairs and modifications may be carried out by trained specialists only. Faulty repairs can cause serious risks to the user; the guarantee no longer applies.
- The appliance should be cleaned only when it is not plugged in. Clean the exterior with a damp cloth and rub dry or clean with a brush.

Operating Controls


Left Side Slide Control

The left slide control regulates the speed of the fan (continuously adjustable from off to max. speed), while also simultaneously controlling position of the mechanical scent gate. At the left most position the scent gate is completely closed with fan at minimum speed and at the right most position the scent gate is completely open with fan at maximum speed.

Right Side Slide Control

The right slide control sets the appliance's interval. The interval is the frequency and duration of fan ON/OFF cycles. There are four different settings available that should be adjusted based on the size of the room that the appliance is located in.

MAX: 10 minutes fan RUN, 10 minutes fan OFF
MED: 10 minutes fan RUN, 20 minutes fan OFF
MIN: 10 minutes fan RUN, 30 minutes fan OFF
PERMANENT: Continuous fan RUN

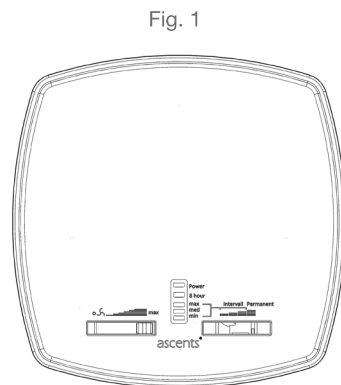

Indicators and 8 HOUR Button

There are four indicators located in between the two slide controls.

The POWER indicator light (green LED) is ON when the appliance is plugged in and ready.

The MAX indicator light (red LED) is ON when MAX interval is selected using the right hand slide control. The light is on during fan run and flashes during fan off periods.

The MED indicator light (red LED) is ON when MED interval is selected using the right hand slide control. The light is on during fan run and flashes during fan off periods.

The MIN indicator light (red LED) is ON when MIN interval is selected using the right hand slide control. The light is on during fan run and flashes during fan off periods.

All three red LED lights are ON when permanent interval is selected using the right hand slide control. In permanent mode the fan runs at maximum speed continuously.

The 8 HOUR button is located between the POWER and MAX indicator lights and can be pressed and held down for three seconds at any time to activate 8 HOUR mode. When 8 HOUR mode is activated the green POWER indicator light will flash on and off repeatedly. In 8 HOUR mode the appliance will operate for 8 hours. After 8 hours of operation the unit turns off automatically and the green POWER indicator will remain illuminated. To deactivate 8 HOUR mode hold the 8 HOUR button down for three seconds.

Instructions for the use of the ascentsGels™

- The **ascentsGels™** are intended and designed for use with the **ascents™ Diffuser System**.
- The **ascentsGels™** can be replaced (see Fig. 2).
- The **ascentsGels™** should be kept closed during storage.

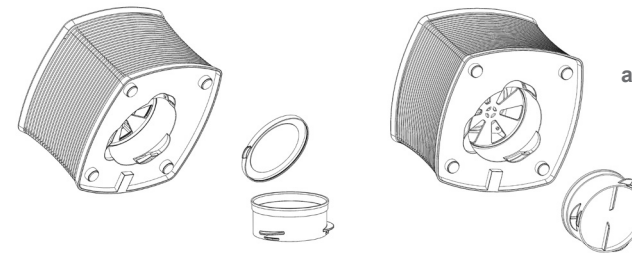


Fig. 2

Insert the open **ascentsGels™** into the diffuser and twist the cartridge into place until it is locked.

ascentsGels™ are designed to last for 750 hours of operation. Indications that the ascentsGels™ should be replaced:

- Intensity of fragrance is clearly fading.
- **ascentsGels™** has diminished in size within the cartridge.
- The life of the scent is determined by the cube's settings and intensity of use (see Fig. 1 for settings).

ascentsGels™ should be stored in a cool, dry place.

- Please read the user and safety instructions that accompany the **ascentsGels™**.

ascentsGels™ are available in a variety of fragrance blends. A current list is available on our website, www.shopascents.com