


40540 - 40542 - 40540.D - 40547

General information

Voxie entryphone for Due Fili Plus system.

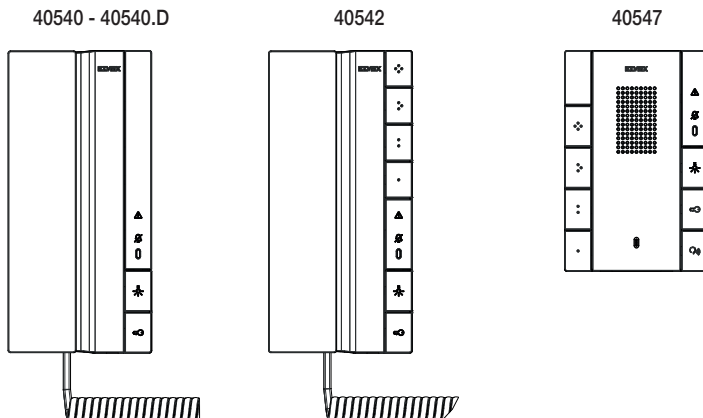

- 40540** Voxie handset entryphone for Due Fili Plus system with 2 push buttons for door lock release and auxiliary service (stair light) functions, surface mounting
- 40542** Voxie handset entryphone for Due Fili Plus system with 6 push buttons for door lock release and auxiliary service (stair light) functions, 4 programmable push buttons for auxiliary functions and services, surface mounting
- 40540.D** Voxie handset entryphone for Due Fili Plus system with 2 push buttons for door lock release and auxiliary service (stair light) functions, teleloop for hearing aids, surface mounting
- 40547** Voxie hands-free entryphone for Due Fili Plus system with 7 push buttons for answer, door lock release and auxiliary service (stair light) functions, 4 programmable push buttons for auxiliary functions and services, surface mounting

Warnings and advice

Audio frequency function for hearing aids - Teleloop (Only for 40540.D e 40547)



The video entryphone can be used by people wearing hearing aids.

For correct functioning of the hearing aid, please refer to its instruction manual.

Any metal objects or electronic equipment in the vicinity may affect the quality of the sound received by the hearing aid.

Maintenance

Clean using a soft cloth.

Do not pour water onto the appliance and do not use any type of chemical product.

Warnings for the user

Do not open or tamper with the appliance.

In the event of faults, contact specialized personnel.

For installation, refer to the instruction sheet in the package.

40540 - 40542 - 40540.D - 40547

Technical functions


| Function description | 40540 | 40540.D | 40542 | 40547 |
|--|-------|---------|-------|-------|
| • Surface mounting entryphone | ✓ | ✓ | ✓ | ✓ |
| • Possibility of table mounting via desktop base accessory 40598 | ✓ | ✓ | ✓ | ✓ |
| • Due Fili Plus system (only vertical bus) | ✓ | ✓ | ✓ | ✓ |
| • Lock release push button | ✓ | ✓ | ✓ | ✓ |
| • Push button for auxiliary services (Stair light) | ✓ | ✓ | ✓ | ✓ |
| • Talk/Listen push button to activate/deactivate audio communication | - | - | - | ✓ |
| • 4 additional configurable push buttons | - | - | ✓ | ✓ |
| • Differentiated ringtone for entrance panel, landing and intercom calls. | ✓ | ✓ | ✓ | ✓ |
| • Call ringtone and acoustic signalling volume control on three levels plus muting selector | ✓ | ✓ | ✓ | ✓ |
| • Talk volume control via selector on the side of the entryphone | - | - | - | ✓ |
| • Two-level talk volume control, normal and high, via internal jumper accessible during installation | ✓ | ✓ | ✓ | - |
| • Switchboard calls | ✓ | ✓ | ✓ | ✓ |
| • "Professional firm" function, automatic lock release on receipt of a call from entrance panel (only if enabled via configuration software or via dip switch) with random activation time | ✓ | ✓ | ✓ | ✓ |
| • "General" apartment intercom call (only for 40542 and 40547); mutually exclusive with Paging. | - | - | ✓ | ✓ |
| • Alert Function: - to terminals FP-M; configurable via configuration software - with dedicated input on terminals AL-M (only for 40542 - 40547); configurable via configuration software or via device dip switch | ✓ | ✓ | ✓ | ✓ |
| • Lock release control configurable to a specific outdoor station. | ✓ | ✓ | ✓ | ✓ |
| • Shared landing: to activate the landing call on all devices in the same group (only if programmed using the configuration software) | ✓ | ✓ | ✓ | ✓ |
| • "Paging": Sending a one-way public paging announcement to other hands-free devices enabled in the same group, in a single island (only if programmed using the configuration software or via dip switch); mutually exclusive with general intercom call. <i>The "Paging" public announcement receipt function is only possible on hands-free entryphones (40547).</i> | - | - | ✓ | ✓ |
| • Audio frequency function for hearing aids (Teleloop) | - | ✓ | - | ✓ |

40540 - 40542 - 40540.D - 40547


Technical data

- Absorption in standby 10 mA; maximum current 100 mA (40540, 40542, 40540.D), 140 mA (40547)
- Power supply: from BUS terminals 1, 2 - rated voltage 28VDC
- Ambient class: Class A1 (indoor use)
- IP30 protection degree
- Operating temperature: (-5 °) – (+40) °C (indoor use)
- Operating environment humidity: 10 / 80% (non-condensing)

Dimensional data

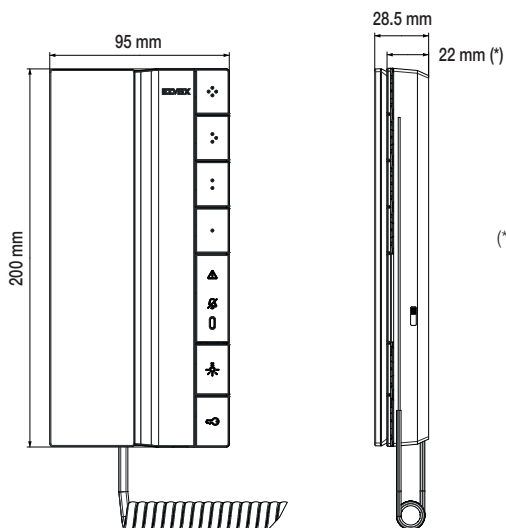


(*) Thickness of the device with the handset raised.

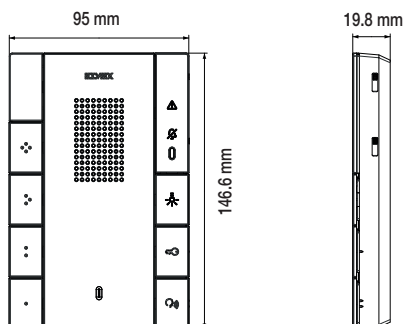

40540 - 40542 - 40540.D - 40547

Handset entryphone 40540 - 40542 - 40540.D

Keys and status LEDs (Front view)

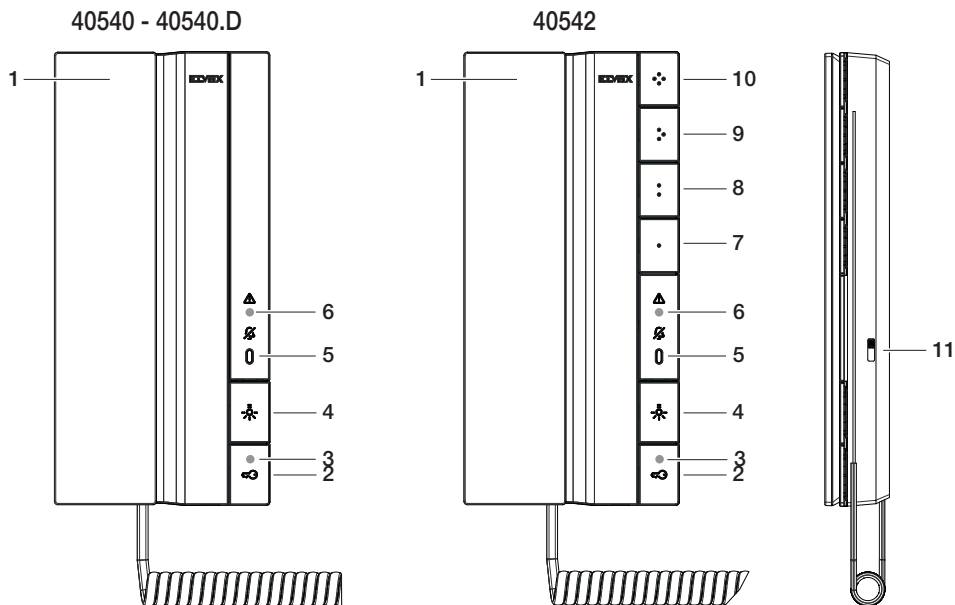

1 - Handset

Buttons (Default functions) and signals:

- 2 - Door Opening (Lock): it activates the outdoor station lock; with the handset released outside a conversation, it makes a call to the switchboard.
- 3 - Signalling (white LED):
 - **incoming call**, flashing (0.5 s on 0.5 s off).
 - **door open**, permanently lit.
 - **automatic lock release active**, brief flashing (0.2 s on / 4.8 s off).
 - **door open and automatic lock release active**, permanently lit with short power-off (0.2 s off / 4.8 s on).
- 4 - Auxiliary activation (stair light): it activates the first relay of the Due fili system (Aux 1).
- 5 - Ringtone volume indicator: Ringtone mute / Level 1 / Level 2 / Level 3.
- 6 - Signalling (red LED):
 - **First start-up**, or when power is restored, flashing for approximately 15 sec.
 - **Alert**, rapid flashing (0.1 s on 0.1 s off).
 - **missed call from switchboard**, permanently lit with short power-off (9.8 s on 0.2 s off).
- 7 - Push button 1: it activates the second relay of the Due fili system (69RH/ 69PH).
- 8 - Push button 2: "General" apartment intercom call.
- 9 - Push button 3: F1 last entrance panel called.
- 10 - Push button 4: F2 last entrance panel called.
- 11- Call ringtone volume and signal tone control, on three levels plus muting. The ringtone and signal tone muting does not disable the CH output.

Note: the functions associated with the , , , , ,  push buttons can be modified via programming, to perform other auxiliary functions or intercom calls.