

# SA-95/96



## Hardwired Piezoelectric Siren and Strobe Installation Manual

### 1. Introduction

The SA-95 and SA-96 are members of Rosslare’s family of sirens.

Table 1 describes the models.

**Table 1: Model Description**


Model	Functions
SA-95	Small Hardwired Siren and Strobe
SA-96	Large Hardwired Siren and Strobe

SA-95 is a small hardwired siren with one piezoelectric sounder and 4 ultra bright strobe LED arrays. The SA-96 is a large hardwire siren with 3 piezoelectric sounders and 8 ultra bright strobe LED arrays. Both sirens are inexpensive and hardwired that are ideal for residential, commercial, and institutional applications. The attractive modern designs are intended for indoor installation and are perfect for locations where both aesthetics and performance are required, such as private homes, store fronts, medical facilities, and financial or manufacturing institutions.


The SA-95 and SA-96 sirens require no power supply; they are powered and activated from the hosting control panel.

The SA-95 and SA-96 sirens come in blue (L) and amber (A) as shown in Figure 1 and Figure 2.

**Figure 1: SA-95**

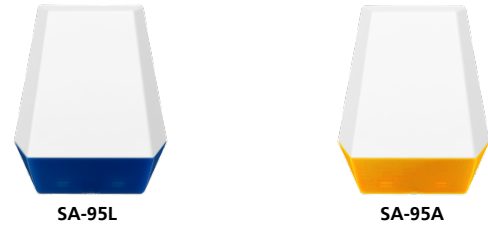

**Figure 2: SA-96**

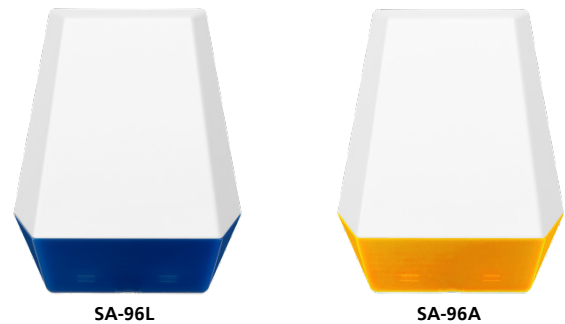

### 2. Technical Specifications

#### 2.1 Electrical Specifications

	SA-95	SA-96
<b>Input Voltage</b>	8 to 14 VDC from panel	
<b>Current Consumption</b>	Standby – 0 mA, Maximum – 150 mA @ 12 VDC	
<b>Strobe Type</b>	Ultra bright LED array	
<b>Tamper</b>	Cover and wall	
<b>Siren Type</b>	Piezoelectric	
<b>Siren Output</b>	85 dB/100 cm	95 dB/100cm

#### 2.2 Environmental Specifications

	SA-95	SA-96
<b>Weatherproof</b>	IP65	
<b>Operating Temp. Range</b>	-30°C to 60°C (-22°F to 140°F)	
<b>Storage Temp. Range</b>	-40°C to 70°C (-40°F to 158°F)	
<b>Operating Humidity Range</b>	0 to 95% (non-condensing)	

#### 2.3 Physical Specifications

	SA-95	SA-96
<b>Dimensions (H x W x D)</b>	100 x 130 x 50 mm (3.9 x 5.1 x 2 in.)	280 x 245 x 59 mm (10.9 x 9.6 x 2.4 in.)
<b>Weight</b>	200 g (7 oz)	607 g (21.3 oz)

## 3. Installing the SA-95/96

### 3.1 Mounting the SA-95/96


The SA-95 and SA-96 can be easily mounted onto the wall.

#### *To mount the siren on the wall:*

For the following instructions, please refer to Figure 3 and Figure 4.


1. Open the SA-95/96 case and remove the back plane).
2. Use the mounting template or back plate to determine the desired location.

Figure 3: SA-95 Mounting

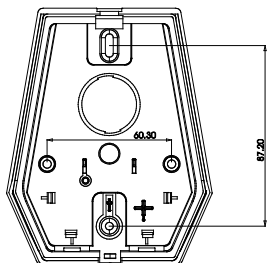

3. Drill two holes in the wall accordingly and insert the anchors provided.
4. Mount and fasten the siren with the screws provided. Ensure that it is fastened and level.
5. Reassemble the unit.

Figure 4: SA-96 Mounting

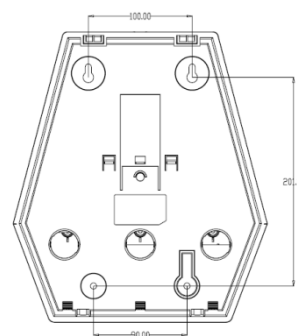

## 4. Wiring the SA-95/96 Siren

The wirings of the SA-95 and SA-96 sirens require opening the unit as explained in Section 3.1.

The SA-95 and SA-96 are compatible and can be connected to any of Rosslare's hardwire and wireless intrusion panels.

Each unit consists of the following terminals (Figure 5 and Figure 6):

- Siren +/-
- Strobe +/-
- Tamper

#### *To wire the siren:*

1. Connect the Siren +/- terminals to the siren output (12 V) of the intrusion panel.
2. Connect the Strobe +/- terminals:
  - a. To activate the strobe with the siren, connect the Strobe +/- terminals to the Siren +/- terminals.
  - b. To activate the strobe without the siren, connect the Strobe +/- terminals to any Aux output 12 VDC from the intrusion panel.
3. Connect the Tamper terminals to the intrusion panel tamper terminals to have the tamper alarm of the siren in the panel.

Figure 5: SA-95 Terminal Blocks


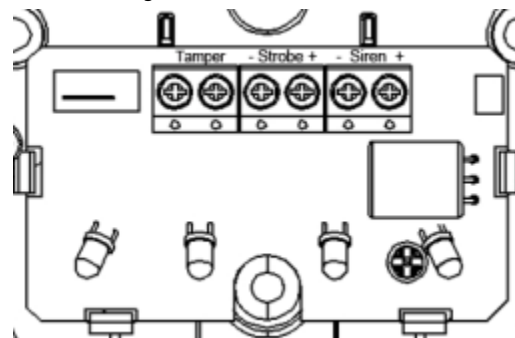


Figure 6: SA-96 Terminal Blocks

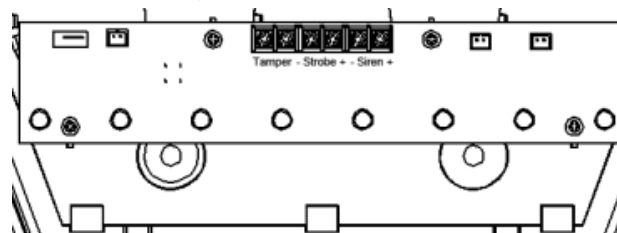

---

## Limited Warranty

---

The full ROSSLARE Limited Warranty Statement is available in the Quick Links section on the ROSSLARE website at [www.rosslaresecurity.com](http://www.rosslaresecurity.com).

Rosslare considers any use of this product as agreement to the Warranty Terms even if you do not review them.

---

## Contact Information

---

### Asia Pacific, Middle East, Africa

Rosslare Enterprises Ltd.  
Kowloon Bay, Hong Kong  
Tel: +852 2795-5630  
Fax: +852 2795-1508  
[support.apac@rosslaresecurity.com](mailto:support.apac@rosslaresecurity.com)

### United States and Canada

Rosslare Security Products, Inc.  
Southlake, TX, USA 76092  
Toll Free: +1-866-632-1101  
Local: +1-817-305-0006  
Fax: +1-817-305-0069  
[support.na@rosslaresecurity.com](mailto:support.na@rosslaresecurity.com)

### India

Rosslare Electronics India Pvt Ltd.  
Tel/Fax: +91 20 40147830  
Mobile: +91 9975768824  
[sales.in@rosslaresecurity.com](mailto:sales.in@rosslaresecurity.com)

### Europe

Rosslare Israel Ltd.  
Rosh HaAyin, Israel 48091  
Tel: +972 3 938-6838  
Fax: +972 3 938-6830  
[support.eu@rosslaresecurity.com](mailto:support.eu@rosslaresecurity.com)

### Latin America

Rosslare Latin America  
Buenos Aires, Argentina  
Tel: +54-11-4001-3104  
[support.la@rosslaresecurity.com](mailto:support.la@rosslaresecurity.com)

### China

Rosslare Electronics (Shenzhen) Ltd.  
Shenzhen, China  
Tel: +86 755 8610 6842  
Fax: +86 755 8610 6101  
[support.cn@rosslaresecurity.com](mailto:support.cn@rosslaresecurity.com)

[www.rosslaresecurity.com](http://www.rosslaresecurity.com)



• EN ISO 13485



**ROSSLARE**  
SECURITY PRODUCTS