




WI-LTE300


Wireless 4G LTE Router Quick Installation Guide

www.wireless-tek.com


Package content

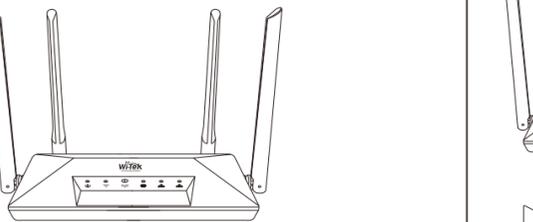

1xWI-LTE300

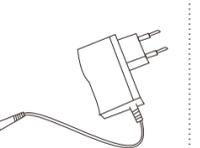

1xDC 12V PowerCord


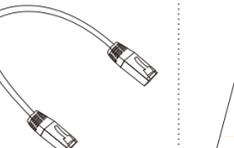


1xInternet Cable




1xQuick Installation Guide

Hardware Overview

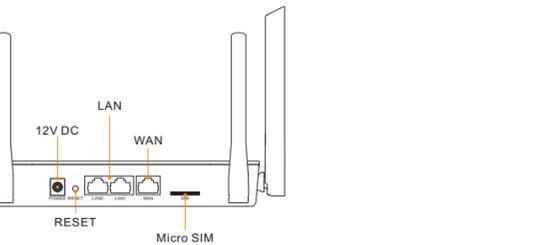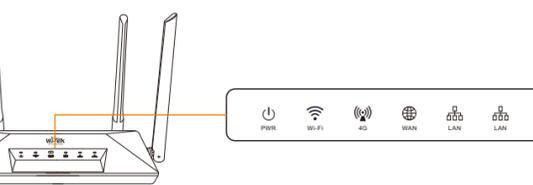

Action	Status Indication
Power	On: The device is powered up. Off: The device is powered off.
WiFi Sign	On: Wi-Fi is normally. Off: Wi-Fi is abnormal.
4G	On: The LTE network is available. Red: The LTE network is disabled.
WAN	On: The router is connected to the internet. Off: There is no internet connection.
LAN1	On: There is a device linked to LAN1 port Off: There is no device linked to LAN1 port
LAN2	On: There is a device linked to LAN2 port Off: There is no device linked to LAN2 port

Login method

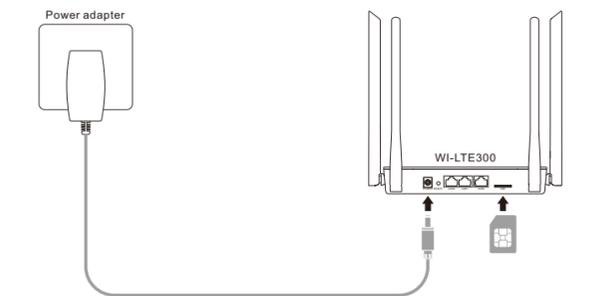

Please connect devices according to the above topology.

Follow the steps for quick Router configuration,using initial setup wizard:

Step 1 Connect your PC to device via Ethernet cable or Wireless.

Note:
● Default WiFi name:WI-TEK_XXXX, Password:88888888


Step 2 Launch your web browser then enter http://192.168.1.1 in the address bar and specify the default login key:admin.



Configuration steps

There are four working modes: SOHO Router, 4G Router, Eth-First Router, 4G-First Router

1) The default mode is 4G Router,click Next to enter.

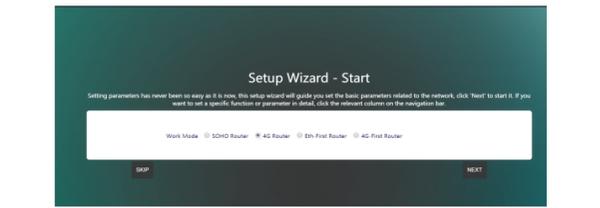

Note:
● Eth-First Router : If the internet service becomes unavailable via the Eth connection, the router automatically switches to the LTE network.
● 4G-First Router:If the LTE network service cannot be connected, the router will automatically switch to the Eth network.

2) Select the country, fill in the wireless SSID, encryption method, and key information,and click Next to enter.



Configuration steps

3) Click the complete button to complete the setting.



4) Configuration complete.




Configuration steps

Cloud management settings

Step 1 Launch your web browser then enter http://cloud2.wireless-tek.com in the address bar.


Step 2 Register an account password by user name or email.

Step 3 Log in to the cloud account with the account password after registration.

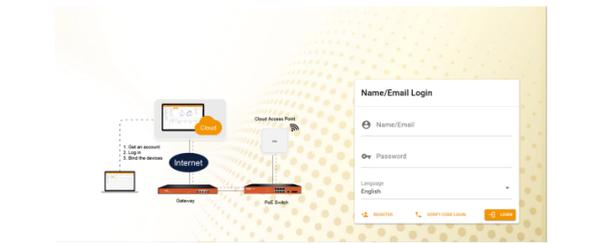


After the login is successful, the steps to bind the device on the cloud account are as follows:

1) Click ADD NETWORK

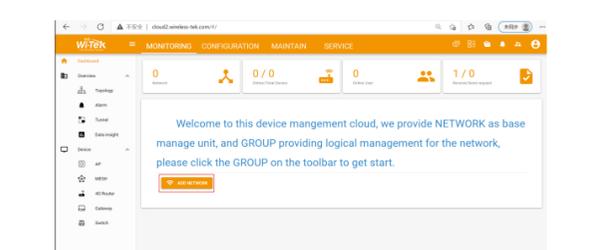


Configuration steps

2) Fill in the group name and location, click save.

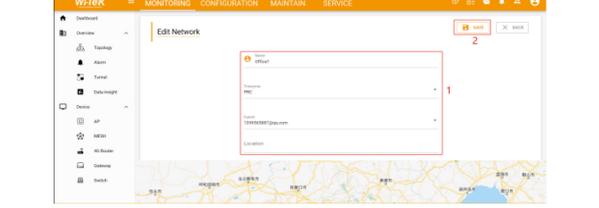


3)And click next.

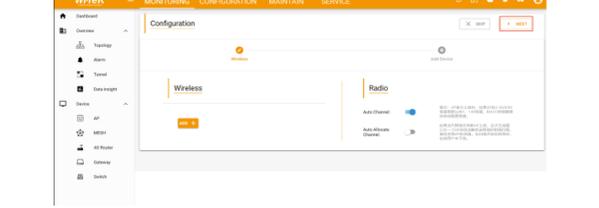


4)Enter serial number, click ADD to create and click FINISH, the configuration is complete.

Note:
The 17-digit SN code of the 4G Router is shown on the sticker on the back of the device.

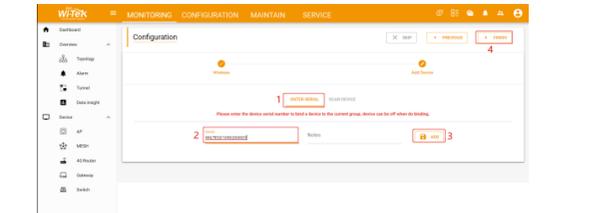


Configuration steps

5) In the relevant device options, you can see the bound device information.

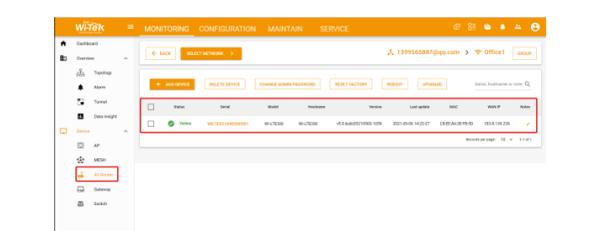

6)Click Tunnel, select 4G Router, click EWEB to log in to the device.

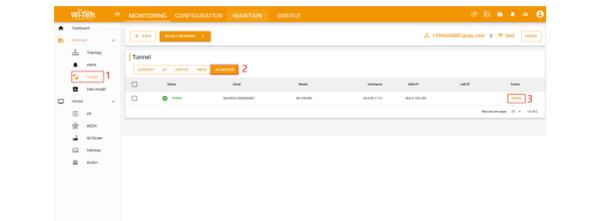

Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

● If the product defects within three months after purchase, we will provide you a new product of the same model.
● If the product defects within the three-year warranty period, we will provide the professional maintenance service.
● Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
● Any other defects that are not caused by workmanship or product quality, such as natural disaster, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card losing will disqualify the product from limited warranty.



Wireless-Tek Technology Limited
Address: Room 402 4F, BiaoFan Technology Building, Bao'An Avenue, FuYong Town, Bao'An district, ShenZhen
Website:www.wireless-tek.com
Tel:86-0755-32811290
Email:sales@wireless-tek.com
Technical Support:tech@wireless-tek.com

