

Battery Contact PCB

B+ = Battery Positive  
B- = Battery Negative

