 
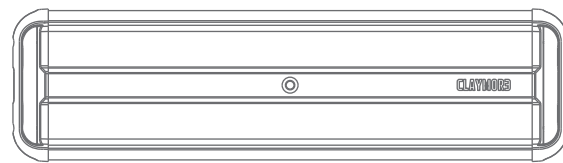 
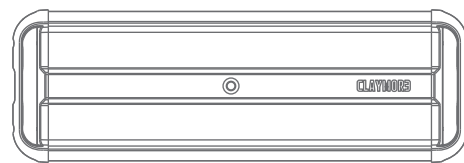 


CLAYMORE 3FACE+

CLAYMORE 3Face Plus M/L/X

CLF-1740TS / CLF-2610TS / CLF-3150TS

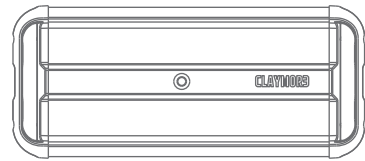


User Manual

This portable light contains a Li-ion battery. Please follow the user manual before use. If any abnormality is found in the product, discontinue use and contact the dealer or a service center where the product was purchased. Any modifications of this product will void the warranty. Misuse of CLAYMORE products may cause user harm.

1. Caution

- ① Do not use near high temperatures such as fires or heating equipments. It may cause explosion or ignition.
- ② This product is water resistant. However, if left in the rain for a long time, it may cause malfunction. If the product gets soaked, please quickly wipe it off.
- ③ Do not store or use in vehicles exposed to direct sunlight. It may cause explosion and malfunction.
- ④ Do not touch the light source directly as it may become very hot during use. Use handle to carry out.
- ⑤ Do not use if it exceeds the operating temperature range (-10 °C to 40 °C).
- ⑥ Never use an external power supply other than the supplied adapter. It may cause heat and ignition.
- ⑦ Please do not place in the reach of infants. It may cause swallowing of parts or injury.
- ⑧ Adult supervision is necessary when used by children. Misuse of light may cause injury or electric shock.
- ⑨ Do not insert any metal parts into the terminal block of the connector. It may cause heat, explosion or electric shock.
- ⑩ Do not disassemble or modify the product.
- ⑪ Do not touch the connector with wet hands. There is a danger of electric shock.
- ⑫ After use, be sure to turn off the power.
- ⑬ If the product is dropped or experiences physical shock, damage may be accumulated inside the product and unexpected malfunction may occur even during normal use. Be careful not to apply physical shocks to the main unit.


2. Components

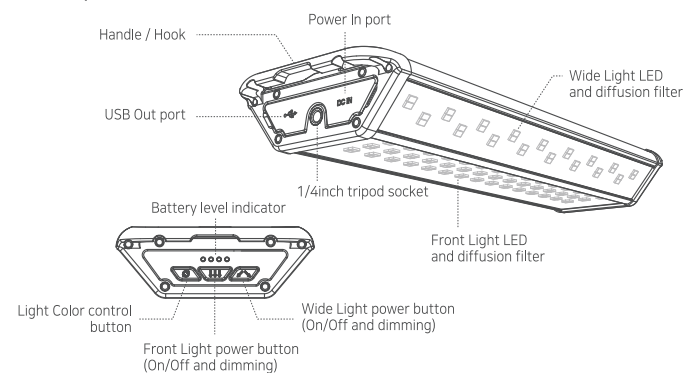

3. Operation

Charging

- 1) As shown in the figure, open the cover of the product and connect the adapter to the power in port. Charging time may vary depending on battery capacity and external environment.

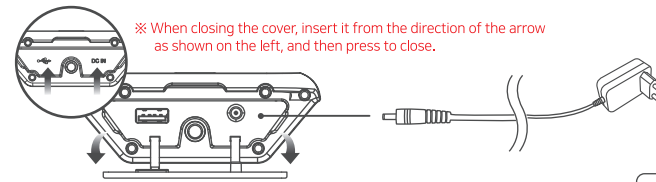


- 2) When the product is being charged, the charging level can be found through the adapter. * This product has a built-in protection circuit to prevent overcharging.

Lamp on adapter - Red : Charging / Green : Complete

※ Be sure to use the supplied 3Face adapter for this product. This adapter cannot be used with other Claymore products or other electrical appliances.

Battery Level Check

The battery indicator blinks and indicates the remaining battery level in four steps. (The remaining battery level is displayed for about 2 seconds in the 1-step brightness on both sides.)


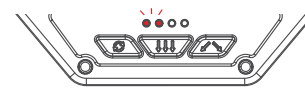


Battery Indicator	
● ○ ○ ○	0~25%
● ● ○ ○	25~50%
● ● ● ○	50~75%
● ● ● ●	75~100%
● ● ● ●	Fully charged
● ● ● ●	Stop


※ If the battery level is lower than 4%, the battery check / power bank function will not operate. Please charge before use.

On/Off · Dimming Control · CCT Control

- 1) On/Off and dimming control : Press each button shortly to light up and adjust the brightness in 1-2-3 steps. When pressed the fourth time, the light will turn off.

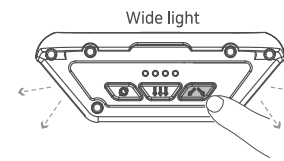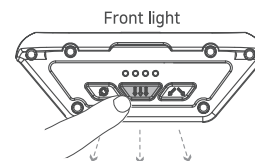

- 2) CCT control : When light is on, press button shortly to adjust the light color in three steps : Warm -> Bright -> Cool.


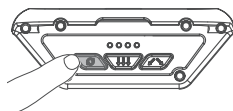


Warm	LED light with low color temperature, warm light feels like ordinary gas lantern
Bright	LED light with a neutral color, comfortable feeling
Cool	LED light with high color temperature, cool light feels like ordinary fluorescent light

Power Bank Function

After connecting the USB cable as shown in the figure, press and hold button for 2 seconds to charge device. If you do not want to use it, press and hold side button for 2 seconds to end the charging.


→ After using the power bank, adjust the lighting to the desired level.
※ After 5 hours, the power bank function automatically turns off to prevent battery consumption.

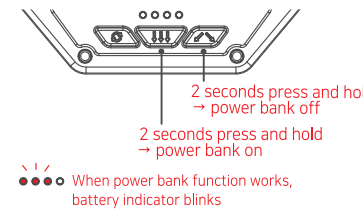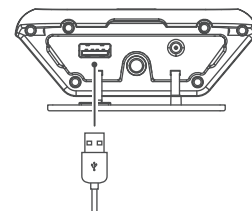

4. Installation

This product can be installed with a strap and carabiner.

※ When using a carabiner, make sure to insert into lower hole of strap. (Prevents product fall in case of emergency)

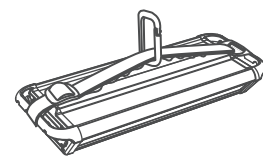

* To mount on camera tripod: Attach the light into the 1/4 inch screw and rotate. Any Claymore product with the 1/4 inch screw can be attached to a mounting tripod.

5. In Case of Malfunction

* If there is something wrong with the product, please check the following first.

1. If it does not activate, check the charging status.
2. If your external device is not charging from the USB Out port: Check the status of button.

6. Specification

Product name	CLAYMORE 3FACE+ M	CLAYMORE 3FACE+ L	CLAYMORE 3FACE+ X
Model name	CLF-1740TS	CLF-2610TS	CLF-3150TS
LED color temperature	Warm : 3000K , Bright : 4200K , Cool : 6200K (±15%)		
Brightness (lumen)	50~3,200 Lm	60~4,000 Lm	70~5,000 Lm
Using time	7hour 30minute ~ 78hour	8hour ~ 78hour	7hour 40minute ~ 78hour
Size	229×100×36mm	296×100×36mm	296×100×36mm
Weight	605g	825g	960g
Battery type	Li-ion	Li-ion	Li-ion
Battery capacity	3.6V 17,400mAh	3.6V 26,100mAh	3.6V 31,500mAh
Charging time	3 hour	4 hour	4.5 hour
INPUT	DC 12.6V 3A		
OUTPUT	5V 2A		
Origin	MADE IN KOREA		

7. Contents



⚠ Caution for long-term storage

- * If the battery is completely drained, the battery indicator might not flash. If this happens, plug the USB cable back in or press the button to turn the battery indicator on again.
- * For long-term storage, fully recharge the battery. (Repeat every six months)
- * Please keep in mind that if stored below -10°C the battery life may be affected.
- * Please keep in a dry place without moisture.

Warranty

Item	CLAYMORE 3FACE+ M	CLAYMORE 3FACE+ M	CLAYMORE 3FACE+ M
Model No.	CLF-1740TS	CLF-2610TS	CLF-3150TS
Seller			
Date of Purchase			

1. Thank you for purchasing CLAYMORE series of Prism Co., Ltd.
2. This product has passed strict quality control tests. If the product is not functioning properly, please contact an authorized service center.

Free Service

- 1) Failure of the product under normal operating conditions during the warranty period will be repaired by Prism or authorized service center on free of charge. Some shipping or handling charges may be involved.
- 2) Warranty period: 1 year

Charged Service

- 1) Damage caused when the warranty period is over.
- 2) Damage caused due to the user's mishandling, abuse, or improper operation.
- 3) Damage caused by arbitrary or personal repair or disassemble in unauthorized service center.
- 4) Damage from input electricity or cable defect.
- 5) Damage caused by natural disaster.

Official Import Distributor

Bigtent Outdoor Equipment Ltd. www.bigtentoutdoors.com
info@bigtentoutdoors.com

Manufacturer

Prism Co., Ltd. www.claymorelight.com / www.prismlight.co.kr
info@prismlight.co.kr
101-1501, Chunui-Technopark, Bucheon-ro 198 Road, 36,
Bucheon-si, Gyeonggi-do, Korea