CLAYMOR3 TACE



User Manual

CLAYMORE 3Face mini


This portable light contains Li-Polymer batteries. Please follow the user manual before use. If any abnormality is found in the product, discontinue use and contact the dealer or a service center where the product was purchased. Any modifications of this product will void the warranty. Misuse of CLAYMORE products may cause user harm.

1. Caution

- ① Do not use near high temperatures such as fires or heating equipments. It may cause explosion and ignition.
- This product is water resistant. However, if left in the rain for a long time, it may cause explosion of the product gets soaked, please quickly wipe it off.
- 3 Do not store or use in vehicles exposed to direct sunlight, It may cause explosion and malfunction.
- Do not touch the light source directly as it may become very hot during use.
- (5) Do not use if the product exceeds the operating temperature range (-10 ° C to 40 °C).
- Do not look directly into the LED light source.


- ⑦ Please do not place in the reach of infants. It may cause swallowing of parts or injury.
 ⑥ Adult supervision is necessary when used by children. Misuse of head lamp may cause injury or electric shock.
 ⑨ Du not unsert any metal parts into the terminal block of the connector. It may cause heat, explosion or electric shock.
- O Do not disassemble or modify the product.
- (f) Do not touch the connector with wet hands. There is a danger of electric shock.
- ② After use, be sure to turn off the power. If not, it may cause leakage.
- When adjusting the angle, please do not bend with force. It may cause damage to the product.
- Dropping or impacting the product can cause damage to the inside of the product, resulting in unexpected failures in normal use. Be careful not to apply impact to the body.


2. Components

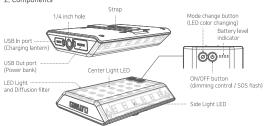

3. Operation

  LED Light






When light is ON, press and hold button to increase brightness, Repeat to decrease brightness. *Light will blink once when Maximum and Minimum brightness is reached.





When light is on, press 3 button shortly to adjust the light color in three steps: Warm -> Bright -> Cool.

	Warm	LED light with low color temperature, warm light feels like ordinary gas lantern
	Bright	LED light with a neutral color of daylight and comfortable feeling
ĺ	Cool	LED light with high color temperature, cool light feels like ordinary fluorescent light

 

When light is OFF, hold button for over 2 seconds to access SOS signal.

Power Bank Function



When a device is connected to the light it will automatically start charging. (On status : Battery indicator turns on)

Power bank cannot be used while charging the light.

Charging



- 1) Open rubber cover on the side and connect USB-C type cable to charge lantern.
- 2) When the product is charging, the battery indicator flickers. If the light is not flicking and all the lights are on, it indicates that the battery has been fully charged.

Г	\Box
ı	

Ba	Battery Level Indicator		
	1000	0~25%	
	0.0	25~50%	Flickers
		50~75%	- Heller 5
	111¥	75~99%	
	1111	Fully Charged	Stop

* This light contains memory function that returns to the last setting when turn off and on.

4. Instructions

This product is compatable with a strap and carabiner.

Mhen using a carabiner, be sure to insert it into the lower hole of the strap. (Prevent product fall in case of emergency)



* To mount on camera tripod: Turn the fixing screw on the camera tripod into the socket and fix it. It can be used with all1/4 inch screw accessories.

5. Specifications

Product name	CLAYMORE 3Face mini
Model No.	CLF-500(LG/DG/MG)
Color temperature	Warm: 3000K, Bright: 4200K, Cool: 6500K (±15%)
Brightness	40~800 Lm
Run time	6hr 30min ~ 60hr
Size	78×102,5×19,7mm
Weight	159g
Battery type/capacity	Li-Polymer 3.7V 5,000mAh(18.50Wh)
Charging time	2hr 40min
Input	USB 5V 2A
Output	5V 2A
Origin	MADE IN KOREA

6. Contents











⚠ Caution for long-term storage

- * If the battery is completely drained, the battery indicator might not flash.

 If this happens, plug the USB cable back in or press the button to turn the battery indicator on again.

(USB Type-C)

- * For long-term storage, fully recharge the battery. (Repeat every six months) * Please keep in mind that if stored below -10°C the battery life may be affected.
- * Please keep in a dry place without moisture.

Warranty

Item	CLAYMORE 3Face mini
Model No.	CLF-500(LG/DG/MG)
Seller	
Date of Purchase	

- 1. Thank you for purchasing CLAYMORE series of Prism Co., Ltd.
- 2. This product has passed strict quality control tests. If the product is not functioning properly, please contact an authorized service center listed below.

1) Failure of the product under normal operating conditions during the warranty period will be repaired by Prism or authorized service center on free of charge. Some shipping or handling charges may be involved.

2)Warranty period: 1 year.

Charged Service

- 1) Damage caused when the warranty period is over.
- 2) Damage caused due to the user's mishandling, abuse, or improper operation.
- 3) Damage caused by arbitrary or personal repair or disassemble in unauthorized service center
- 4) Damage from input electricity or cable defect.
- 5) Damage caused by natural disaster.

Official Import Distributor

Bigtent Outdoor Equipment Ltd. www.bigtentoutdoors.com info@bigtentoutdoors.com

Manufacturer

Prism Co., Ltd. www.claymorelight.com / www.prismlight.co.kr info@prismlight.co.kr 101-1501, Chunui-Technopark, Bucheon-ro 198 Road, 36, Bucheon-si, Gyeonggi-do, Korea