
0438


# ® ECLISSE BIAS® DS

# **ECLISSE BIAS® DS**

Built In Anti Slam
DOUBLE SIDE

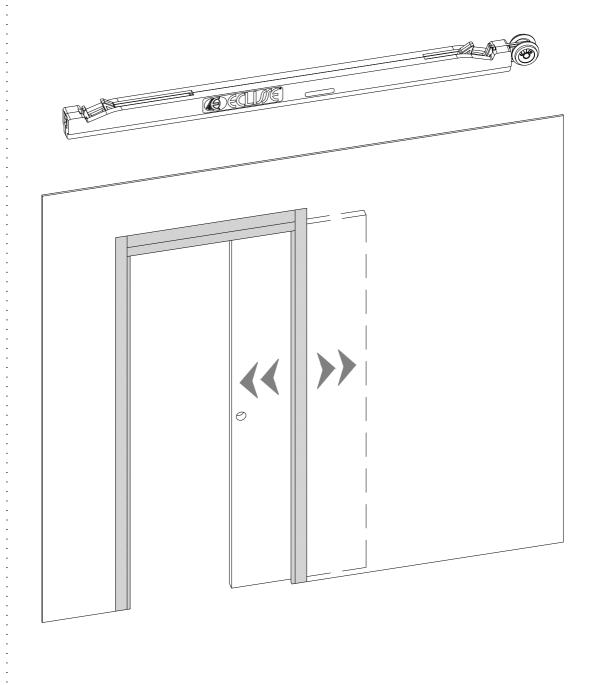





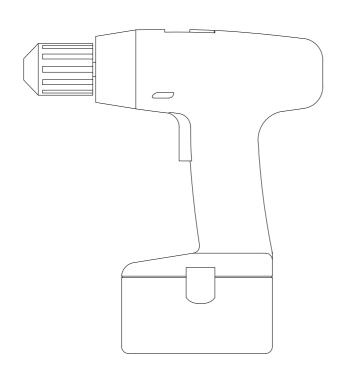



Ø3

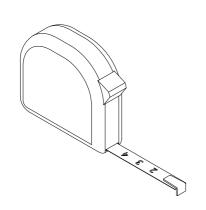


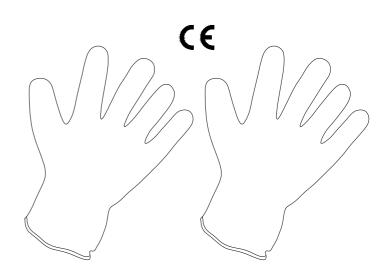

CH. 2.5





 


### **BIAS-DS MECHANISM**





**CONNECTION SCREW** 

 d) 1 x



REAR ACTIVATION BRACKET

© 1 x



LEADING ACTIVATION BRACKET

e 2 x




**CONNECTION SCREW** 








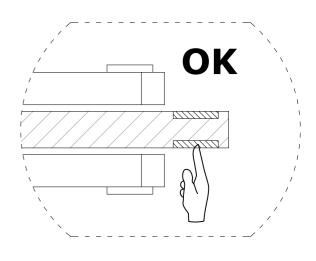




**WARNING:** All sliding doors, if unprofessionally and recklessly handled, can be dangerous also depending on the size and characteristics of the panel and of the material of which is made. For safety reasons, our counterframes are equipped with adjustable door catch. In order to avoid the risk of injury it is absolutely necessary to install it, taking care to stop the door, so that the handle stays completely on sight and the hand, while holding and using the handle, and based on the sizes and characteristics of the latter, can never come into contact with the edge of the counterframe or with projecting and/or reentering accessories, decorations or other characteristics of the door panel.

In the event of non-observance of these warnings, which must be communicated by the installer and/or vendor to the end user, Eclisse Srl disclaims all liability for any injuries.

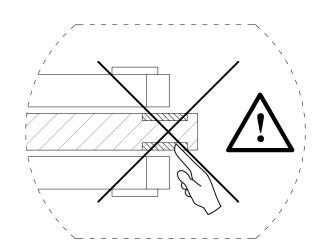




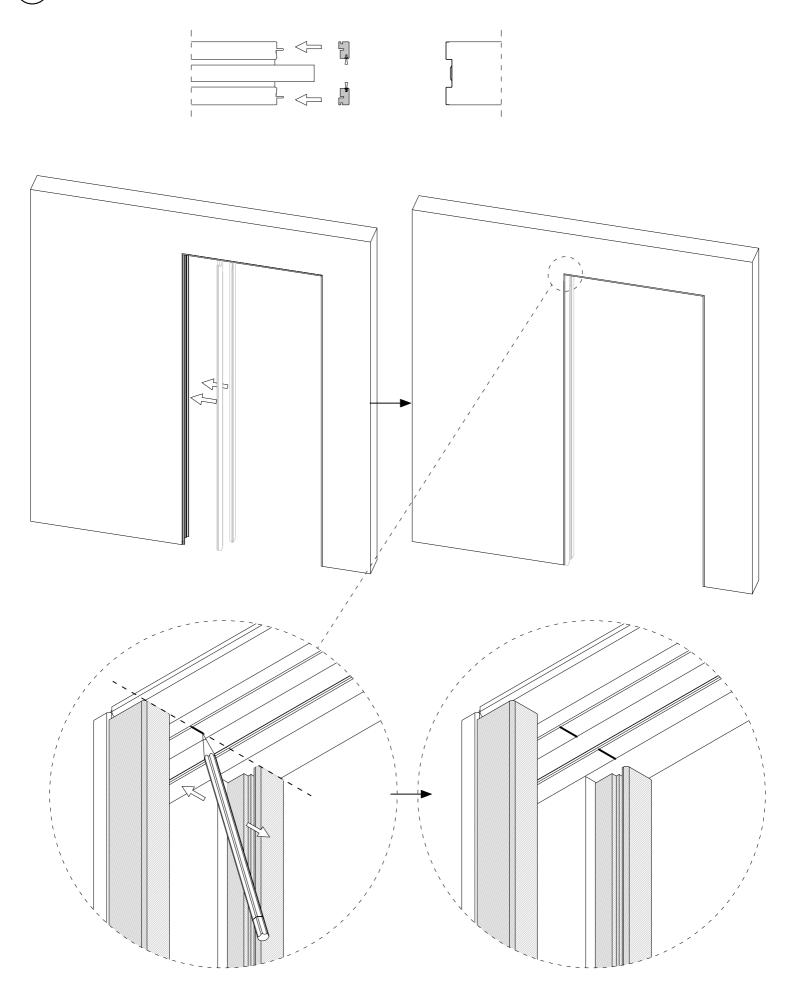

Draw a line across the track at the pocket entrance


Classic



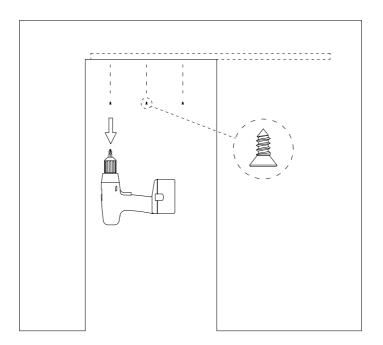



Remove track from the pocket unit by removing the small screws holding the track to the header across the opening. Slide the track to one side and it will drop out.


NOTE: Please store these screws safely

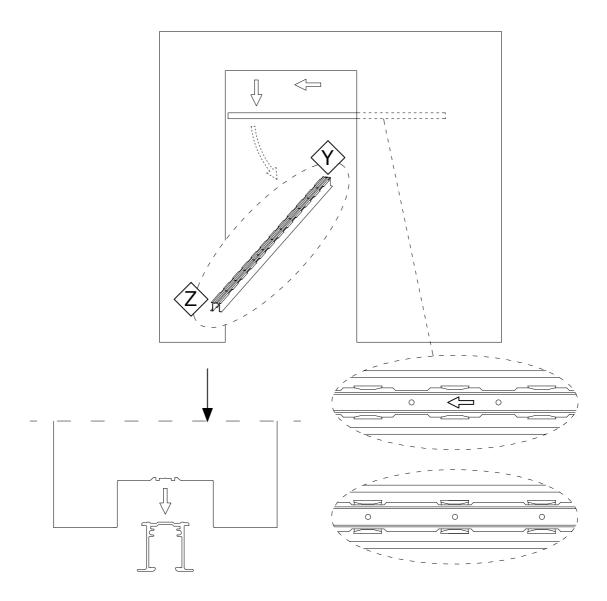




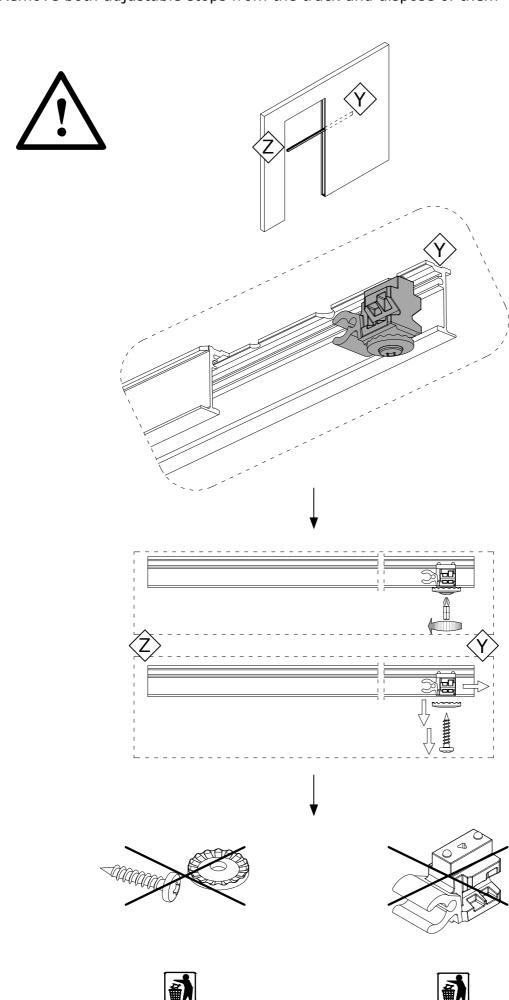


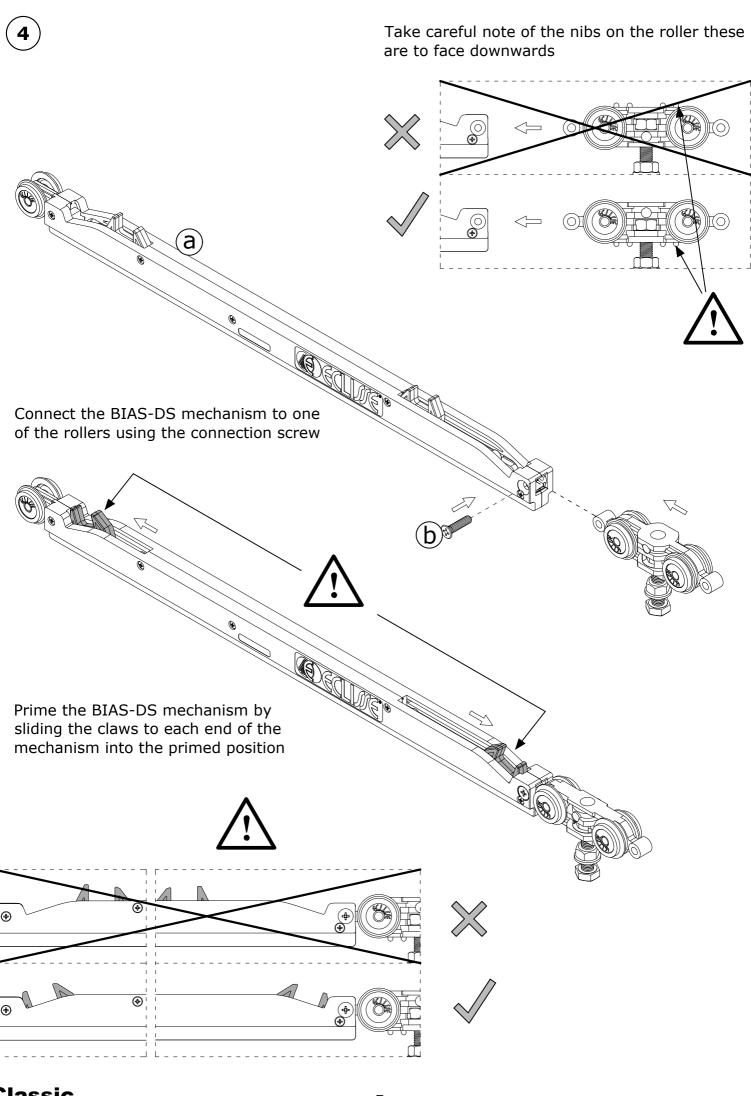

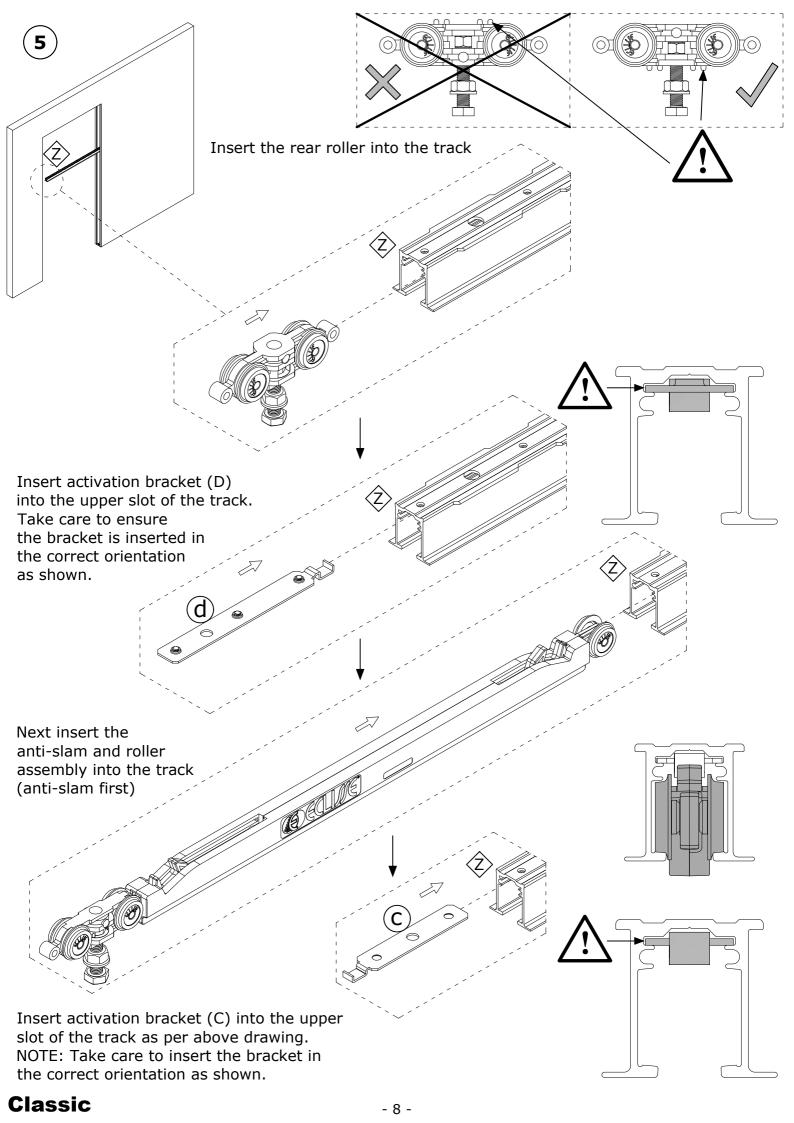


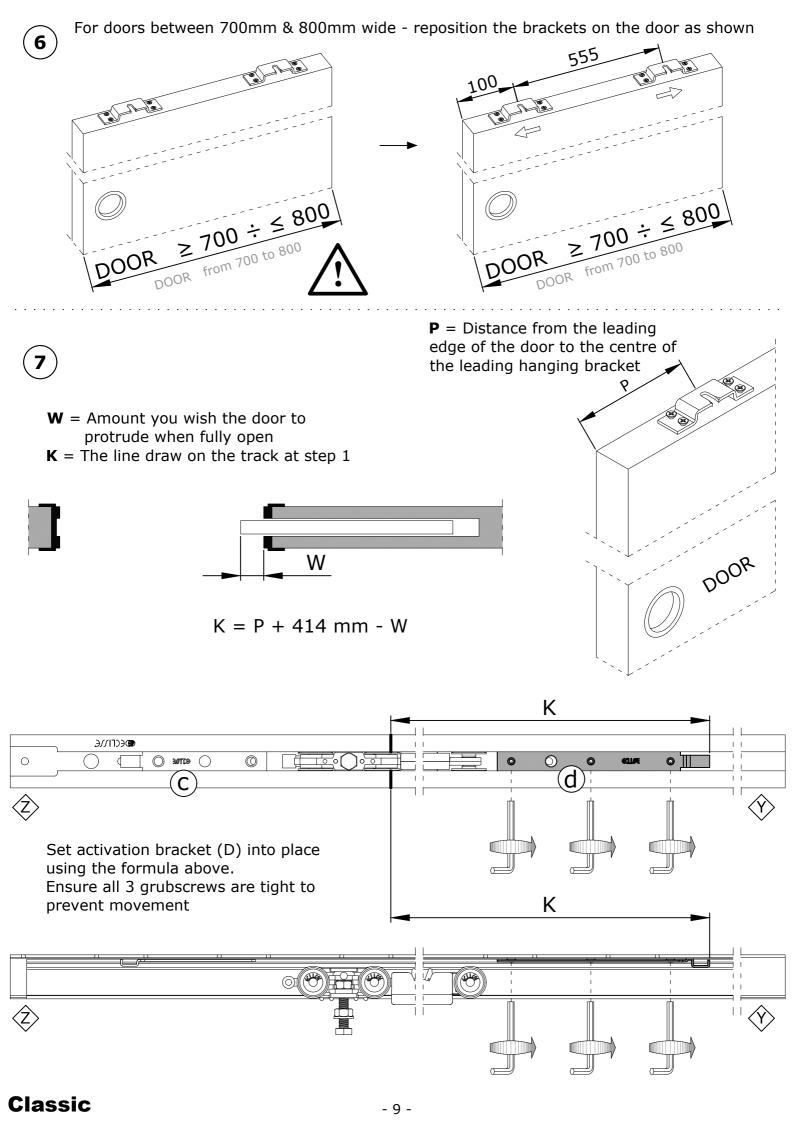




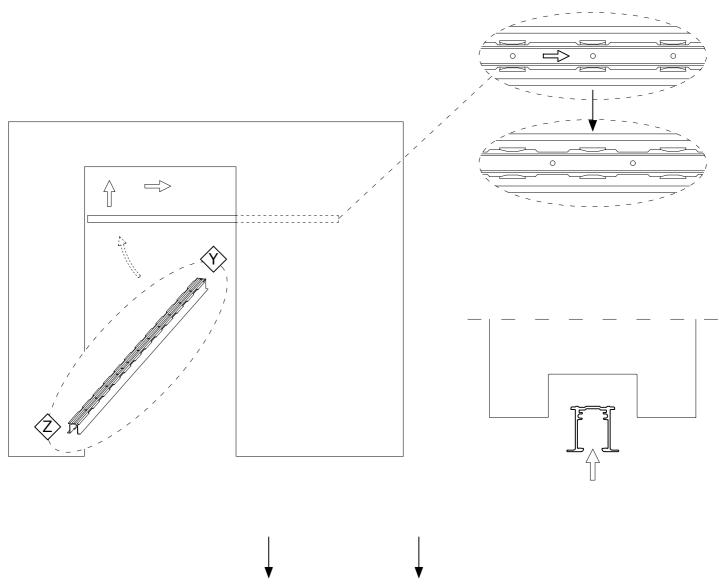

 
Insert the track back into the pocket system in reverse order of removal

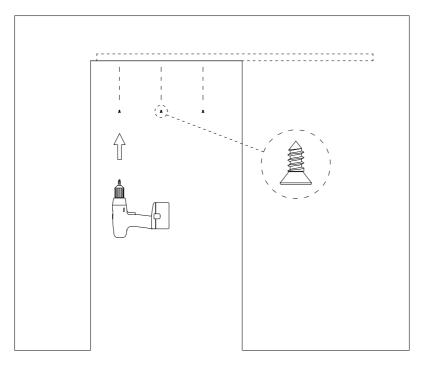








Fit the timber door posts (C) as per frame instructions

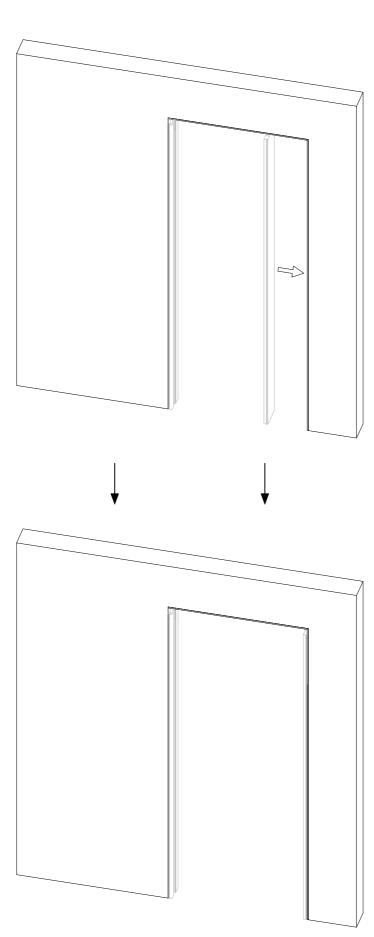

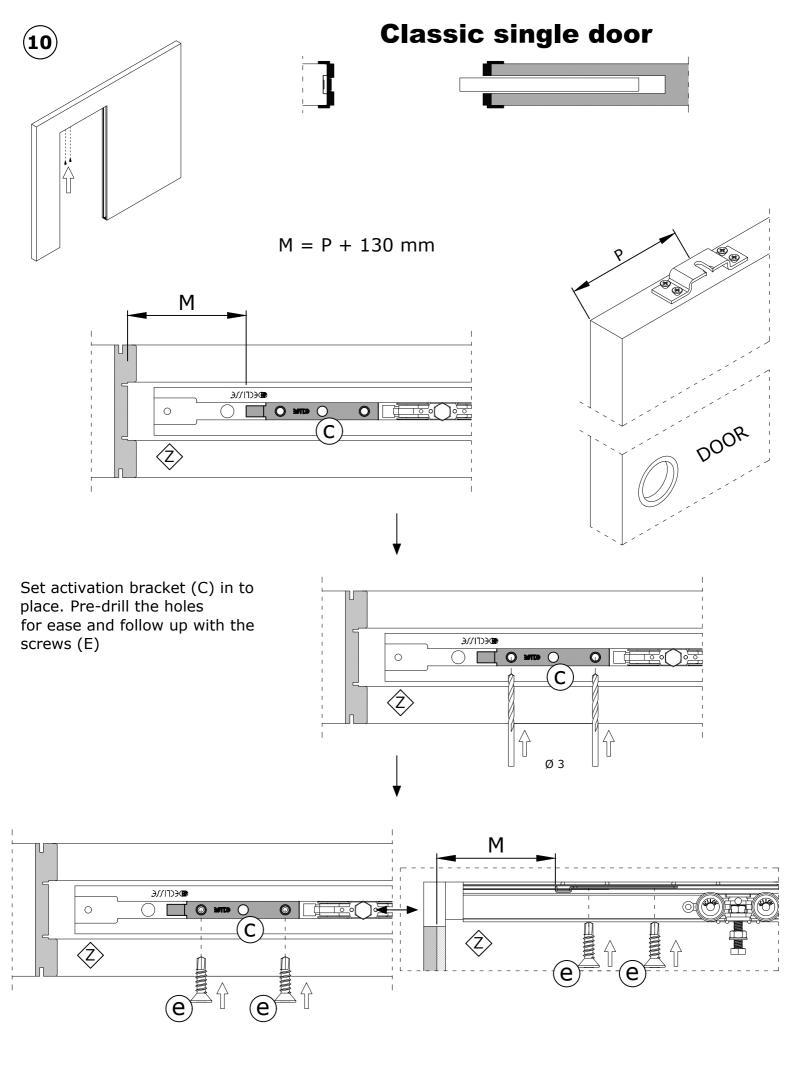

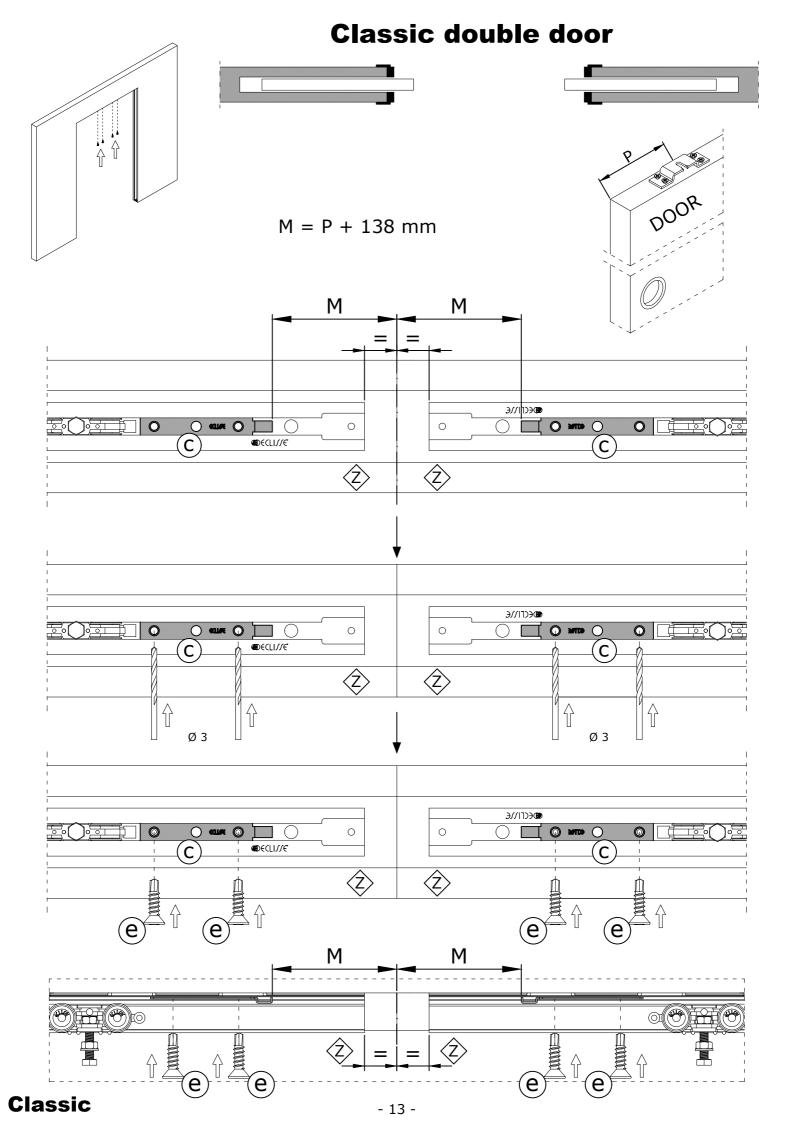




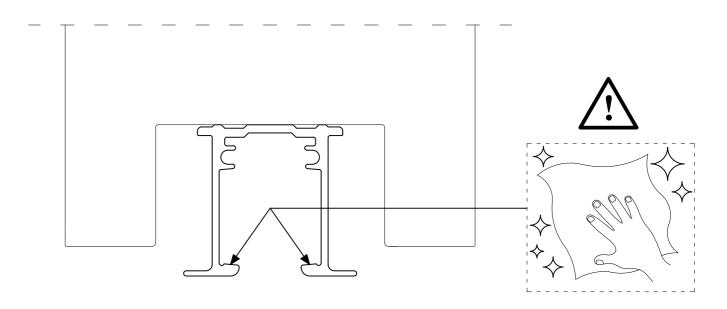





### WARNING!


If the hanging bolt is adjusted too high, it will protrude through the top of the roller. If this happens, lower the door or trim down the bolt slightly.

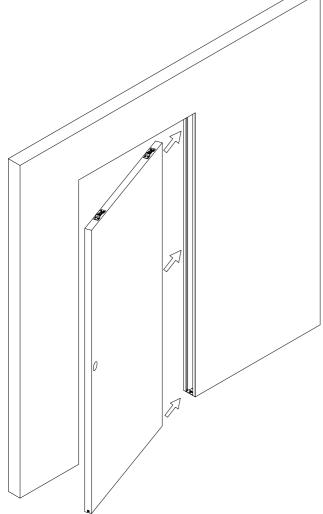

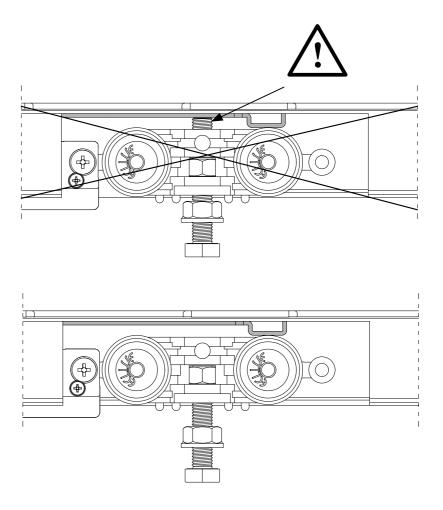




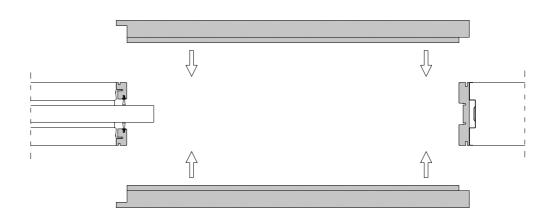

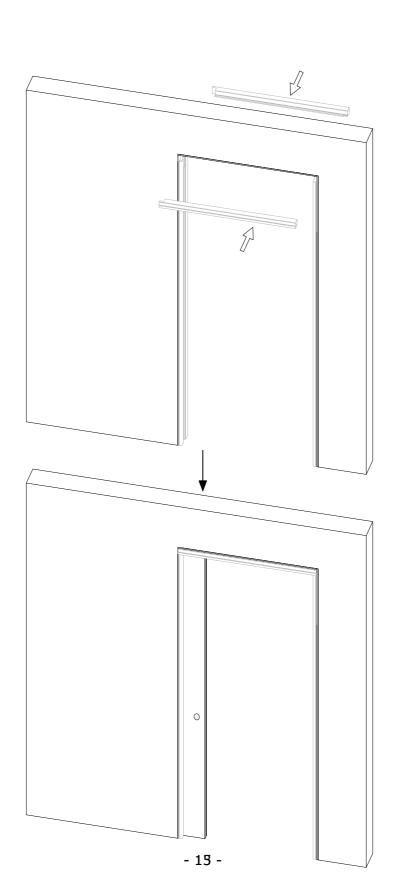

## Classic



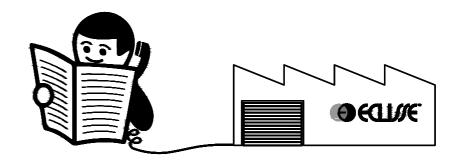



www.eclisseworld.com/en/dealer-locator

