

Offroam Clamp Installation Instructions for round air vents



SUPPORT

Email: hello@getoffroam.com

Text & Call: 415-592-7626



Scan for video instructions



Components

1. Front plate with integrated mounting ball and a protective rubber liner
2. Backing plate with threaded holes
3. Clamping screws joining front and backing plate


Tools

- 2mm L-key (provided in the box)

WARNING


- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before installation to avoid damage to air vent bezel.
- Designed to work with OEM air vents. Not compatible with aftermarket air vent modifications.
- Do not mount heavy devices and/or use with long extension arms. Check the rated weight limit.
- Mount electronics away from air flow to prevent heat damage.

Step 1

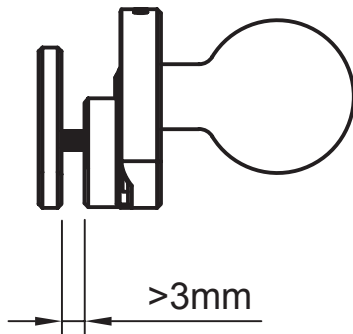

Using the L-key provided, loosen the two clamping screws to create at least 3mm (1/8") gap between the front & the backing plates of the clamp. Keep screws threaded into the backing plate.


Step 2

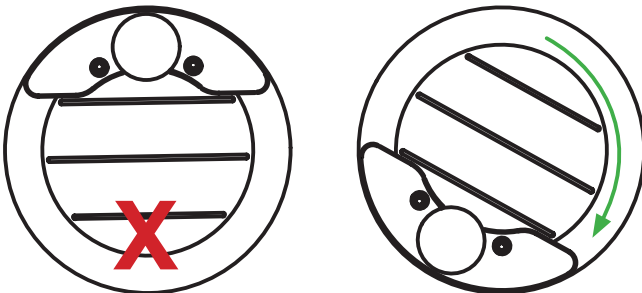

Open the vehicle air vent louver to full air flow position. Prop up the clamp to through larger opening between louvers and bezel. Rotate clamp to aim air vent to the desired position.


Note: Mounting clamp will reduce air vent aim

Step 3

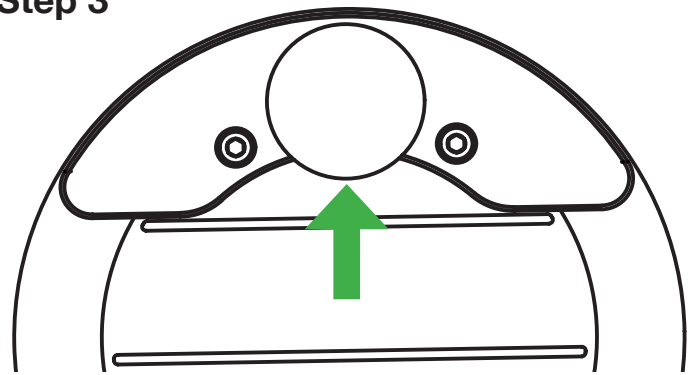

Hold the clamp radially against the air vent to ensure front plate fully wraps around the bezel. Tighten both screws, alternating between each screw until fully snug.

Alternate tightening 5-6 times until both screws are equally tight

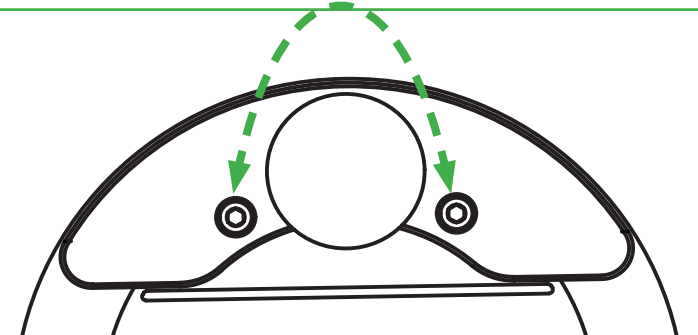

WARNING

Clamping screws not tightened fully and equally can result in a loose clamp. Check and re-tighten periodically