

VOYAGER
KICK SCOOTER

STREAMER



ITEM NUMBER | SCOT-1050S

USER'S MANUAL

SAFETY PRECAUTIONS

When using your Voyager Streamer Kick Scooter, basic safety precautions should always be followed, including the following:

BEFORE RIDING

1. READ ALL INSTRUCTIONS BEFORE USING YOUR SCOOTER.
2. Your scooter is designed to be used by children of ages 3-8 years old.
3. Do not allow anyone weighing over 115 pounds to ride your scooter.
4. Do not let children use your scooter without suitable adult supervision.
5. Make sure that your front and rear wheels are secure.
6. Make sure the wheels, handlebars and all parts of your scooter are properly attached before riding.
7. Make sure to wear a helmet and any other protective gear necessary to ride a scooter, making sure to comply with the laws of your local municipality.
8. Do not ride your scooter with any loose clothing that can get caught in the wheels.
9. Charge your scooter for a full five hours before initial use.
10. Do not expose your scooter's battery to liquid or moisture. Similarly, do not expose your scooter or its battery to excessive heat or fire.
11. When charging the battery, only use the supplied charging cable included with your scooter.
12. Connect all wires properly, making sure they are not entangled.
13. Do not ride your scooter if you notice any defects or irregularities. Contact the manufacturer or a certified technician immediately for support.

WHILE RIDING

1. When riding your scooter, make sure to always follow all traffic and safety rules based on the laws of your local municipality.
2. Do not ride your scooter while under the influence of any medication which can cause impairment.
3. Do not attempt to do any tricks while riding your scooter. Furthermore, do not ride your scooter over rough terrain or uneven surfaces.
4. Ride carefully. Avoid applying the breaks abruptly.
5. Practice riding in spacious areas at low speeds until you become more experienced and comfortable with higher speeds.
6. Do not allow your scooter to be dragged by cars or bikes. Do not use your scooters on escalators or in crowded areas.
7. Do not use your scooter at night or in areas of low visibility.
8. Always power off your scooter when it is not in use.

NOTE: *The color and design of your scooter may vary from the ones displayed in this user's manual.*

INTRODUCTION

Thank you for purchasing your new Streamer Kick Scooter and welcome to the Voyager family. We hope that you'll do plenty of exploring on your new scooter. Please enjoy your new scooter responsibly and be sure to read the entire instruction manual before your first use. Have a blast, be safe and **Get Moving!**

SPECIFICATIONS

- Battery: Rechargeable 3.7V 4400mAh Lithium Ion Battery
- Power Supply: DC 5V
- Charge Time: ~4 Hours
- Max Rider Capacity: 115 Pounds
- Recommended For Ages: 3-8 Years Old

YOUR SCOOTER



SETUP

UNFOLDING YOUR SCOOTER



On the bottom of the handlebar stem is a lock which keeps it in place. Twist it so that it is in the "open" position, and then pull it towards the rear wheel of your scooter.



Lift the handlebar stem all the way up so that it stands perpendicular to the ground. Make sure that it stands firmly in place before riding your scooter. Twist the lock so that it is in the "lock" position.

ADJUSTING THE HANDLEBAR HEIGHT



Press and hold the button on the handlebar stem to allow the handlebars to be raised up or lowered down.



On the top of the handlebar stem is a lock which keeps the handlebars in place. Twist this lock so that it is in the open position, then raise or lower your handlebars to a desired height. Make sure that the handlebars snap securely in place, and then twist the lock so that it is in the "lock" position.

REFOLDING YOUR SCOOTER



On the bottom of the handlebar stem is a lock which keeps it in place. Twist it so that it is in the "open" position, and then pull it upwards.



Push the handlebar stem all the way down so that it lies parallel to the ground. Make sure that it lies firmly in place. Twist the lock so that it is in the "lock" position.

CHARGING

Your scooter has a rechargeable lithium ion battery. The full performance of the battery is only achieved after a few charging-discharging cycles. Charge the battery fully before first use. To do so, follow the steps below:

1. Undereath your scooter you will find the battery compartment. You can open the battery compartment using a screwdriver.



2. Once the battery compartment is open, plug the charging cable that is connected to the battery into the cable in the battery compartment. Close the battery compartment and screw the cover back on.

3. Connect one end of the included charging cable into the charging port located under the base of your scooter. Connect the other end to a USB power adapter (not included). Charging takes approximately 4 hours to complete. Unplug the cable immediately when charging is complete. Overcharging could reduce the life of the battery. A charged battery will lose its capacity if it is not used on a regular basis.



POWERING ON

Once your scooter is setup and charged, you can power it on and get ready to ride it. To power on your scooter, press the power button located under the base of the scooter, right next to the charging port.

When you are finished riding your scooter, press the power button again to power off your scooter.



MUSIC AND LIGHTS

After powering on your scooter, you can control how it lights up, and have it play sounds and music. To do so, follow the steps below:

1. In between your handlebars you will see two buttons. You can press the button on the left repeatedly to control the music and light settings.



2. By pressing the button repeatedly you will toggle through the music and lighting options, allowing you to turn on the front lighting, turn on sound, or turn both off.



J E T S T R E A M S

While riding, you can activate your jet streams. They will light up and emit a stream of mist. Fun!

1. In between your handlebars you will see two buttons. You can press the button on the right repeatedly to control the jet stream settings.



2. By pressing the button repeatedly you will turn the jet streams on or off. When turned on they will light up and emit mist.

3. Your jet streams need water to emit mist. Push in the front of the jet stream (see picture to the right) and pour water directly in.



RIDING

When riding your scooter always be sure to follow all of the safety guidelines discussed on page one of this manual. Voyager is not responsible for any accidents which occur while riding.



When first learning to ride a scooter, ride as slowly as possible. Only increase your speed as you gain more comfort and experience riding.

Tilt your weight to the left or right to steer your scooter. Grip the handlebars to steady yourself.

To decrease your speed, use your foot to press the foot brake. Avoid abrupt braking and rapid acceleration.

FCC COMPLIANCE

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

WARRANTY

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call (855)-292-4087 in the U.S. or visit our website at www.ridevoyager.com.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepai red.



VOYAGER