

SEALEVEL®

Optically Isolated 7-Port USB Hub with SeaLATCH® USB Ports

User Manual



Item# 270U

Table of Contents

Safety Instructions	4
Introduction.....	5
Features	5
Before You Get Started.....	6
Advisory Conventions	6
What's Included	6
Optional Items.....	7
Installation.....	8
Windows 98/ME/2000/XP/Vista/7™ Operating Systems	8
Linux Support.....	8
Hardware Description.....	9
Optical Isolation	9
USB Ports	9
Status LEDs.....	10
External Power	10
SeaLATCH® USB	11
SeaLATCH Locking USB Cables	12
Mounting Options	13
Technical Specifications	14
Power Requirements	14
Dimensions.....	14
Weight.....	14
Environmental Specifications	14
Manufacturing	14
Appendix A – Troubleshooting.....	15
Appendix B – How to Get Assistance.....	16
Technical Support.....	16
Appendix C – Silk Screen – Seal/O-270U PCB	17
Appendix D – 270U Board Mounting Outline.....	18
Appendix E – Compliance Notices.....	18
Federal Communications Commission Statement	19
EMC Directive Statement.....	19
Warranty.....	20

Warranty Policy.....	20
Non-Warranty Repair/Retest	20
How to Obtain an RMA (Return Merchandise Authorization)	20
Trademarks	20

Safety Instructions

Electrostatic Discharges (ESD)

A sudden electrostatic discharge can destroy sensitive components. Proper packaging and earthing rules must therefore be observed. Always take the following precautions.

- Transport boards and cards in electrostatically secure containers or bags.
- Keep electrostatically sensitive components in their containers, until they arrive at an electrostatically protected workplace.
- Only touch electrostatically sensitive components when you are properly earthed.
- Store electrostatically sensitive components in protective packaging or on anti-static mats.

Grounding Methods

The following measures help to avoid electrostatic damages to the device:

- Cover workstations with approved antistatic material. Always wear a wrist strap connected to workplace as well as properly grounded tools and equipment.
- Use antistatic mats, heel straps, or air ionizers for more protection.
- Always handle electrostatically sensitive components by their edge or by their casing.
- Avoid contact with pins, leads, or circuitry.
- Turn off power and input signals before inserting and removing connectors or connecting test equipment.
- Keep work area free of non-conductive materials such as ordinary plastic assembly aids and Styrofoam.
- Use field service tools such as cutters, screwdrivers, and vacuum cleaners which are conductive.
- Always place drives and boards PCB-assembly-side down on the foam.

Introduction

The Seal/O-270U is an optically isolated 7-port USB hub that protects the host computer from spikes, surges and ground loops commonly found in industrial environments. The hub is powered by an industrial grade wall-mount power supply providing a full 500mA to each attached USB peripheral. The Seal/O-270U is ideal for adding USB ports to a SeaPAC touchscreen HMI system, a Relio R1000 embedded solid-state industrial computer, or a Seal/O data acquisition “stack”.

The Seal/O-270 integrates SeaLATCH USB ports, which are fully compatible with standard USB cables. When used with the included USB cable with a SeaLATCH type B USB connector, the metal thumbscrew provides a secure metal-to-metal connection to the hub and prevents accidental cable disconnection. The hub’s seven SeaLATCH type A USB connectors can secure USB peripherals to the hub in the same way. Additionally, a highly-retentive type B USB connector helps prevent unintentional separation from a standard USB cable.

Features

- Provides 1500 VAC isolation on upstream USB port
- Includes 7 USB downstream ports with 500mA available per port
- SeaLATCH USB connectors provide locking connection
- Native support in Windows 98SE/ME/2000/XP/Vista/7™, and Linux kernel v2.4 operating systems
- Status LEDs indicate external power, connection to host, and fault condition
- High-retention USB type “B” connector prevents accidental disconnection of standard USB cable



Before You Get Started

Advisory Conventions



Warning - The highest level of importance used to stress a condition where damage could result to the product or the user could suffer serious injury.



Important - The middle level of importance used to highlight information that might not seem obvious or a situation that could cause the product to fail.



Note - The lowest level of importance used to provide background information, additional tips, or other non-critical facts that will not affect the use of the product.







What's Included

The Seal/O-270U is shipped with the following items. If any of these items is missing or damaged, please contact Sealevel for replacement.

- Seal/O-270U - Seal/O 7-Port Isolated USB Hub
- CA356 - USB Type A to SeaLATCH USB Type B Cable, 6' in Length
- TR123 - 12VDC @ 2.5A Wall-Mount Power Supply
- Sealevel Software CD - Manual Only

Optional Items

Depending upon your application, you are likely to find one or more of the following items useful with the Seal/O-270U. All items can be purchased from our [website](#) or by calling +1 864-843-4343.

SeaLATCH USB Type A and Type B Device Cable, 72" (Item# CA332)	
The CA332 is a USB device cable with SeaLATCH USB type A and type B connectors. The metal thumbscrew on each connector provides a secure metal-to-metal connection to devices with SeaLATCH USB ports.	
SeaLATCH USB Type A to USB Type B Device Cable, 72" (Item# CA355)	
The CA355 is a USB device cable with a SeaLATCH USB type A connector and standard type B connector. This cable secures the HUB7M to legacy USB peripheral devices.	
USB Type A to SeaLATCH Type B Device Cable, 72" (Item# CA356)	
The CA356 is a USB device cable with a SeaLATCH USB type B connector and standard type A connector. This cable is included with all Sealevel USB products with an integrated SeaLATCH type B USB port.	
USB Type A to USB Type A, 3 Meter Extension Cable (Item# CA214)	
The CA214 is a fully rated USB extension cable that adds three meters to any existing USB cable (maximum 5 meters). The CA214 has a type A male connector on one end and a type A female connector on the other end.	
USB Type A to USB Type B, 72" Device Cable (Item# CA179)	
The CA179 is a 72" USB device cable that connects USB peripherals with a Type B connector to the Type A connector on a host computer. The CA179 is USB 2.0 compliant and is compatible with USB 1.1 and 1.0 devices.	
USB Type A to USB Type B, 5 Meter Device Cable (Item# CA215)	
The CA215 is a fully rated 5 meter device cable that connects USB peripherals with a type B connector to the type A connector on a host PC. This cable provides the maximum 5 meters (16 feet) for a USB connection.	

Installation

Windows 98/ME/2000/XP/Vista/7™ Operating Systems

1. The Seal/O-270U is fully supported as a generic USB hub device in Windows 98/ME/2000/XP/Vista/7™ operating systems and requires no separate driver. The Sealevel Software CD is included only for distribution of the user manual and other literature.
2. Simply connect the included wall-mount power supply to the Seal/O-270U and connect to an AC outlet.
3. Using the included SeaLATCH USB device cable, plug the Seal/O-270U into an available USB port on your host system.
4. The 'Found New Hardware' screen will appear and the hub will be automatically recognized as a generic USB hub device.
5. The hub is ready to use when you see the screen 'Your USB hub is installed and ready to use.'



Windows NT is not USB aware and thus cannot support this device.

Linux Support

USB devices are supported in Linux kernel v2.4 or better. Refer to the help files included with your Linux distribution for specific instructions on adding generic USB hub devices.

Hardware Description

Optical Isolation

The Seal/O-270U is an optically isolated USB hub that connects up to seven USB peripherals while protecting the host computer from voltages up to 1500 VAC. This protects the host computer from potentially damaging voltage spikes, power surges, and ground loops commonly found in industrial and OEM applications.


USB Ports

The Seal/O-270U integrates SeaLATCH USB ports, which are fully compatible with standard USB cables. When used with the included USB cable with a SeaLATCH type B USB connector, the metal thumbscrew provides a secure metal-to-metal connection to the hub and prevents accidental cable disconnection.

Additionally, a highly-retentive type B USB connector helps prevent unintentional separation from a standard USB cable. The SeaLATCH type B locking connector and high retention type B port are shown below.



The hub's seven SeaLATCH type A locking USB connectors can secure USB peripherals to the hub in the same way. Two of the SeaLATCH type A USB ports are shown below. Each of the seven downstream type A USB ports provides a full 500mA to USB peripherals.

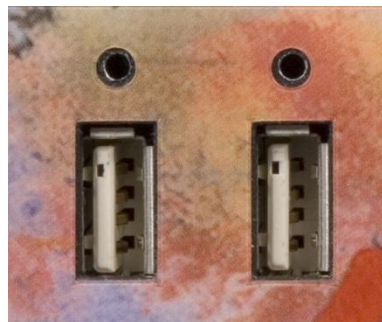

Status LEDs

Status LEDs are also included on the front of the Seal/O-270U module to indicate the following information:

- **ENABLE** (Yellow) - Lights when the USB hub is enumerated by the host system.
- **FAULT** (Red) - Lights when there is a problem with a downstream USB port. Disconnect the downstream devices one at a time until the status returns to normal.
- **EXT POWER** (Green) - Indicates the external power supply is properly connected to the hub and an AC power source.



External Power

The Seal/O-270U includes an industrial grade wall-mount power supply (Item# [TR123](#)) that outputs 12VDC @ 2.5A. Power is input via a 5mm 2-position removable screw terminal block (shown below). To prevent accidental disruption of power, the terminal block includes mounting screws for securing to the hub.




SeaLATCH® USB

The Seal/O-270 integrates SeaLATCH USB ports, which are fully compatible with standard USB cables. When used with the included USB cable (Item# [CA356](#)) with a SeaLATCH USB Type B connector, the metal thumbscrew provides a secure metal-to-metal connection to the hub and prevents accidental cable disconnection.

The hub's seven SeaLATCH Type A USB connectors can secure USB peripherals to the hub in the same way. Sealevel incorporates SeaLATCH locking USB ports on many USB I/O devices. Accidental cable disconnection is the most common point of failure with USB industrial I/O devices and SeaLATCH cables and connectors prevents that while being fully compatible with standard USB cables.


Examples of the Seal/O-270U with SeaLATCH equipped Sealevel I/O devices are shown below.

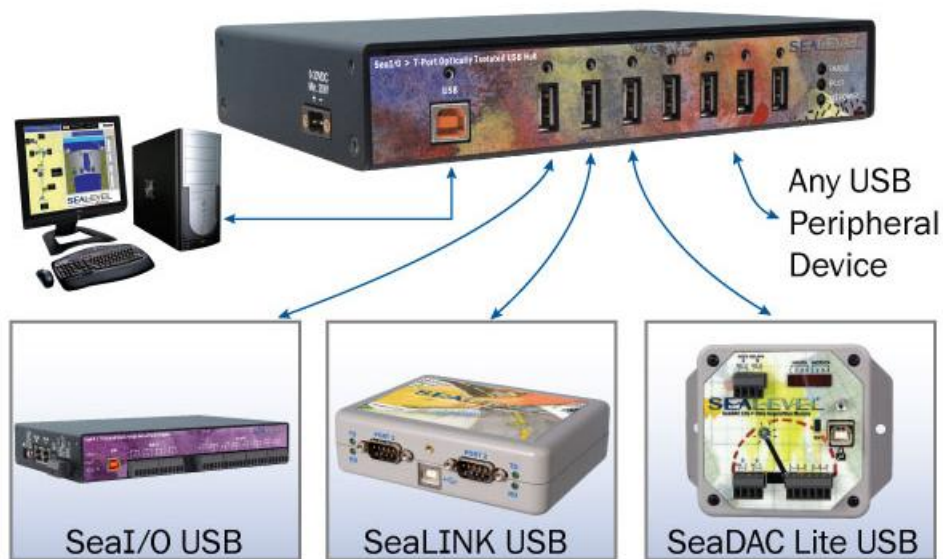

SeaLATCH Locking USB Cables



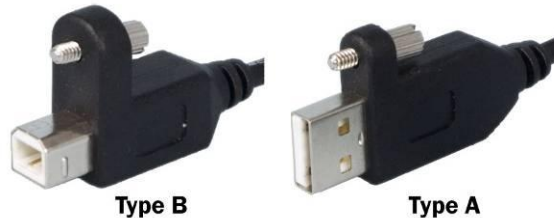

SeaLATCH locking USB cables integrate a small thumbscrew into each USB connector. SeaLATCH USB cables are fully interchangeable with standard USB cables. The thumbscrew provides a secure metal-to-metal connection preventing accidental disconnection. SeaLATCH USB cables are available in three configurations.

SeaLATCH USB Connectors



USB Type A to SeaLATCH USB Type B Device Cable, 72 in Length (Item# CA356)	
<p>The CA356 is a 72" USB cable with a SeaLATCH type B connector and a standard USB type A connector. This cable provides a secure connection between Sealevel products with a SeaLATCH type B port and legacy USB type A ports. The CA356 is included with Sealevel devices with a SeaLATCH type B port.</p>	<p>CA356</p>
SeaLATCH USB Type A to SeaLATCH USB Type B Device Cable, 72 in Length (Item# CA332)	
<p>The CA332 is a 72" cable with both SeaLATCH type A and B connectors. This cable secures both ends of the cable to devices with SeaLATCH USB ports and offers complete protection against accidental cable disconnection.</p>	<p>CA332</p>
SeaLATCH USB Type A to USB Type B Device Cable, 72 in Length (Item# CA355)	
<p>The CA355 is a 72" cable with a standard USB type B and a SeaLATCH type A connector. This cable provides a secure connection between legacy USB devices and Sealevel products with a SeaLATCH type A port, such as the isolated USB hub (Item# 270U).</p>	<p>CA355</p>

Mounting Options

Seal/O Mounting Kit	
<p>The HUB7M is ideal for adding USB ports to a Relio R1000 embedded solid-state industrial computer (as shown), SeaPAC touchscreen HMI system, or a Seal/O data acquisition “stack”. Order the expansion kit (Item# KT122) that includes four metal straps and four #4-40 metal screws.</p>	
DIN Rail Mounting	
<p>The HUB7M is available with a factory-installed DIN-rail mounting clip. Alternatively DIN-rail mounting clips can be ordered as a field upgrade kit (Item# DR104). The bracket with clip is easily attached using two included #4-40 Phillips head machine screws.</p>	
Table/Wall Mounting	
<p>The flush mount bracket kit (Item# KT123) is extremely versatile and can be used to mount the HUB7M from the top, bottom, or back edge. The hub alone or with a stack of Seal/O modules can be mounted flat to a tabletop, underneath a counter, or inside an enclosure. The kit can be used to mount the hub flat to a wall, or along the back edge, similar to DIN-rail mounting options.</p>	
Universal Mounting Bracket	
<p>The universal mounting bracket (Item# KT125) can be used as a “backpack” to other USB peripheral devices to the HUB7M. The universal arrangement of slots and holes accept bolt sizes to M4 and can be used for virtually any mounting configuration. The bracket also has holes for both 75mm and 100mm VESA mounting options.</p>	

Technical Specifications

Power Requirements

+9-30 VDC @ 20W (Minimum)

Dimensions

Length	Width	Height
7.5"	5.1"	1.2"
19.05cm	12.95cm	3.30cm

Weight

1.0 lbs/.46 kg

Environmental Specifications

Specification	Operating	Storage
Temperature Range	0°C - 70°C (32°F - 158°F)	-50°C - 105°C (-58°F - 221°F)
Humidity Range	10 to 90% R.H. Non-Condensing	10 to 90% R.H. Non-Condensing

Manufacturing

All Sealevel Printed Circuit boards are built to UL 94V0 rating and are 100% electrically tested. These printed circuit boards are solder mask over bare copper or solder mask over tin nickel.

Appendix A – Troubleshooting

The HUB7i is a generic USB hub and should provide years of trouble-free service. Should the device appear to not be functioning correctly, the following tips can eliminate most common problems without the need to call Technical Support.

1. Make sure the power supply is connected to the hub and to a live AC power outlet. The green LED on the front of the unit will light, indicating the hub is properly powered. Inspect the power supply or call for a replacement if the green LED does not light after connecting to power.
2. Make sure the hub is connected to a USB port using the included USB cable or a quality replacement USB cable. The yellow LED will light when the hub is successfully communicating with the host system.
3. The hub is supported in any USB aware operating system that supports generic USB hub devices, including Windows 98/ME/2000/XP/Vista/7™ operating systems and Linux (kernel v2.4 or better). No additional drivers are required. Verify that USB support is enabled in the host system BIOS and the hub is functioning properly in the operating system. You can verify the hub is working properly in Windows using Device Manager.
4. If the red LED lights, there is a fault condition with one of the downstream USB ports. Disconnect your USB peripherals one at a time until the red LED goes out. Inspect the problem USB peripheral and replace, if necessary. Try connecting a different USB peripheral to the problem port. If the red LED lights on the same USB port with a different device, contact technical support for further assistance.

Appendix B – How to Get Assistance

When calling for technical assistance, please have the device installed and ready to run diagnostics. If possible, have your user manual and current settings ready.

The Sealevel website is an excellent resource. The most current software updates and user manuals are available via our homepage by clicking on the 'Drivers' or 'Manuals' links located under 'Technical Support.' Manuals and software can also be downloaded from the product page for your device.

The FAQ section of our website answers many common questions. Refer to this helpful resource by visiting <http://www.sealevel.com/faq.asp>.

Technical Support

Monday – Friday

8:00 am to 5:00 pm EST


Phone: +1 (864) 843-4343

Email: support@sealevel.com


Web: www.sealevel.com

RETURN AUTHORIZATION MUST BE OBTAINED FROM SEALEVEL SYSTEMS, INC. BEFORE RETURNED MERCHANDISE WILL BE ACCEPTED. AUTHORIZATION CAN BE OBTAINED BY CALLING SEALEVEL AND REQUESTING A RETURN MERCHANDISE AUTHORIZATION (RMA) NUMBER.

Appendix C – Silk Screen – Seal/O-270U PCB

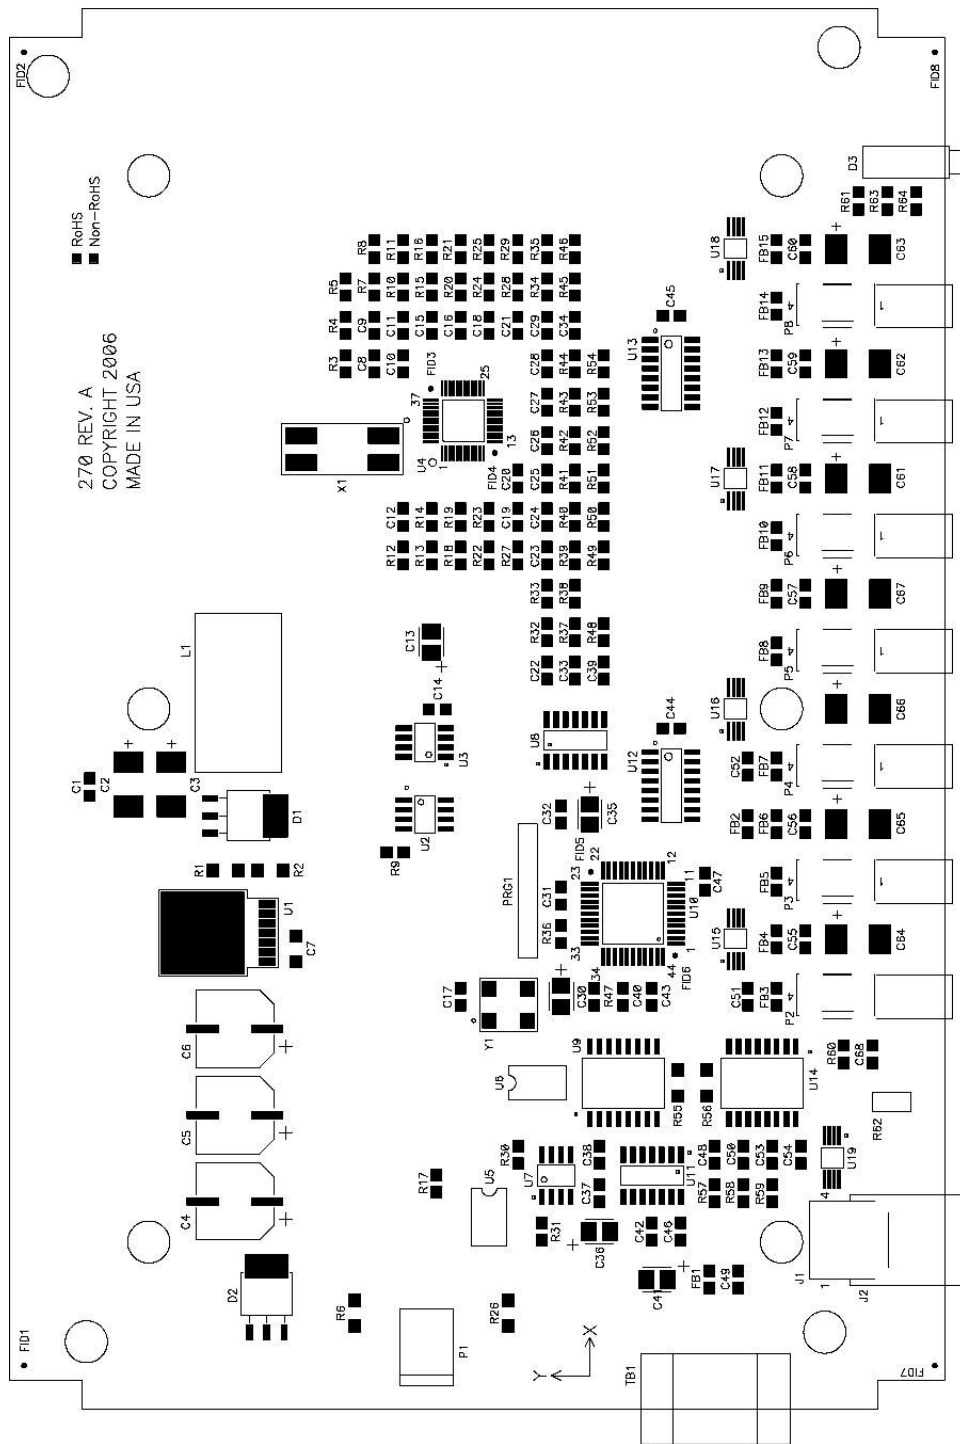

Appendix D – 270U Board Mounting Outline

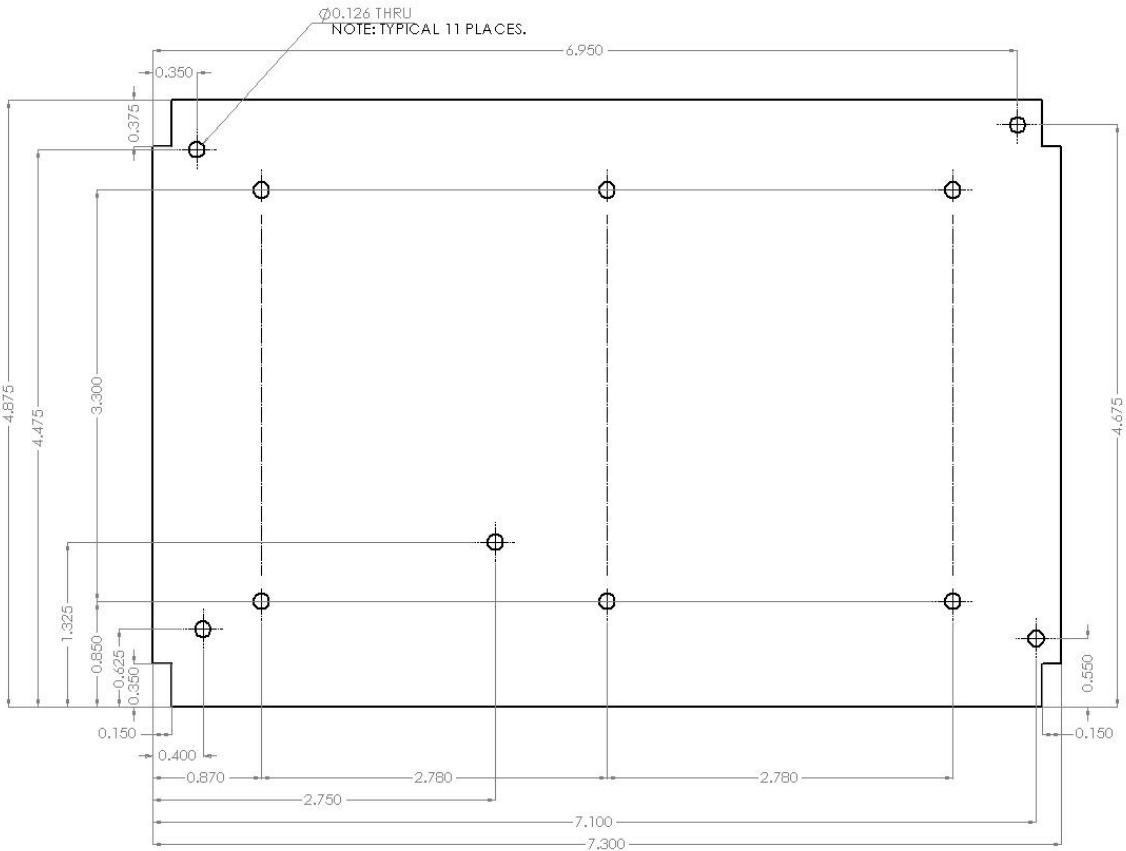

Appendix E – Compliance Notices

Federal Communications Commission Statement

FCC - This equipment has been tested and found to comply with the limits for Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in such case the user will be required to correct the interference at the users expense.

EMC Directive Statement



Products bearing the CE label fulfill the requirements of the EMC directive (89/336/EEC) and of the low-voltage directive (73/23/EEC) issued by the European Commission.

To obey these directives, the following European standards must be met:

EN55022 Class A - “Limits and methods of measurement of radio interference characteristics of information technology equipment”

EN55024 - “Information technology equipment Immunity characteristics Limits and methods of measurement”.

EN60950 (IEC950) - “Safety of information technology equipment, including electrical business equipment”



This is a Class A Product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures to prevent or correct the interference.

Always use cabling provided with this product if possible. If no cable is provided or if an alternate cable is required, use high quality shielded cabling to maintain compliance with FCC/EMC directives.

Warranty

Sealevel's commitment to providing the best I/O solutions is reflected in the Lifetime Warranty that is standard on all Sealevel manufactured I/O products. Relio™ industrial computers are warranted for a period of two years and the R9 family is warranted for a five year period from date of purchase. We are able to offer this warranty due to our control of manufacturing quality and the historically high reliability of our products in the field. Sealevel products are designed and manufactured at its Liberty, South Carolina facility, allowing direct control over product development, production, burn-in and testing. Sealevel achieved ISO-9001:2000 certification in 2002.

Warranty Policy

Sealevel Systems, Inc. (hereafter "Sealevel") warrants that the Product shall conform to and perform in accordance with published technical specifications and shall be free of defects in materials and workmanship for the warranty period. In the event of failure, Sealevel will repair or replace the product at Sealevel's sole discretion. Failures resulting from misapplication or misuse of the Product, failure to adhere to any specifications or instructions, or failure resulting from neglect, abuse, accidents, or acts of nature are not covered under this warranty.

Warranty service may be obtained by delivering the Product to Sealevel and providing proof of purchase. Customer agrees to insure the Product or assume the risk of loss or damage in transit, to prepay shipping charges to Sealevel, and to use the original shipping container or equivalent. Warranty is valid only for original purchaser and is not transferable.

This warranty applies to Sealevel manufactured Product. Product purchased through Sealevel but manufactured by a third party will retain the original manufacturer's warranty.

Non-Warranty Repair/Retest

Products returned due to damage or misuse and Products retested with no problem found are subject to repair/retest charges. A purchase order or credit card number and authorization must be provided in order to obtain an RMA (Return Merchandise Authorization) number prior to returning Product.

How to Obtain an RMA (Return Merchandise Authorization)

If you need to return a product for warranty or non-warranty repair, you must first obtain an RMA number. Please contact Sealevel Systems, Inc. Technical Support for assistance:

Available	Monday – Friday, 8:00AM to 5:00PM EST
Phone	864-843-4343
Email	support@sealevel.com

Trademarks

Sealevel Systems, Incorporated acknowledges that all trademarks referenced in this manual are the service mark, trademark, or registered trademark of the respective company.