

REPLACE IDLER BEARINGS ON T1X2 TUG

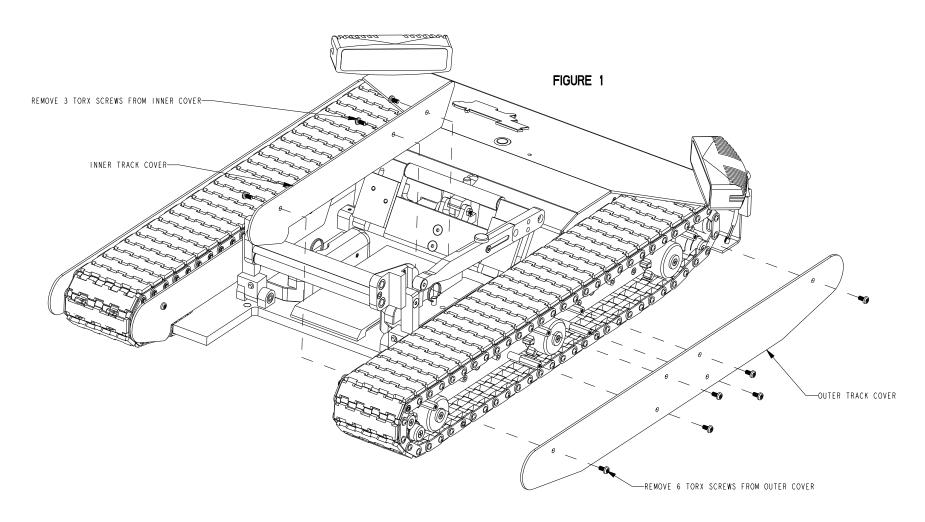


STEP 1. REMOVE OUTER AND INNER TRACK COVERS FROM THE SIDE WHERE THE REPAIR IS NEEDED.

FIGURE 2 NOTE 1: IT MAY BE NECESSARY TO LOOSEN THE TRACK (SEE FIGURE 3) NOTE 2: SCREWS HAVE BEEN GLUED SO IT MAY BE NECESSARY TO APPLY HEAT TO THEM FOR REMOVAL. STEP 3. INSTALL NEW PARTS AS SHOWN IN FIGURE 2. NOTE: APPLY GREEN LOCTITE TO BOTH SCREWS BEFORE INSTALLING THEM RETAINER-INNER ROLLER SPACER OUTER ROLLER SPACER--BEARING BEARING -OUTER ROLLER SPACER INNER ROLLER SPACER--RETAINER

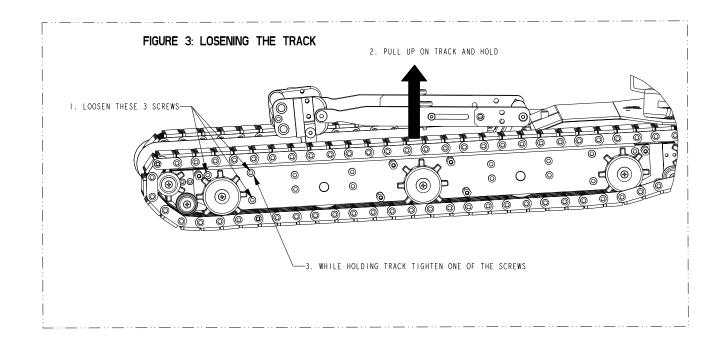

STEP 2. REMOVE OLD IDLE ASSEMBLY FROM THE TRACK.

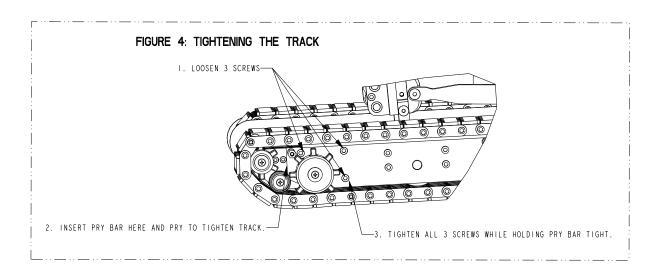

STEP 4. INSTALL INNER AND OUTER TRACK COVERS USING 9 SCREWS

