


## KOTANICAL STONE DIFFUSER MANUAL

Welcome to KOTANICAL Essential oil and Diffusers!

Whether you treated yourself to a diffuser *or* received it as a gift, we're so happy for you. It's a beautiful way to create an wellness ritual throughout your day and to discover which aromas you love most. This manual is meant to help you learn the basics about your diffuser and to inspire you to diffuse oils with great confidence.

## WHAT'S IN THE BOX

Throughout this manual, we refer to the diffuser parts by the names you see below. If you ever need clarification, just reference this diagram.

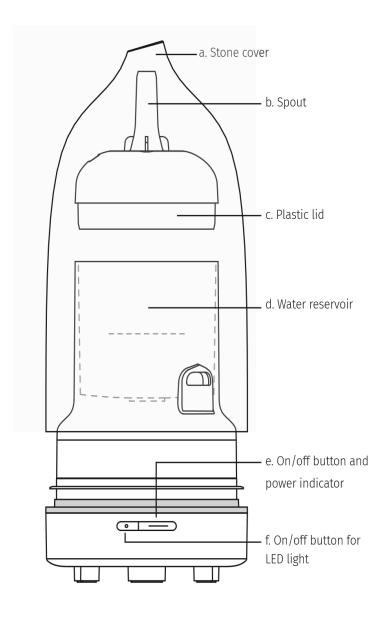

## SETTING UP YOUR DIFFUSER

## Step 1 Step 4

Take off the stone cover and the plastic Plug in your diffuser and choose plastic lid inside. your time setting by clicking the

Right hand side button large on/off

#### Step 2

Fill up the water reservoir to the fill line and add 10-15 drops of Kotanical essential oil

## Step 3

Place the plastic lid back on and slide the stone cover on by aligning the hole in the top of the cover with the spout.

#### **TIMED SETTINGS**

#### Continuous

Click the power button at the base once. You'll see a green light—this means your diffuser will run continuously for 3-hours.


30/30: Click the power button at the base twice. You'll see an light—this means your diffuser

#### **HOW MANY DROPS?**

will run for 30 seconds, then pause for 30 seconds for 7.5hours. For a room of approximately 500 square feet, we suggest diffusing 10-15 drops of essential oils, depending on how strong you'd like the scent to be. For a room of



approximately 500 square feet, we suggest diffusing 10-15 drops of essential oils. For larger spaces, we recommend diffusing 20-25 drops of essentials oils.

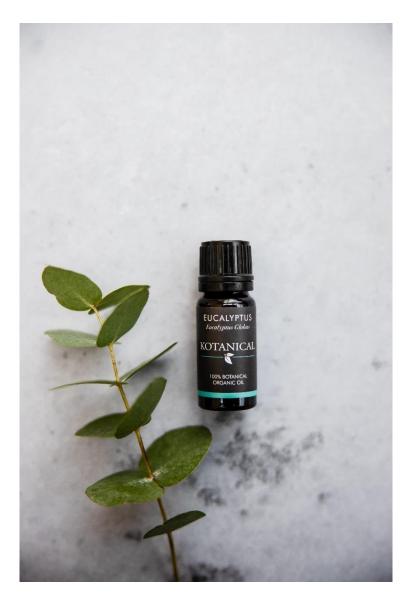

Quick tip: on days when you need a spa moment at home, add 6 drops Lavender and 5 drops Eucalyptus essential oil to your diffuser.

# **FEATURES**

Ultrasonic Technology Our diffusers run through vibrations (2.5 million vibrations/ second) instead of emitting heat. This means the plastic, water, and oils are never heated while diffusing, and that the plastic never interacts with the essential oils.

LED Light Our diffusers come with an optional light that gives off a warm, candle-like glow. You can turn it on or off by pressing the smaller button on the base of the diffuser.

# **MAINTENANCE**

**Ceramic Stone Cover** Our diffusers feature a matte, ceramic stone cover that is made out of the highest quality materials.

BPA-free Plastic The water reservoirs and plastic lids inside our diffusers are made from highgrade, BPA-free plastic.

Safety-off Switch No need to worry about whether you left your diffuser on—it will automatically turn off once it has run through its timed setting or is out of water.

## Voltage

Our diffusers have a voltage of 110 240 volts

Cleaning your diffuser is really simple, but also very important. To keep your diffuser looking and working like new, we recommend cleaning it every 2 weeks or 7-10 uses.

#### CLEANING THE STONE COVER

#### Step 1

Remove the stone cover from the base and run the whole piece under warm water.

#### Step 2

Apply a pea-sized amount of dish soap to the cover and use your fingers to buff out any marks or dirt. Note: do not use fabric or other materials because the stone's surface can pick up fibers.

#### Step 3

Rinse the diffuser and set it aside to air dry.

#### CLEANING THE WATER RESERVOIR

#### Step 1

Unplug your diffuser and remove the stone cover.

#### Step 2

Take off the plastic lid from the water reservoir. Using a damp cloth, wipe the inside of the water reservoir.

## Step 3

Plug in the diffuser and fill up the water reservoir halfway. Add 1 tbsp of white vinegar to the water reservoir and put the plastic lid and stone cover back on.

### Step 4

Turn the diffuser on and allow the vinegar to run through the diffuser for about 30 minutes.

# TROUBLESHOOTING

If you're having an issue with your diffuser, try these quick fixes first.

## If there is no mist coming out of your diffuser:

Make sure the water is not higher than the water line shown on the water reservoir. If this doesn't solve the problem, try emptying the water reservoir and gently wiping it out with a paper towel. Rinse out the plastic lid as well and follow the instructions for cleaning the inside of your diffuser. If there is still no mist coming out, don't hesitate to reach out to us.

### If your diffuser is spilling water:

Don't panic! The first thing you should do is turn off your diffuser. Make sure that the plastic lid and the stone cover are properly in place. If the diffuser continues to leak or spill water, get in touch with us and we'll happily help.

### WARRANTY

we offer a 1-year warranty on all our diffusers. If anything goes At wrong with your diffuser within KOTANICAL we believe that your first year, please reach out to everything should have 3 components: functionality, us and we'll be happy to replace it. durability, and beauty. That's why

## **SPECS**

Power: Input: AC 100-240V 50/60Hz 0.5A

Output: DC 12V 1A

Power Consumption: 10 W, 100 hrs operation is 1 kw/h

Frequency: Ultrasonic Vibration 2.5 MHz

Materials: Stone Cover: Ceramic

Base: ABS Plastic

Water Reservoir: Polypropylene

O-Ring: Silicon

Lens: Polycarbonate

Dimensions: 3.4 x 3.4 x 7 in | 88H x 180 mm

Weight: 1.1 lb | .52 kg

## **Get in Touch**

Our team would love to chat or help with anything we can! email us at Team@ Kotanical.ie

