Chain Sharpener Quick Manual

Fit for Model ES0403004



Warning! Danger of kickback



Use the chain saw with two hands.



Read operator's instruction book before operating this machine



Wear head, eye and ear protection.



Wear solid shoes and protective glove when handling and working with the equipment. Wear approprieate protections for legs and arms



Don't caught in the rain

1. MAIN PARTS





Disc / Handle Disc Cover Template Screw / Dial



Manual



Packing Box



F: Mount dial
1 Loosen the knob
2 Put on dial and tight knob



2. HOW TO ASSEMBLE



A: Take off the pressing plate




B:Put on disc



C:Lock the disc with pressing plate

3. HOW TO MOUNT SHARPENER WITH CHAINSAW

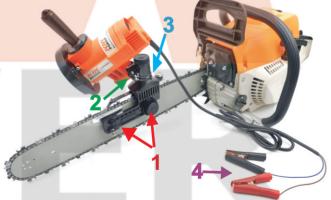



This knob for adjusting grinding depth




This is for adjusting angle





Connect with 12V battery red clamp with positive black clamp with negative

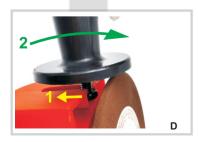

D: Fix Handle
1 Thrust bolt to groove
2 Turn handle clockwise



E:Mount disc cover 1 Thrust cover to groove 2 Screw up