QUICK MANUAL

KM0408255 **BRUSH CUTTER**

4 Assemble



Do not smoke or bring any fire or flame near the fue



Keep all people, animals and vulnerable objects at least 15 metres from the working area.



Beware of objects being thrown from the operating zone





Read owner's manual before operating this machine. Wear head, eyes and ear protection



Done!(Blade)



Wear solid shoes and protective glove when handling and working with the equipment

 
Main part and Accessories



2 Assemble Handle



out the handle on pipe and tighten up in clockwise with Ø4mm hex key



3 Assemble Brush Cutter Component



Safety Guard tighten up in clockwise with Ø19mm wrench



Insert the hex key through two holes



Loosen nut with wrench in clockwise



Take off the upper holder and put on the blade



Tighten up the blade holder in anti-clockwise with wrench



Loosen nut with wrench in clockwise



Tighten up the nylon head in anti-clockwise and remove the hex key

Insert pin and bend it then



Done!(Trimmer head)



5 Assemble Pole Pruner



Insert the pipe and shaft into gear box



Tighten up with Ø4mm hex key

Done!(Pole pruner)

Notice:



Fill oil and make sure that oil comes out from chain before using





Check the saw chain before using



Pull middle of chain to test tightness



If chain is too tight or loose loosen the nut then turn the screw to adjust



Pay attention to the correct direction of saw edge

QUICK MANUAL

KM0408255 **BRUSH CUTTER**



Do not smoke or bring any fire or flame near the fuel



Keep all people, animals and vulnerable objects at least 15 metres from the working area.



Beware of objects being thrown from the operating zone





Read owner's manual before operating this machine. Wear head, eyes and ear protection





Wear solid shoes and protective glove when handling and working with the equipment

Connect engine with components



Pull the ring upward and insert the pipe



How to start and stop engine



Fill tank with mixed fuel (30:1)



Pull the choke upward to stop air



Press primer bulb 5 times



Set the switch on start position



Pull the starter till ignition voice occur



Pull the choke downward to let air in




Pull the starter engin will be started




Don't stop engine suddenly from running speed. Run idle speed a while before stop.


Routine maintenance

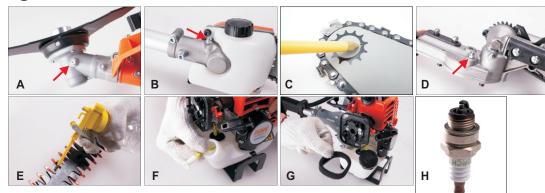



ABCDE: Apply 2-3 pumps of grease every 15 hours of operation.

FGH: Clean or replace fuel/air filter and spark plug when you feel that engine is hard to start or power less.

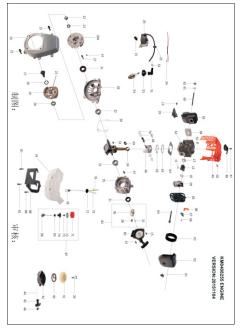

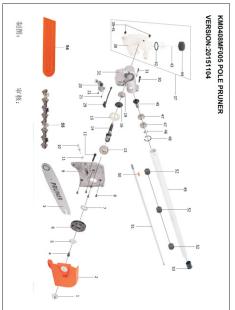

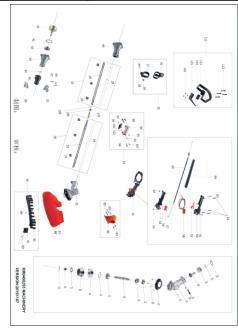

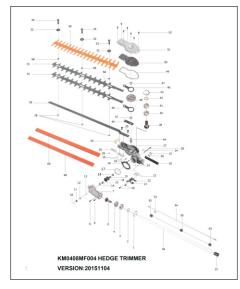

According to explosive diagram to order spare parts