

## 4' 8" MAMA & 2' 8" BABY BEAR

Model no. CTI1513930

[www.noma.com](http://www.noma.com)

**IMPORTANT:** Please read this manual carefully before assembly and save it for reference.

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the following:

### a) READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

- Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- This seasonal-use product is not intended for permanent installation or use.
- Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- Do not let lamps rest on the supply cord or on any wire.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- This is an electric product—not a toy. To avoid risk of fire, burns, personal injury and electric shock, it should not be played with or placed where small children can reach it.
- Do not use this product for anything other than its intended use.
- Do not hang ornaments or other objects from cord, wire, or light string.
- Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- Do not cover the product with cloth, paper or any material not part of the product when in use.
- This product is equipped with push-in type lamps. Do not twist lamps.
- This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded.
- Read and follow all instructions that are on the product or provided with the product.

 
## SAVE THESE INSTRUCTIONS USE AND CARE INSTRUCTIONS

- When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the live tree holder filled with water.
- If the product is placed on a tree, the tree should be well secured and stable.
- Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
- When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.
- When not in use, store neatly in a cool, dry location protected from sunlight.
- The LED lamp has polarity. Do not deliberately change the direction of the LED lamp in the lampholder.

## USER SERVICING INSTRUCTIONS

To replace the fuse:

- Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades.
- Remove fuse carefully. Turn plug over to remove fuse.
- Risk of fire. Replace fuse only with 3 A, 125 V fuse (provided with product).
- Close fuse cover. Slide closed the fuse access cover on top of the attachment plug.
- Risk of fire. Do not replace the attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

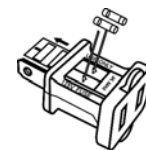

To replace a lamp:

- Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on the cord.
- Unlock the burned out LED lamp by lifting the hook and pull lamp and plastic base straight out of lampholder as shown in Fig. 1.
- Insert the spare LED lamp into the lampholder in correct direction and lock the hook of the lamp base by pushing lock down into the tab as shown in Fig. 2.
- Replace lamp with only 3.4 V, 20 mA LED type lamp (provided with product).

## CAUTION:

- Do not exchange the lamp base on the new lamp with the old one or the LED wires may break.
- Pull lamp and plastic base straight out of the lampholder.
- Do not deliberately change the direction of the LED lamp in the lampholder (always match the hook to the tab. See Fig. 2.)

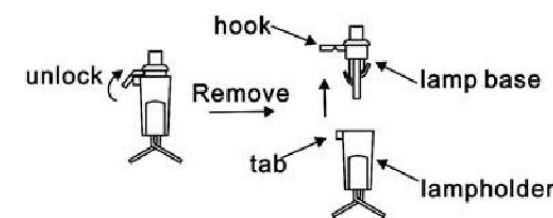 


Fig.1 Unlock and remove the burned out lamp

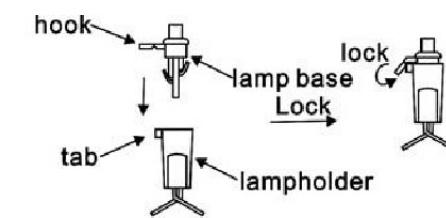 


Fig.2 Replace with the spare lamp

## CAUTION:

- Risk of fire. This product does not contain lamp shunts, which allow the product to operate if one lamp burns out. Replace lamps only with the spare lamps provided with this product.
- To reduce the risk of overheating, replace burned-out lamps promptly. Use 3.4 V, 20 mA lamps only.

UL MODEL NO. TY-B-200L/5W-46(56)

TY-B-70L/2W-46(32)

FOR INDOOR AND OUTDOOR USE

## Limited One-year Warranty

This CANVAS product carries a one-year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace a defective product, within the stated warranty period, when returned to the place of purchase with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

## MADE IN CHINA

Imported by CTC Triangle (USA) LLC 14000 24th Street E, Sumner, WA, USA 98390