

NOMA®

4' Farrow Pre-lit Potted Tree

Instruction Manual
For indoor and outdoor covered use
Retain carton for storage purposes

model no. CTI1518402 | www.noma.com

IMPORTANT: Please read this manual carefully before assembly and save it for reference.

Caution

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

- 1) Do not place near gas or electric heaters, radiators, fireplaces, candles or other similar sources of heat.
- 2) Do not install near fountains, bathtubs, sinks, or other wet areas.
- 3) Do not place in uncovered areas where there is prolonged exposure to sunlight or where rain/snow accumulates.
- 4) Please dispose of or recycle the batteries according to municipal requirements. Do not dispose of batteries in fire or other similar sources of heat.
- 5) Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries, or equivalent.
- 6) This is a Christmas decoration. This is not a toy. Keep out of the hands of small children.
- 7) For festive use only. Not intended for prolonged use over 90 days each season.
- 8) Read and follow all instructions that are on the product or provided with the product.
- 9) For indoor and outdoor covered use. Do not place in uncovered area where there is prolonged exposure to sunlight.

SAVE THESE INSTRUCTIONS


ASSEMBLY:

- 1) Insert the bottom tree trunk into the pot and then insert the treetop into the bottom tree trunk.
- 2) Shape the branches by working from the bottom of the tree upwards. Gently pull down the branches. Straighten the branches and fan out the tips.
- 3) Open the lid of the battery box by releasing the locks. Insert three AA batteries* into the compartment, making sure that the batteries are in the correct orientation. Close the lid with the locks.
- 4) Press the button on the battery box once for timer mode, twice to turn the lights constantly on, and a third time to turn the lights off or reset the timer. The built-in timer mode causes the lights to turn on and off in a cycle: on for 6 hours then off for 18. The user should initially turn on the lights at a specific time of their choice, and then the lights will turn on every day at approximately the same time.
- 5) Replace batteries when the lights become dim. Remove batteries from unit when it is not in use.

* Use 1.5 V AA batteries or equivalent. Batteries not included.

STORAGE:

- 1) Press the switch on the battery box to the "OFF" position. Remove the batteries from the battery box.
- 2) Carefully lift off the top section from the bottom section.
- 3) Leave the bottom section inserted in the pot.
- 4) Store in original carton.
- 5) Do not store in direct sunlight, in a damp area, or in an area where the temperature exceeds 40°C (104°F).

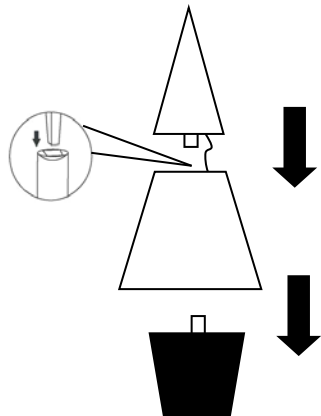

If the lights do not work:

- 1) Ensure the batteries are new and are inserted correctly into the battery box.
- 2) In cold temperatures, lithium AA batteries must be used. Otherwise, the lifespan of the batteries will be greatly reduced, or the lights will not turn on at all.

Troubleshooting

This Noma® product carries a five (5) year warranty against defects in workmanship and materials. Noma agrees to replace a defective product, within the stated warranty period, when returned to the place of purchase with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

MADE IN CHINA
Imported by CTC Triangle (USA) LLC
14000 24th Street E, Sumner, WA, USA 98390

Warranty