

## 5' INDOOR ARCTIC SPRUCE POTTED TREE

model no. CTI1517110 | [www.noma.com](http://www.noma.com)

**IMPORTANT:** Please read this manual carefully before assembly and save it for reference.

### INSTRUCTION MANUAL

Thank you for purchasing this lighted tree. This tree assembles in minutes and is decorated with energy-saving LED light sets.

This tree is pre-strung with 200 lights.

#### CARTON INCLUDES:

- 2 pre-lighted tree sections (A - Top Section, B - Bottom Section)
- 1 sturdy pot
- 1 power cord with adaptor

#### **CAUTION!** ALWAYS UNPLUG YOUR TREE FROM ITS POWER SOURCE BEFORE ASSEMBLING OR DISASSEMBLING.


Please locate the plug and socket first before assembled each sections of the tree.

#### ASSEMBLY:

Note: Before you start to assemble your tree, please choose a location near an electrical wall outlet. Place the tree base on a level surface.

Please remove protective covers from the base of the pole from each section.

1. Carefully insert bottom section (B) of tree into tree base (see Fig. 1).

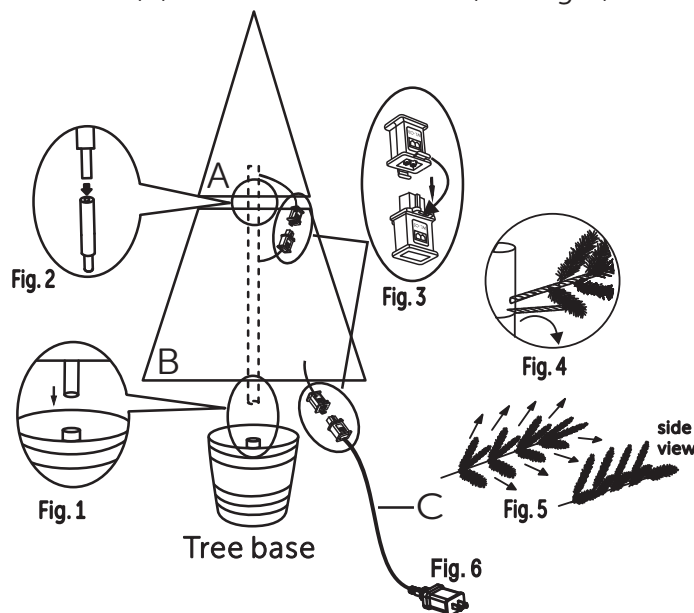

2. Insert the top section (A) of the tree into the bottom section (B) (see Fig. 2).

3. Insert the plug from the base of section (A) into the connected from the top of section (B). From section (B)'s base connect to the power cord, then clip the connectors tightly as shown in the magnified drawing in Fig. 3.

4. Allow the branches to fall into place or gently pull branches up and out. When adjusting branches be sure that all wires are free of branch hinges (See Fig. 4).

5. Shape the branches. Starting with tips closest to the pole, shape one tip to the right, one to the left and one along the centre of the main stem. Repeat pattern for each branch (see Fig. 5).

6. Plug cord into electric outlet.

## TROUBLESHOOTING:

If any lights do not work on your pre-lighted tree, please check the following:

1. If entire tree or a section of the tree does not light:
  - a) Check to be sure that all light set plugs are securely connected.
  - b) Check that there is power at the electrical outlet.
2. PLEASE ALWAYS UNPLUG YOUR TREE FIRST BEFORE DO THE FOLLOWING STEPS.
  - a) Find the connector of unlit section which is near the pole.
  - b) Pull out the connector, and re-insert it.
  - c) You may hear a clicking sound if the connector is well inserted.
3. If you are still experiencing problems with the tree, please call 1-866-827-4985 for customer service.

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the following:

- a) **READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**
- b) Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- c) This seasonal-use product is not intended for permanent installation or use.
- d) Do not mount or place near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
- e) Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- f) Do not let bulbs rest on the supply cord or on any wire.
- g) Unplug the product when leaving the house, when retiring for the night, or if leaving unattended.
- h) This is an electrical product—not a toy! To avoid risk of fire, burns, personal injury and electric shock, it should not be played with or placed where small children can reach it.
- i) Do not use this product for other than its intended use.
- j) Do not hang ornaments or other objects from cord, wire, or light string.
- k) Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- l) Do not cover the product with cloth, paper, or any material not part of the product when in use.
- m) Read and follow all instructions that are on the product or provided with the product.
- n) 120 V. For indoor use only.

## SAVE THESE INSTRUCTIONS

### Use and care instructions

- a) Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the bulb holders or enclosures, loose connections, or exposed copper wire.
- b) When storing the product, carefully remove the product from wherever it is placed to avoid any undue strain or stress on the product conductors, connections, and wires.

## CAUTION

1. Risk of fire. This product does not contain bulb shunts which allow the product to operate if one bulb burns out.
2. The product consists of non-replaceable LED bulbs. To reduce the risk of fire or electric shock, do not attempt to replace bulbs or modify string.

## Federal Communications Commission (FCC) Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ADAPTOR MODEL NO. TS-12W12V

STORAGE: Disassembled tree can be stored in its original box. Store tree in a cool, dry place where the temperature does not exceed 100°F (38°C).

### **Limited 3-year Warranty**

This NOMA product carries a three (3) year warranty against defects in workmanship and materials. NOMA agrees to replace a defective product, within the stated warranty period, when returned to the place of purchase with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

### **Made In China**

Imported by

**CTC Triangle (USA) LLC, 14000 24th Street E, Sumner, WA, USA 98390**