

## 7½' INDOOR PIEDMONT FIR TREE

model no. CTI1517108 | [www.noma.com](http://www.noma.com)

**IMPORTANT:** Please read this manual carefully before assembly and save it for reference.

### INSTRUCTION MANUAL

Thank you for purchasing this lighted tree. This tree assembles in minutes and is decorated with energy-saving LED light sets. For your convenience, it is equipped with an on/off foot pedal switch for easy illumination.

This tree is pre-strung with 1000 white LED lights:

#### CARTON INCLUDES:

- 3 pre-lighted tree sections (A - Top, B - Middle, C - Bottom)
- 1 tree base
- 1 screw for tree base
- 1 on/off foot pedal switch with adaptor
- 1 adaptor
- 2 bolts


**CAUTION! ALWAYS UNPLUG YOUR TREE FROM ITS POWER SOURCE BEFORE ASSEMBLING OR DISASSEMBLING.**

#### ASSEMBLY:

Note: Before you start to assemble your tree, please choose a location near an electrical wall outlet. Place the tree stand on a level surface.

Please remove protective covers from the base of the pole from each section.

1. Unfold the tree base to a 90 degree angle.
2. Carefully insert bottom section (C) of tree into tree base and tighten the screw (see Fig. 1).

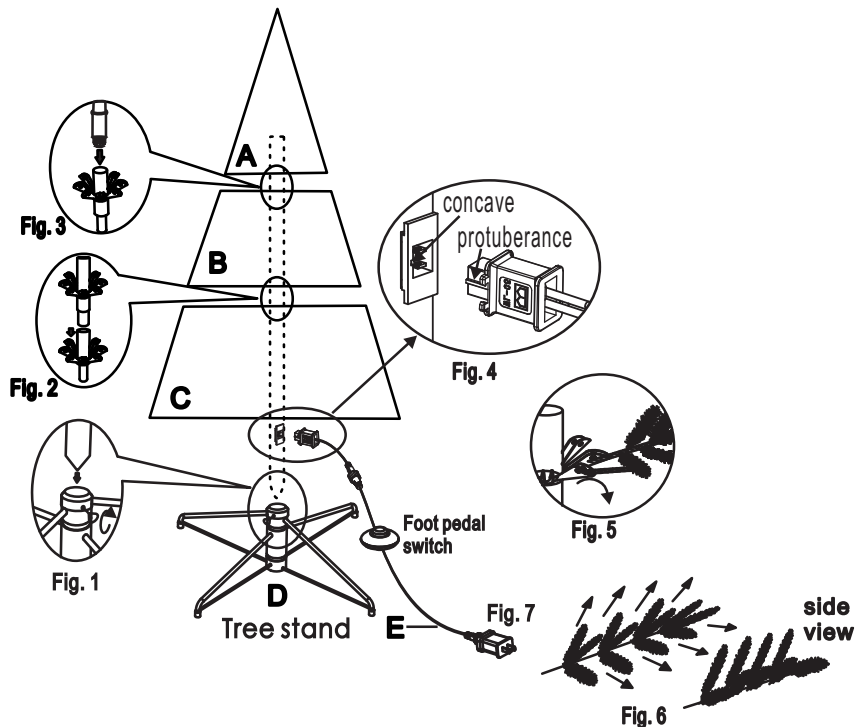

3. Insert the middle section (B) of the tree into the bottom section (C) (see Fig. 2).
4. Insert the top section (A) into the middle section (B) (see Fig. 3).
5. Insert end connector of the provided on/off foot pedal switch into the connector fixed on the pole of tree bottom (C) in correct direction. Always match the protuberance of the end connector of power cord to the concave of the connector found on the bottom section (C) according to the magnified drawing in Fig. 4.
6. Allow the branches to fall into place or gently pull branches up and out. When adjusting branches be sure that all wires are free of branch hinges (see Fig. 5).
7. Shape the branches. Starting with tips closest to the pole, shape one tip to the right, one to the left and one along the centre of the main stem. Repeat pattern for each branch (see Fig. 6).
8. Plug the adaptor into electric outlet (see Fig. 7). Please note this tree comes with an on/off foot pedal switch for easy illumination.

## TROUBLESHOOTING:


If any lights do not work on your pre-lighted tree, please check the following:

1. If entire tree or a section of the tree does not light:
  - a) Make sure the adaptor plug is securely inserted into a working electrical outlet.
  - b) Make sure the end connector of foot pedal switch is well connected to the bottom section (C).
  - c) Check that each section of the tree is well connected.
2. PLEASE ALWAYS UNPLUG YOUR TREE FIRST BEFORE DO THE FOLLOWING STEPS.
  - a) Find the connector of unlit section which is near the pole.
  - b) Pull out the connector, and re-insert it.
  - c) You may hear a clicking sound if the connector is well inserted.
3. If you are still experiencing problems with the tree, please call 1-866-827-4985 for customer service.

### Loose branches

If a branch of the tree falls off, follow the steps below to reinstall it with a spare bolt.

1. Place the branch into the slot of the bracket.
2. Insert a spare bolt through the hole and use diagonal pliers (not included) to crimp the bolt. (See Fig. A)

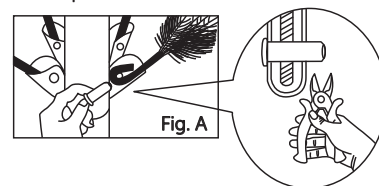

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the following:

### a) READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

- b) Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- c) This seasonal product is not intended for permanent installation or use.
- d) Do not mount or place near gas or electric heaters, fireplace, candles, or other similar sources of heat.
- e) Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- f) Do not let bulbs rest on the supply cord or on any wire.
- g) Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- h) This is an electric product—not a toy! To avoid risk of fire, burns, personal injury, and electric shock, it should not be played with or placed where small children can reach it.
  - i) Do not use this product for anything other than its intended use.
  - j) Do not hang ornaments or other objects from cord, wire, or light string.
  - k) Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
  - l) Do not cover the product with cloth, paper, or any material not part of the product when in use.
- m) Read and follow all instructions that are on the product or provided with the product.

### n) SAVE THESE INSTRUCTIONS.

### Use and care instructions

- a) Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the bulb holders or enclosures, loose connections, or exposed copper wire.
- b) When storing the product, carefully remove the product from wherever it is placed to avoid any undue strain or stress on the product conductors, connections, and wires.

## CAUTION

1. Risk of fire. This product does not contain bulb shunts which allow the product to operate if one bulb burns out.
2. The product consists of non-replaceable LED bulbs. To reduce the risk of fire or electric shock, do not attempt to replace bulbs or modify string.

## Federal Communications Commission (FCC) Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ADAPTOR MODEL NO. TS-24WLF12V

STORAGE: Disassembled tree can be stored in its original box. Store tree in a cool, dry place where the temperature does not exceed 100°F (38°C).

### Limited 3-year Warranty

This NOMA product carries a three (3) year warranty against defects in workmanship and materials. NOMA agrees to replace a defective product, within the stated warranty period, when returned to the place of purchase with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

### Made In China

Imported by

**CTC Triangle (USA) LLC, 14000 24th Street E, Sumner, WA, USA 98390**