







User Manual





The Early Rider Explorers are a group of adventurers who love getting out on their Early Rider bikes.

They love to share their stories, tips and photos with one another online. They also get special discounts on Early Rider products!

IT'S EASY TO JOIN

- 1 REGISTER ONLINE earlyrider.com/explorers
- 2 ENJOY THE BENEFITS
 Discounts, ideas and freebies!

Thank you...

Thank you for choosing one of our awesome little bikes! They are brought to you by a small team of passionate life-long bikers based in Henley-on-Thames, UK.

We simply love what we do and we hope that shows in the beautiful Bonsai bike you have selected. If you have any questions simply speak to your retailer or drop us a line at support@earlyrider.com

So, you're ready for your first adventure... why not hashtag us on Instagram and share it with the world? #earlyrider @earlyriderbikes

Building your Early Rider Bonsai

Your Early Rider has been part assembled to make life a little easier.

These instructions are intended to guide a grown-up through the final assembly as well as the adjustment of the bike to fit your child correctly throughout their adventures.

! NEED HELP?

If you are unsure of anything just speak to your retailer or drop us a line at support@earlyrider.com

WHAT'S IN THE BOX

- A ASSEMBLED FRAMESET, SADDLE & REAR WHEEL
- B HANDLEBAR WITH GRIPS
- C FRONT WHEEL
- D LONG HEX-HEAD WHEEL BOLT (X2)

TOOLS PROVIDED ALLEN KEY (X2)



Fit the handlebars

- Using the allen key provided, remove the hex head bolts securing the front plate of the stem.
- 2 Place the handlebar on the front of the stem and reattach the front plate to secure.
- Be sure that the stem clamps the centre of the handlebars length and that the bolts are tightened evenly (so the gaps are the same top and bottom).







Fit the front wheel

- Place the wheel axle within the fork drop outs.
- Using the long bolts provided, locate the axle hole through the fork drop out and loosely fit each side of the wheel.
- Once in place, tighten each side using the allen key provided.



Fit the saddle

- 1 Loosen the hex head bolt on the seat post clamp (with the allen key provided) to allow movement of the saddle.
- Adjust the height so that your child's feet rest comfortably on the ground, flat and with a slight bend of the knee.







SAFETY NOTICES



- · Adult assembly only.
- Remove all packaging before giving to your child.
- Always wear suitable helmet & appropriate clothing when riding your Early Rider.
- Children should be under adult supervision at all times.
- Do not use near swimming pools, bodies of water, near steps, on steep hills, on stairways nor on the open road.
- Check your Early Rider regularly to ensure all parts are secure and no damage has been sustained. If broken in any way discontinue use.
 FAILURE TO DO SO MAY RESULT IN INJURY.
- · Please retain these instructions for future use.

MAINTENANCE & CARE

- Your Early Rider is fitted with pill bottle safety valve caps. To remove, press down and turn in anti-clockwise direction.
- Never leave your Early Rider outside for prolonged periods of time.
- After riding, wipe away any water or mud with a clean cloth.
- Store away your Early Rider in a dry place when not in use.
- Periodically check wheels and tyres for damage.
- Makes sure tyres are kept at the correct pressure (please see tyre side for details).
- Applying a periodic coat of beeswax will further protect and prolong the life of your Early Rider.







INFO@EARLYRIDER.COM +44 (0) 1264 356 008 WWW.EARLYRIDER.COM @EARLYRIDERBIKES HENLEY*ON*THAMES, UK