

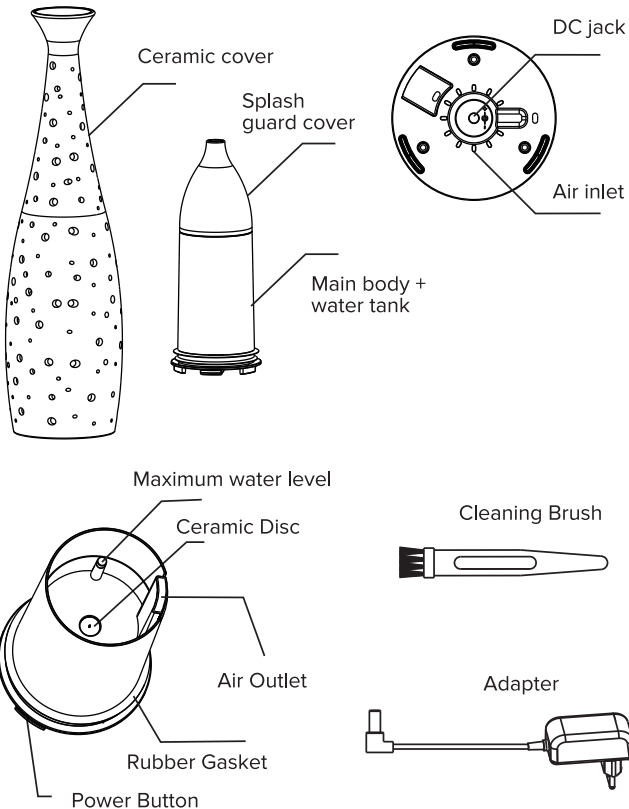 
LUMIÈRE

Ultrasonic Aroma Diffuser

 
Diffuseur à ultrasons Aroma

 



PARTS

 


 
OPERATING INSTRUCTIONS

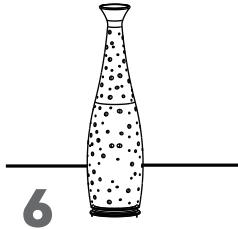 
- 

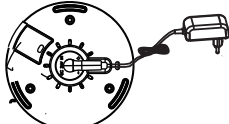 
1 Carefully lift and remove ceramic cover
- 


2 Remove the splash guard cover
- 

3 Fill water tank with approximately 110ml tap or filtered water (do not exceed the maximum water level line)
- 

4 Add 2-3 drops of essential oil to water
- 

5 Replace the splash guard and ceramic covers.
- 

6 Place the diffuser on a firm, flat, level surface.
- 

7 Connect the adapter to the diffuser and plug into an electric outlet.
- 

8 Press the power button once for continuous misting, a second time for intermittent misting (15 seconds on, 15 seconds off), and a third time to turn the diffuser off

SPECIFICATIONS

Model #517189

Size: 110 x 110 x 400mm

Water capacity: 110ml

Material: Ceramic, ABS, PP

Power/Voltage: 12W, 24V DC

Touch Button

Press once Continuous mist, LED light on

2nd time Intermittent mist, LED light on

3rd time OFF

CLEANING + MAINTENANCE

1. While the diffuser is OFF, disconnect the adapter from the unit and unplug from the electrical outlet.
2. Remove the ceramic and splash guard covers.
3. Empty water.
4. Use a cotton swab or soft cloth to wipe the unit

Note: Do not use any harsh chemicals to clean unit. Avoid dripping any essential oils or chemicals on ceramic cover as this may cause discolouration.

LUMIÈRE

Ultrasonic Aroma Diffuser

Diffuseur à ultrasons Aroma



CAUTION

1. Keep out of reach of children.
2. Only use the adapter supplied with the unit.
3. Always unplug the adapter when filling, cleaning or moving the unit.
4. Place diffuser on a firm, flat, level surface.
5. To avoid fire hazards, never wrap the adapter with cloth or paper, and never pull the cord under rugs or near heat registers.
6. Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions, or if it has been dropped or damaged in any manner.
7. Do not attempt to repair or adjust any electrical or mechanical functions on this unit. The unit contains no user serviceable parts. All servicing should be performed by qualified personnel only. Contact your local dealer.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not turn on	-Power supply not connected	Plug adapter into electrical outlet
No mist, or not enough mist	-Not enough water -Water exceeds max. water level -Outlets blocked by dust/debris	-Refill water tank -Pour out excess water -Clean unit
Unit leaking water	-Splash guard cover not attached properly	Ensure splash guard cover attached securely to main body

WARRANTY

ONE YEAR CONSUMER WARRANTY

RELAXUS PRODUCTS LTD. warrants this product to be free from defects and faults for 365 calendar days from the date of purchase. This warranty does not cover (i) damage caused by improper or incorrect installation or use; (ii) breakage or damage from mishandling or other inadvertence; and (iii) use of this product for purposes for which it was not intended.

RELAXUS PRODUCTS LTD. retains discretion to repair, supply replacement parts or supply a new product of the same or substantially similar kind and quality during the period of this warranty. Proof of purchase is required for warranty purposes. This warranty is not transferable.

